

致	EPSON 愛用者
文件來源	EPSON 客服中心
主題敘述	標籤機 EPSON LW-600P-如何設定 QR Code 列印？ (Windows7)


適用機型：標籤機

(以 LW-600P 為例 · Windows 7 64bits)

內容說明：說明電腦搭配 Label Editor 軟體設定 QR Code 的操作方式。

<步驟一>

開啟 Label Editor 軟體，點選上方的「QR Code」選項。

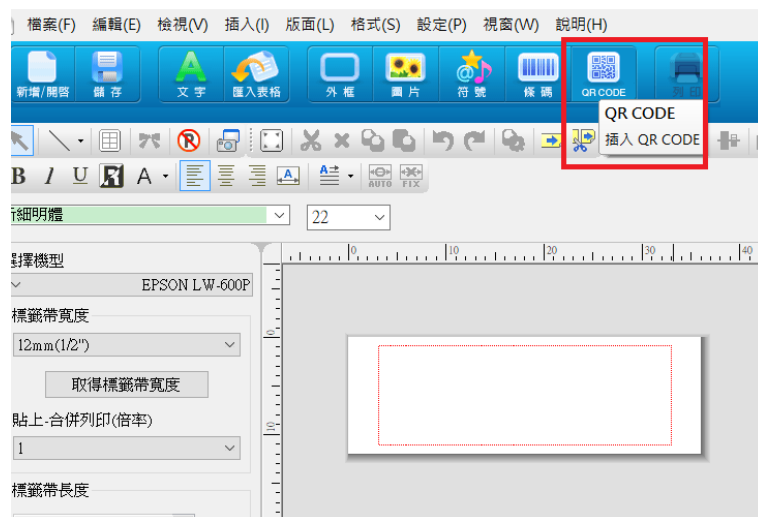

<步驟二>

在[設定]頁籤的條碼種類(B)選擇「QR CODE」，並在條碼內容(C)輸入內容後，按下確定。


註：可輸入的僅有：數字、大寫英文字母、以及“.”、“(空格)”、“\$”、“/”、“+”、“-”、“%”。最多可輸入 128 個字。



The image shows a dialog box titled "條碼" (Barcode) with a close button (X) in the top right corner. It has three tabs: "設定" (Settings), "連號" (Serial), and "顯示" (Display). The "設定" tab is active. Under "條碼種類(B)" (Barcode Type), a list box contains "NW-7(CodaBar)", "ITF", "GS1-128", "GS1 DataBar", and "QR CODE" (which is selected). To the right, the "Model(M)" section has two radio buttons: "Model 1" (unselected) and "Model 2" (selected). Below this is a text area for "條碼內容(C)" (Barcode Content) containing the text "CALLCENTER". At the bottom left, there are two dropdown menus: "錯誤修正層級(A)" (Error Correction Level) set to "7%" and "符號大小(Z)" (Symbol Size) set to "Small". At the bottom right, there is a checkbox for "連號" (Serial) which is unchecked. At the very bottom, there are three buttons: "確定" (OK), "取消" (Cancel), and "說明" (Help).

<步驟三>

在提醒視窗按「確定」

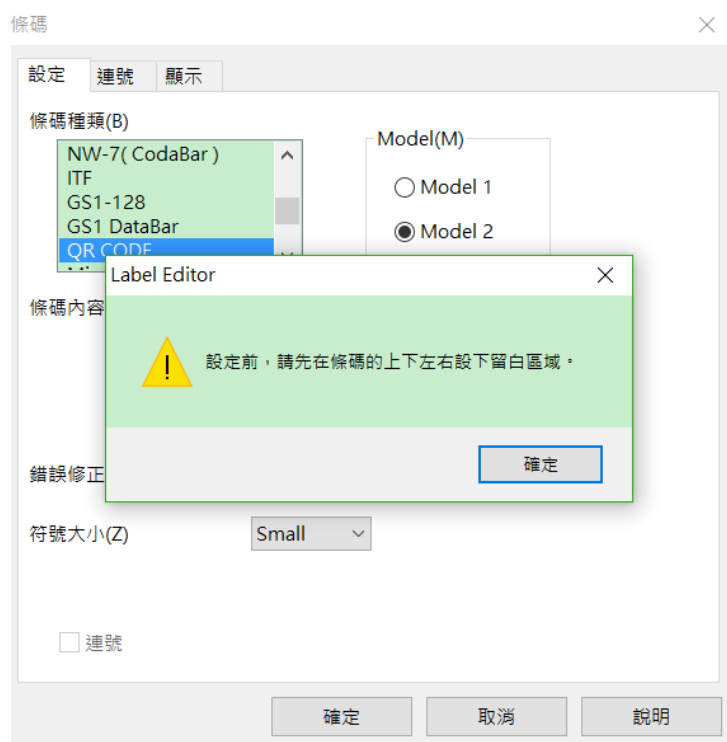

<步驟四>

在編輯畫面的紅框範圍內按一下，可插入 QR CODE 條碼，再點選「列印」即可印出。

註：QR CODE 條碼若超出紅框範圍會無法完整印出，會影響條碼判讀。可判讀性取決於列印的設備與條碼機的性能。

