


致	Epson 愛用者
文件來源	Epson 客服中心
主題敘述	L3210 列印圖片有細白線如何排除?
適用機型	L3210, L3216, L3550, L3556

內文說明：列印圖片有細白線如何排除?


範例機型&作業系統：L3210& Windows 11 64 位元

**步驟 1：**將 A4 普通紙裝入後方進紙槽，將紙張邊緣定位器滑到紙張的邊緣，闔上進紙槽護蓋。

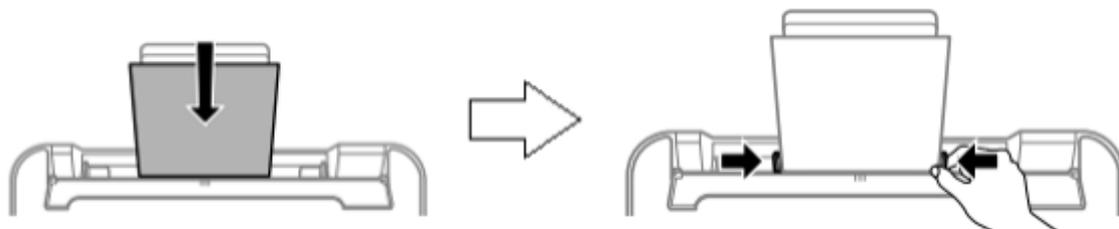

**步驟 2：**列印噴嘴檢查圖案。

- (1) 請先按下  電源鍵，關閉印表機電源。
- (2) 按住  鍵不放，同時按下  電源鍵開啟印表機電源，可列印噴嘴檢查圖案。
- (3) 檢查噴嘴檢查圖案。如果圖案形線條都完整無缺陷，繼續步驟 3。

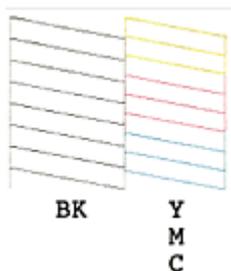


**步驟 3：**點選 [搜尋控制台]，再點選 [控制台]，並進入 [檢視裝置和印表機] 功能。



**步驟 4：**點選 [印表機與掃描器]，並點選您的機型，然後選擇 [列印喜好設定] 功能。

A screenshot of the Windows Settings application, specifically the 'Bluetooth and devices' > 'Printers and scanners' > 'EPSON L3210 Series' page. The page shows the printer's name, status ('閒置'), and a '上次使用時間: 2024年5月' (Last used: May 2024). There are buttons for '設定成預設值' (Set as default) and '移除' (Remove). Below this, there is a section titled '印表機設定' (Printer settings) with a list of options: '開啟列印佇列' (Open print queue), '列印測試頁' (Print test page), '執行疑難排解' (Run troubleshooter), '印表機內容' (Printer content), '列印喜好設定' (Print preferences) with sub-options for direction, page order, pages per sheet, margins, and paper source, '硬體內容' (Hardware content), and '更多裝置和印表機設定' (More devices and printer settings). Each option has an external link icon. At the bottom left, there is a '取得協助' (Get help) link.

步驟 5：從 [品質選項] 下拉清單中，可點選 [標準鮮豔] 或 [高]，即可排除細白線的狀況。

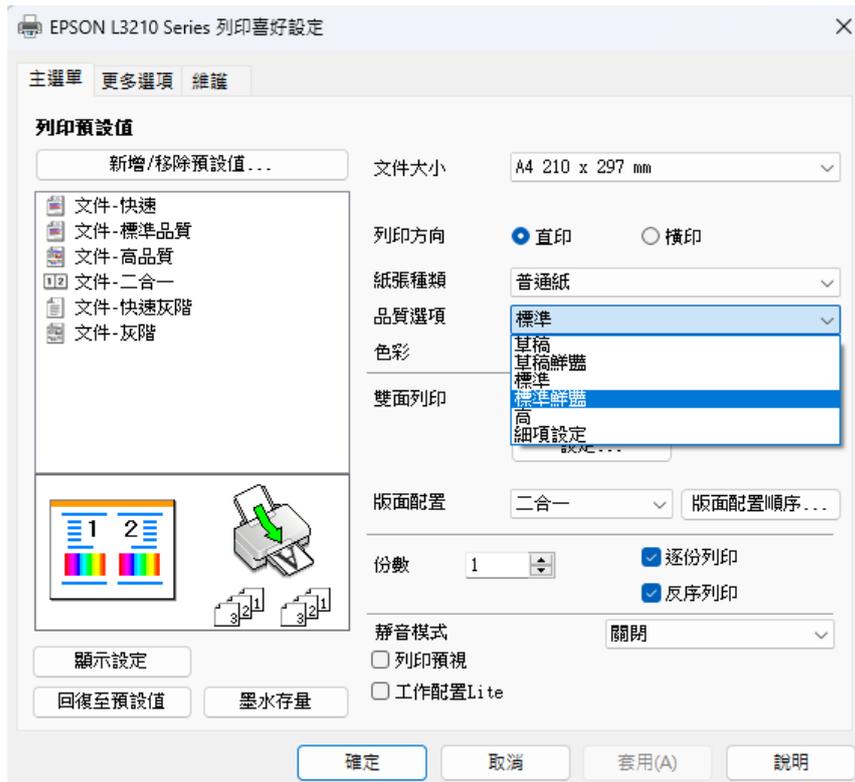

---End---