致	Epson 愛用者
文件來源	Epson 客服中心
主題敘述	如何使用 Epson Photo+ 在空白版面插入圖片以及查看圖片資訊?
適用機型	L8050, L18050, L11050

**內文說明**:如何使用 Epson Photo+ 在空白版面插入圖片以及查看圖片資訊 (大小、位置) 範例機型&作業系統:L8050 & Windows 11 64 位元

步驟1:開啟 Epson Photo+軟體,點選 [任意版面配置]。



## 步驟2:點選您要列印的[紙張大小],按 [確定]。

🔜 紙張設定		×
紙張大小	方向	
○ 9 x 13 cm (3.5 x 5 in)	音向	楷向
○ 13 x 18 cm (5 x 7 in)		
○ 100 x 148 mm		
○ 10 x 15 cm (4 x 6 in)		
○ A5 148 x 210 mm		
● A4 210 x 297 mm		
○ 20 x 25 cm (8 x 10 in)		
○ 16:9 寛 (4 x 7.11 in)		
○ A5 (24 ₹L)		
○ Letter 8.5 x 11 in (216 x 279 mm)		
○ Legal 8.5 x 14 in (216 x 356 mm)		
~		
	with a minute	The SNK
	皚定	- 現以7月

## 步驟3:點選[相片],選擇您想要插入的圖片。



**步驟4**:將滑鼠移到任何一個控制點(四個角),然後按住滑鼠左鍵拖動來放大或縮小圖片, [詳細編輯]的地方可以調整數值及查看詳細編輯資訊。



----End----