

TO：EPSON 愛用者

FROM：EPSON 客服中心


主題敘述：iPrint 如何設定網頁的列印範圍/指定頁數

※支援 Epson Connect --iPrint 機型清單

WF-2631	L565	AcuLaser CX11F
WF-2651	L550	AcuLaser M2010DN
WF-3621	L555	AcuLaser M2310DN
WF-2541	L355	AcuLaser M2410DN
WF-2531	L365	AcuLaser M4000N
WF-2521	L455	AcuLaser M8000N
WF-7111	M200	AcuLaser MX21DF
WF-7611	Stylus TX430W	AcuLaser C2800N
XP-701	ME Office 940FW	AcuLaser C3800N
XP-721	Stylus TX420W	AcuLaser C3800DN
XP-202	Stylus Office TX510FN	AcuLaser C42000DN
XP-302	Stylus TX550w	AcuLaser C9200N
XP-402	Stylus Office TX600FW	AcuLaser C9300
XP-225	Stylus Office TX610FW	EPL-6200
XP-422	Stylus Photo TX700W	EPL-N2500
WP-4531	Stylus Photo TX800FW	EPL-N3000
WP-4091	Stylus Photo TX820FWD	
WF-5621	ME Office 900WD	
WF-5191	ME Office 960FWD	
WF-7511	Stylus Photo R2000	
WF-7521	Stylus Photo R3000	

步驟 1、開啟智慧型手機及平板電腦 APP “Epson iPrint”，點選「網頁」功能。



步驟 2、輸入網址後，於要列印的網頁上點選「列印」鍵，再點選「 設定」鍵。



步驟 3、點選「列印範圍」，將「列印全部」功能：關閉(預設值為開啟)。



步驟 4、「列印全部」關閉後，「起始頁」及「最末頁」透過「+」、「-」符號選擇列印範圍。

※此範例是設定「起始頁」：2、「最末頁」：2，因此僅會印出第二頁。

