TO: EPSON 愛用者

FROM: EPSON 客服中心

主題敘述:原廠連續供墨印表機 M200 在 WINDOWS 8/8.1 系統下,如何提高列印 速度

步驟1、進入開機畫面後,請點選「桌面」方塊磚切換至桌面。



步驟 2、再點選左下角「視窗」功能後同時按滑鼠右鍵,再點選「控制台」功能, 並進入「裝置和印表機」功能。

資 源	回收筒 L210_WW Epson Easy Photo Print	
	2 程式和功能(F) 行動中心(B)	
Ve	電源選項(O) 事件檢視器(V)	
	糸統(Υ) 裝置管理員(M)	
	網路連線(W) 磁碟管理(K)	
	====================================	
	命令提示字元 (系統管理員)(A)	
	工作管理員(T)	
	控制台(P)	
Ru	檔案總管(E)	
	搜尋(S)	
	執行(R)	
qq	關機或登出(U) 〉	
	卓面(D)	
		o 🔊

步驟3、選擇驅動程式例:M200,並按下右鍵進入「列印喜好設定」功能。

	音效 🕨 裝置和印表機 🕨				
檔案(F) 編輯(E) 檢視(V) 工具(T EPSON Easy Photo Print ▼ @ 列) 說明(H) 印				
新増裝置 新増印表機 查看	列印工作 列印伺服器內容 移降	余裝置			
印表機和傳真 (94)					
EPSON AL-C1700	🖶 EPSON L355 Series	EPSON LQ-2180C ES	SC/P2 🝏 I	EPSON TX320 WorkForce320 Se	
EPSON AL-C1750N	🖶 EPSON L360 Series	EPSON LW-600P	🤹 i	SEPSON TX510FN Series	
EPSON AL-C1750W	🖶 EPSON L365 Series	🖶 EPSON LW-600P (複	件1) 📫	🗯 EPSON WF-2530 Series	
EPSON AL-CX17NF-00000	📣 EPSON L455 Series	🖶 EPSON M200 Series		EPSON WE-2630 Series	
EPSON AL-CX37 P6	🟚 EPSON L550 Series	EPSON NX130 T	查看列印工作(E)) Series	
EPSON AL-M200DN PCL 6	EPSON L605 Series	EPSON SC-P400) Series	
🖶 EPSON AL-M200DN PS3	PSON L655 Series	📣 EPSON SC-P800	列印喜好設定(G)	. Series	
EPSON AL-M300 Advanced	🚓 EPSON L800 Series	🔜 Epson Stylus CX3	印衣(园内音(P)) Series	
🖶 EPSON AL-M1200 Advanced	Series EPSON L805 Series	层 EPSON Stylus CX	建立捷徑(S)	L Series	
EPSON AL-M1400	🖶 EPSON L1300 Series	📰 Epson Stylus CX5	XIII II II (0)	L Series (FAX)	
🖼 EPSON AL-M2010 Advanced	EPSON L1800 Series	🗢 EPSON Stylus Pho	疑難排解(T)	.03 Series	
🖼 EPSON DLQ-3500C ESC/P2	EPSON LASER EPL-N2500	📰 Epson Stylus Pho	移除裝置(V)	203 206 Series	
🖶 EPSON EPL-5900L Advanced	层 EPSON LQ-300+ /II ESC/P 2	🚍 Epson Stylus Pho	内容(R)		
🖼 Epson EPL-6200L	EPSON LQ-300+II ESC/P2	🗯 EPSON Stylus Photo	N2000 001	eries	
层 EPSON EPL-6200L Advanced	EPSON LQ-310 ESC/P2	🖶 EPSON Stylus Pro 96	00 👝 🛛	EPSON3745FA (XP-700 Series)	

步驟4、選擇「維護」。

新增/移际旗說值	文件大小	A4 210 x 297	mm 🔻		
"件-快速		2011	A4 210 x 297 mm		
(件-標準品質 (件-高品質	列印方向	 直印 横印 			
5件-二合一	紙張種類	plain papers -			
	品質選項	標準			
	版面配置	鋼閉	▼ 排列方式		
	份數 1	★ 逐份列印	〔33 〔22 〔11 ☑ 反序列印		
	■ 列印預視 ■ 工作配署Lite		🕅 靜音棋式		
	hx 山山に直 份數 1 同初にの変現	991月7日 一一 逐份列印	▼ 排門切 33 22 ▼ 反序列印		

步驟 5、選擇「高速拷貝/永遠以 RAW 資料格式佇列/整頁解譯模式/當作點陣圖 列印」。

I階設定 設定 □ 高速拷貝 □ 開気 TOTO 10 表機監控程式3							
一分隔頁						L	
 示遠以 整頁解 當作點 不列印 	RAW資料格式作 譯模式 陣圖列印 空白頁	宁列.					
 更改標 改善網 	準解析度 紋圖案					品資訊	
□永遠使	用驅動程式的	紙張來源設定	Ē			「「「「」」を必要す	F)
邊界設定				_			ч
Ŧ	- 300	0	300	0	(0.1公釐)	e-支援	
左	- 300		300	0	(0.1公釐)	- 套用(A) [說明