TO: EPSON 愛用者

上傳資料

FROM: EPSON 客服中心

主題敘述:運動健康感測 RUNSENSE 系列產品如何透過 RUNSENSE VIEW 設定 天氣及溫度

適用機型:Epson RUNSENSE SF-810V、Epson RUNSENSE SF-710S、Epson RUNSENSE SF-310G

步驟1、當使用者上傳資料後,請點選其中一筆記錄。 ※此操作選擇「workout 25」記錄。

					總6運動
運動日期	時間	運動名稱	距離	平均配速	
2014/09/02 13:35:37	0:00'59"	workout 25	0.00 km	0'00" /km	<b>[] [</b> 🔂 Ф <sup>3</sup>
2014/08/27 19:58:08	0:10'21"	workout 24	0.00 km	0'00" <mark>/</mark> km	n
2014/08/27 18:03:14	0:00'05"	workout 23	0.00 km	0'00" /km	<b>1</b>
2014/08/25 17:38:43	0:00'02"	workout 22	0.00 km	0'00" /km	<u>ு</u> 🗖 ൽ дэ
2014/08/25 12:03:58	0:00'02"	workout 21	0.00 km	0'00" /km	n
2014/08/25 11:26:17	0:00'04"	workout 20	0.00 km	0'00" /km	<b>1</b>

步驟2、點選該筆記錄後方「鉛筆」圖案。

	2014/09/02	< 🖬 🔽
workout 25		<b>⊕∕</b> m ≒ L %



## 步驟3、出現以下畫面後,點選「▼」,就可以設定天氣了。

