TO:EPSON 愛用者

FROM: EPSON 客服中心

主題敘述:雷射印表機 AcuLaser M8000N 如何開啟雙面列印功能

作業系統:Windows7



步驟 2、點選 EPSON AL-M8000 印表機圖示後,再按右鍵選擇『印表機內容』。

l案(F) 編輯(E) 檢視(V) 工具(T) 說明(H PSON Easy Photo Print ▼)					
新增裝置 新增印表機 查看列印工作	列印伺服器內容 移除	長置			E	
印表機和傳真 (147)						
m 105b3_ann 上的 EPSON WF-2630 Series	EPSON AL-CX17NF		BPSON AL-M	1×14NF-00001	🚓 EPSON L220 Series	EPSON
AL-C9200-461755 曾 EPSON AL-CX17NF (複		† 1)	EPSON AL-MX14NF-00001FAX		🖶 EPSON L350 Series	EPSON
AL-CX37-CC2024 P6			EPSON AL-MX300 Advanced		🐟 EPSON L355 Series	💰 EPSON
FPSON AL-C300DN Advanced EPSON AL-CX29 PCL 6			EPSON B-518DN		🖶 EPSON L365 Series	📥 EPSON I
EPSON AL-C300N Advanced EPSON AL-M200DN PCL 6			EPSON Color-Laser Series2		🚓 EPSON L365 Series (複件 2)	EPSON I
🚍 Epson AL-C1100	EPSON AL-M200DW PCL 6		EPSON DLQ-3500C ESC/P2		📥 EPSON L385 Series	EPSON I
I Epson AL-C1100 (複件 1)	EPSON AL-M1400		EPSON EPL-5900L Advanced		📥 EPSON L455 Series	EPSON
EPSON AL-C1700 EPSON AL-M2010 Adv		inced (複件 1)	Epson EPL-6200		📥 EPSON L455 Series (複件 1)	EPSON
EPSON AL-C1750W	EPSON AL-M2310 Adva	inced	Epson EPL-6200L		📣 EPSON L485 Series	EPSON
EPSON AL-C2900 PCL 6	III EPSON AL-M7000 Adva	inced	開 EPSON EPL-6200L Advanced		🖶 EPSON L550 Series (複件 1)	EPSON
Epson AL-C4200 EPSON AL-M7100D		N Advanced	层 EPSON EPL-N2500 Advanced		Here and the series (複件 2) 合理 and the series (複件 2)	EPSON
EPSON AL-C4200 Advanced	EPSON AL-M8000	BERKON		- 200	the EPSON L550 Series (複件 3)	EPSON
🖬 Epson AL-C9100	TEPSON AL-M8200DI		eries		🖶 EPSON L565 Series	📰 Epson L
EPSON AL-C9200 Advanced	EPSON AL-MX14NF-	住新倪鹵開員	x(E) eries		🌨 EPSON L565 Series (複件 1)	EPSON
EPSON AL-CX11 Advanced 🖶 EPSON AL-MX14I		查看列印工作	F(E)	eries	動 EPSON L565 Series (複件 2)	EPSON
m		設定成預設的	5印表機(A)			
EPSON AL-M8000 Advance	nd 刑器: EPSONIAL-M800	列印喜好設定	E(G)			
	如 型號: EPSON AL-10800 類別: 印表機	印表機内容(P)			
	狀態: 0 份文件在佇列中	なかまの(の)				
		建立建位(5)				
		疑難排解(T)				
2	EPSON AL-CO29 PCL 6 INSIRE STRO EPION CORP	移除裝置(V)				
	EPSON AL-O(29 PCL 6 BIER: SEND EPSON CONF ERIE: AL-O(29	移陈装置(V)				

步驟 3、選擇『選購品設定』,再點選『設定』,出現視窗後將『雙面列印單元』 打勾,完成後按套用、確定。

LFSON A	-			l	1	300 Bitt D 3-0 cm	1	7
─般│共	用 辺	轉接埠	進階	色彩管理	安全性	選購品設定	字型替换	
印表 個動 更 印表 個動 更 回 手 較 128M 選購 準措 出紙 若 一 二 二 二 二 二 二 二 二 二 二 二 二 二	画新選購。 「新選購」 記憶體 B 深源 裝	簡易狀 品設定(品設定)	(<u>P</u>) (<u>P</u>) (<u>U</u>)	顯示	「開於錯誤」	的資訊等 定(I)		
本女 CF卡, 套表列。 印表機驅 暫存路(₩ 印 登錄(<u>0</u>) 動程式 至設定(E) [mjß	• (<u>D</u>)	. 使用]記錄(世)		-
				一种分		ि सिंग्स	春田(4)	台相
瞒品設定	Ē 46			確成		取消	套用(A)	說明 ? <mark>※</mark>
時品設定	三	豊(M)	128	確定	E	取消	套用(丛)	
購品設定 已安裝的 選購的進	5記憶離 1111年間	₿(M) S)	128	確定 確定 天 氏 低 町 町 3 氏 氏 町 里 3	E	取消	<u></u> 寮用(<u>A</u>)	〕 ② ×
時品設定 已安裝的 選購的進 選購出紙	5記憶創 証紙匣() 新槽(<u>I</u>)	豊(⊻) 窒)	128 建進進進 A4	確定 確定	E ()) MB 器	取消 (套 用(<u>▲</u>)	〕 ? ×
時品設定 日安裝的進 選購的進 選購出紙 ■ CF卡(✓ 雙面面	5記憶崩 基紙匣() 新槽(<u>I</u>) 列印單: 記憶體(豊(M) <u>S</u>) 元(<u>D</u>) (R)	128 建進進 A4	確定 確定 表 表 表 一 本 一 本 一 本 一 本 一 本 一 本 一 本 一 本 一 本 一 二 一 二 二 一 二 二 二 二 二 二 二 二 二 二 二 二 二	E () () () () () () () () () () () () ()		変用(▲)	 説明 ? ×

步驟 4、完成後請重新點選 EPSON AL-M8000 印表機圖示,按右鍵選擇 "列印喜好 設定"。

		-	and war	Aat A	all and a	- • • ×
●●● ◎ ◎ ◆ 控制台 ◆ 硬體和音效 ◆ 裝	置和印表機 🕨				▼ 49	搜尋裝置 🔎
檔案(F) 編輯(E) 檢視(V) 工具(T) 說明(H	ł)					
EPSON Easy Photo Print 👻 🌀 列印						t.
新埔裝置 新增印表機 查看列印工作	列印伺服器內容 移	除裝置			I	# • 🕐
印表機和傳真 (147)						
🛑 105b3_ann 上的 EPSON WF-2630 Series	EPSON AL-CX17NF		I EPSON AL-M	X14NF-00001	🚓 EPSON L220 Series	EPSON L65
AL-C9200-461755	EPSON AL-CX17NF (复件 1)	EPSON AL-M	X14NF-00001FAX	🖶 EPSON L350 Series	EPSON L65
AL-CX37-CC2024 P6	3 AL-CX37-CC2024 P6		EPSON AL-MX300 Advanced		🐟 EPSON L355 Series	💰 EPSON L80
DEPSON AL-C300DN Advanced		6	🖶 EPSON B-518DN		🖶 EPSON L365 Series	📥 EPSON L80
EPSON AL-C300N Advanced	EPSON AL-C300N Advanced EPSON AL-M200DN PCL 6		EPSON Color-Laser Series2		🚓 EPSON L365 Series (複件 2)	EPSON L13
🚍 Epson AL-C1100	EPSON AL-M200DW	PCL 6	FPSON DLQ-3500C ESC/P2		📥 EPSON L385 Series	🖶 EPSON L18
Image: Epson AL-C1100 (複件 1)	EPSON AL-M1400		🖶 EPSON EPL-5900L Advanced		📥 EPSON L455 Series	EPSON LAS
😂 EPSON AL-C1700	🖶 EPSON AL-M2010 Ac	lvanced (複件 1)	Epson EPL-6200		📥 EPSON L455 Series (複件 1)	EPSON LQ
EPSON AL-C1750W	EPSON AL-M2310 Ac	lvanced	层 Epson EPL-6200L		🚓 EPSON L485 Series	EPSON LQ
EPSON AL-C2900 PCL 6	I EPSON AL-M7000 Ac	lvanced	EPSON EPL-6	200L Advanced	🖶 EPSON L550 Series (複件 1)	🖶 EPSON LQ
🖼 Epson AL-C4200	EPSON AL-M7100DN	Advanced	EPSON EPL-	V2500 Advanced	Here and the series (複件 2)	EPSON LQ
🚍 EPSON AL-C4200 Advanced	EPSON AL-M8000 /	BERKON		~poo	勴 EPSON L550 Series (複件 3)	EPSON LQ
🖬 Epson AL-C9100	EPSON AL-M8200D	開設(0)		eries	🖶 EPSON L565 Series	Epson LQ-6
💭 EPSON AL-C9200 Advanced	EPSON AL-MX14NF-	江圳优回用眉	U(E)	eries	勴 EPSON L565 Series (複件 1)	EPSON LQ
🖶 EPSON AL-CX11 Advanced	EPSON AL-MX14NF-	查看列印工作	乍(E)	eries	🌰 EPSON L565 Series (複件 2)	EPSON LQ
< III		設定成預設的	内印表機(A)			•
EPSON AL-M8000 Advance	ed 型號 FPSON AI -M800	列印喜好設定	定(G)			
	· 類別: 印表機	類別: 印表機 印表機內容(P				
	狀態: 0 份文件在佇列中	建立 建氮 (0)				
		₩±±±±(3)				
		疑難排解(T)				
4	EPSON AL-CI29 PCL 6 IN SET. SERIO EPSON CORP STR. AL-CI29	移除裝置(V)				
	IEE: Epson Device Matac	內容(R)			e.	
				_		



步驟 5、將『雙面列印』勾選後『套用』即可使用雙面列印。

步驟6、如以上動作已有開啟,但是還不能列印雙面,請到印表機操作面板選單, 選擇到『設定選單』,再到『雙面列印』確認是否有『開啟』,如顯示『關閉』請 更改為『開啟』後再列印測試。

設定選單

項目	設定(粗體字為預設値)			
液晶面板的顯示語言	English 、 Français 、 Deutsch 、 Italiano 、 ESPAÑOL 、 SVENSKA 、 Dansk 、 Nederlands 、 SUOMI 、 Português 、 Norsk 、 СатаLÀ 、 Русский 中文 、繁體中文 · 한국머			
進入省電模式的時間設定	5 \ 15 \ 30 \ 60 \ 120 \ 180 \ 240 Min			
逾時設定	0,5至60至300,以1遞增			
紙張來源	自動、萬用進紙匣、下方進紙匣 1、下方進紙匣 2 ^{*1} 、下方進紙匣 3 ^{*1} 、下 方進紙匣 4 ^{*1}			
出紙來源*1	上方出紙槽、堆疊出紙器			
疊堆出紙 *1	+ 上方、無上方			
紙張來源優先權	Normal > Last			
手動進紙	關閉、第一頁、每頁			
列印份數	1至999			
^{2.} 雙面列印 ^{*1 *2}	3. 開啓 閉閉			
裝訂方式 *1 *2	長邊 、短邊			
首頁 ^{*1 *2}	正面、背面			
紙張種類	一般、厚紙、超厚紙、投影片			