


EPSON®
EXCEED YOUR VISION

Home Projector

EH-TW5820
EH-TW5700

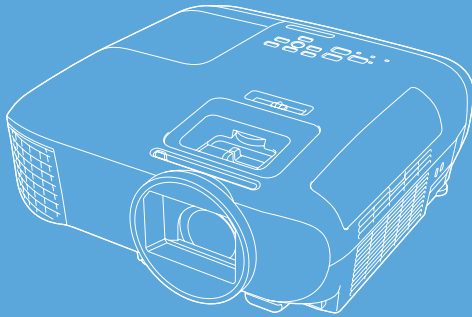





EN	Quick Start Guide	SK	Stručná příručka
DE	Kurzanleitung	RO	Ghid de pornire rapidă
FR	Guide de démarrage rapide	EL	Οδηγός γρήγορης εκκίνησης
IT	Guida di avvio rapido	TR	Hızlı Başlangıç Kılavuzu
ES	Guía de inicio rápido	SL	Priročnik za hitri zagon
PT	Guia de Referência Rápida	HR	Kratke upute
NL	Introductiehandleiding	RU	Руководство по быстрой установке
DA	Introduktion	UK	Коротка інструкція "Початок роботи"
FI	Pika-aloitusopas	KK	Қысқа іске қосу нұсқаулығы
NO	Hurtigveiledning	KO	빠른 시작 가이드
SV	Snabbstartsguide	AR	دليل البداية السريعة
CS	Úvodní příručka	ID	Panduan Ringkas
HU	Bevezetés	ZHS	設定手冊
PL	Przewodnik szybkiego startu	ZHT	設定說明書





HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE









1

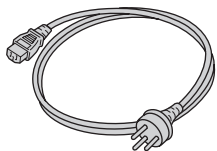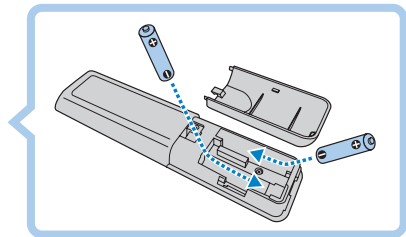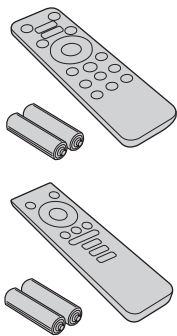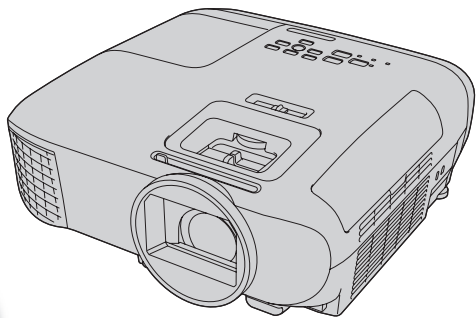

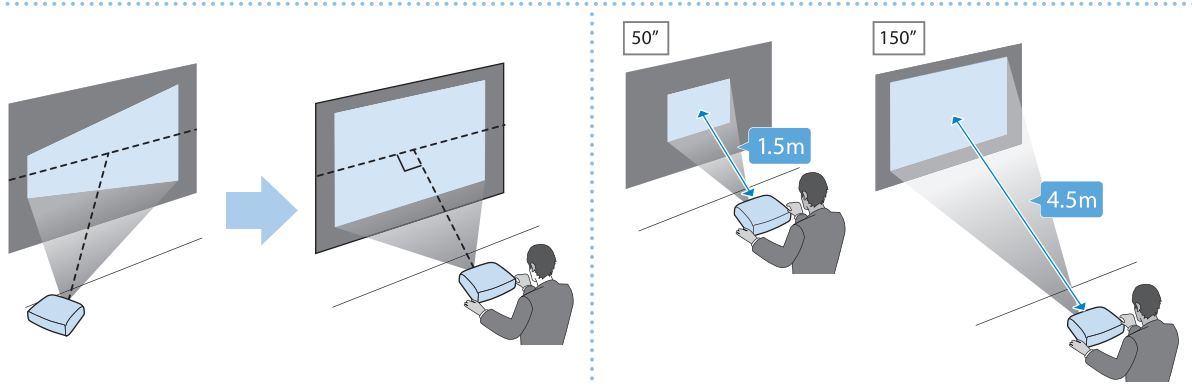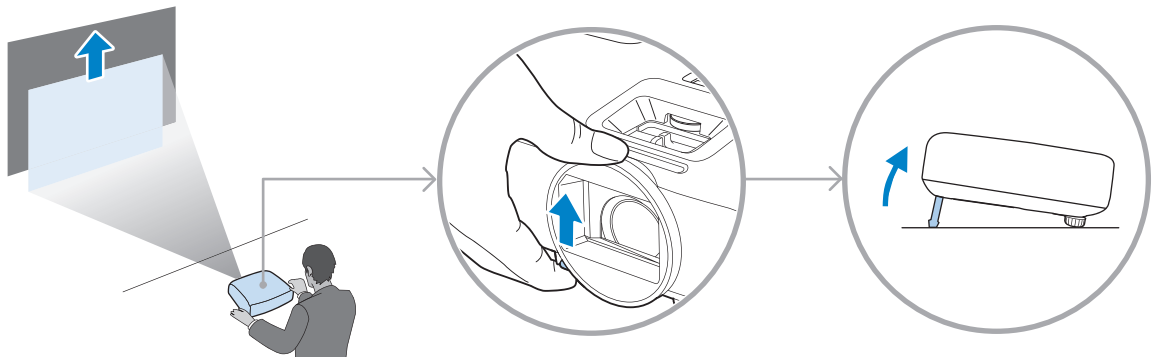




3

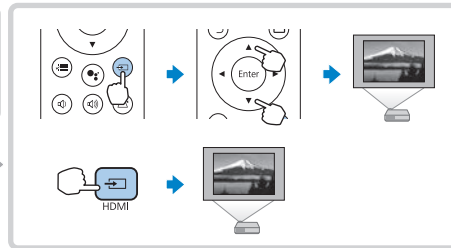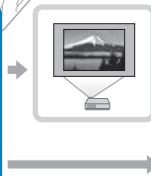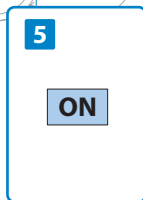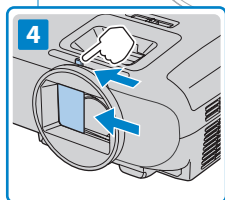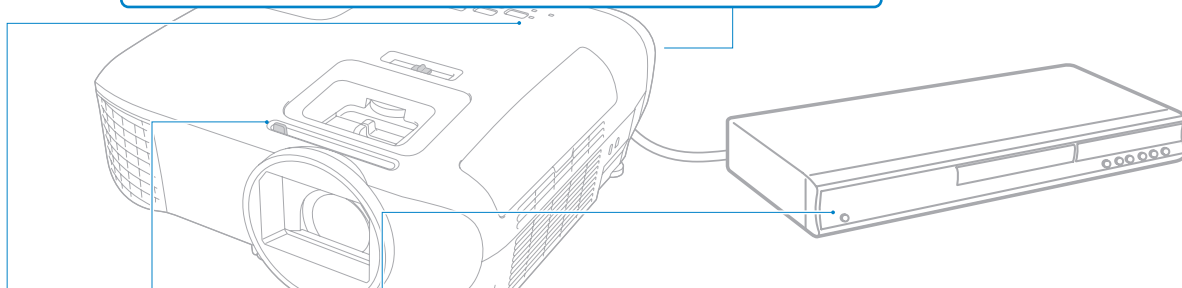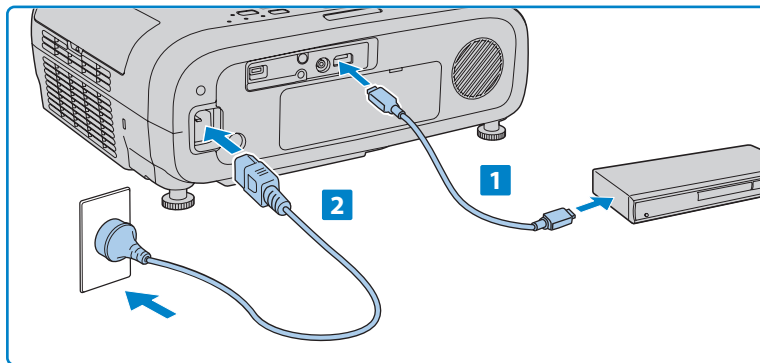





EH-TW5820


EH-TW5700

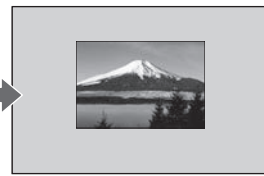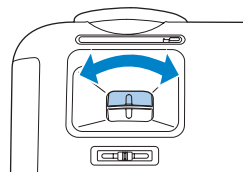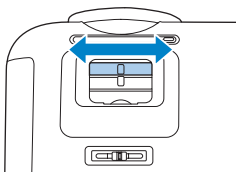


EH-TW5820

EH-TW5700

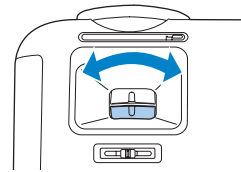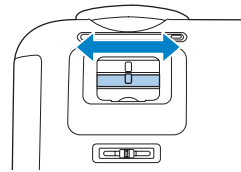

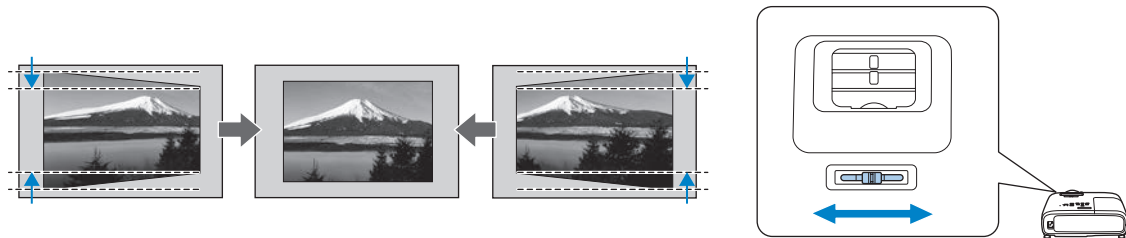

1

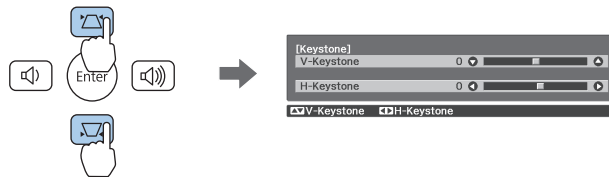

2

