


EN Start Here
TC 安裝說明



© 2014 Seiko Epson Corporation.
All rights reserved.
Printed in XXXXXX

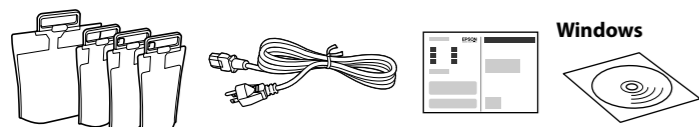


Contents may vary by location.
內容物會因國家 / 地區而不同。




Do not connect a USB cable unless instructed to do so.
除非有指示要求，否則請勿連接 USB 連接線。

1

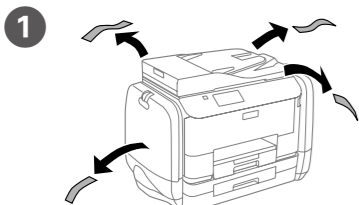

Remove all protective materials.
移除所有保護材料。

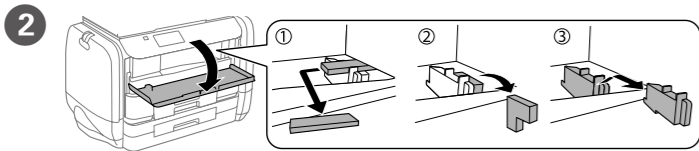


Remove all protective materials.
移除所有保護材料。


3

Connect a phone cable.
連接電話線。

Connecting to PSTN or PBX.
連接至 PSTN 或 PBX

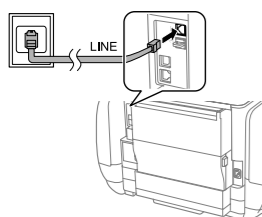


Connecting to DSL or ISDN.
連接至 DSL 或 ISDN

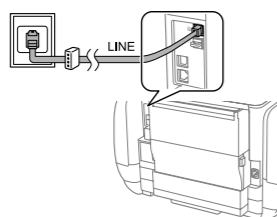


Available phone cable	RJ-11 Phone Line / RJ-11 Telephone set connection.
可用的電話線	RJ-11 電話線 / RJ-11 電話機連接

Depending on the area, a phone cable may be included with the printer, if so, use the cable.
視地區而定，印表機可能隨附電話線。若有，請使用隨附的電話線。

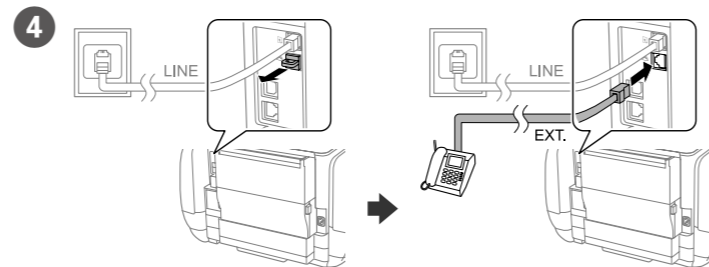

If you want to share the same phone line as your telephone, remove the cap and then connect the telephone to the EXT. port.
如果想要與電話共用同一條電話線，請移除護蓋，將電話連接至 EXT. 連接埠。

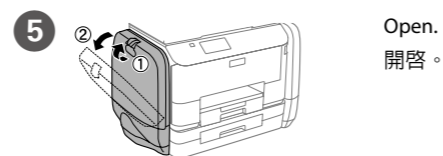

Open.
開啟。



Unpack and remove.
拆開包裝並取出內容物。




Do not touch the green chip as shown illustration.
請勿觸碰如圖所示的綠色晶片。




Shake the ink supply unit 20 times well.
適當搖晃墨水海量包 20 次。


For the initial setup, make sure you use the ink supply units that came with this printer. These ink supply units cannot be saved for later use.
如為首次安裝，請確定您使用的是本印表機隨附的墨水海量包。這些墨水海量包無法存放供未來使用。

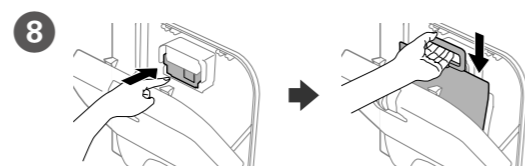


Push to insert the ink supply unit.
將墨水海量包推入。

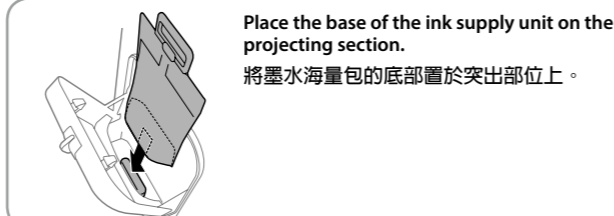


Place the base of the ink supply unit on the projecting section.
將墨水海量包的底部置於突出部位上。

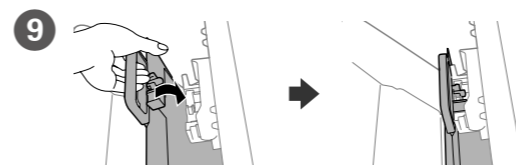


Fit the ink supply port and the green chip into the printer, then push the handle of the ink supply unit.
裝入墨水補充埠並將綠色晶片裝入印表機中，然後推入墨水海量包的把手。

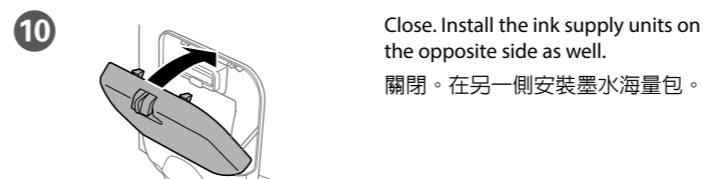

Close. Install the ink supply units on the opposite side as well.
關閉。在另一側安裝墨水海量包。

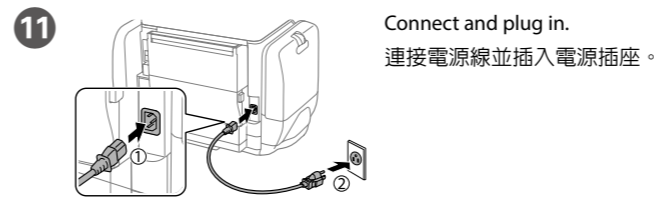

Connect and plug in.
連接電源線並插入電源插座。

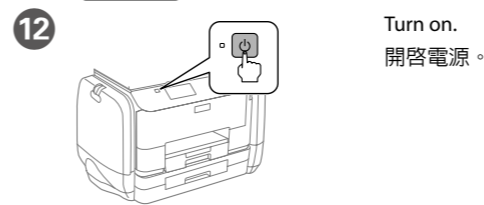


Turn on.
開啓電源。


If an error is displayed, turn off the printer and check that no protective materials have been left inside the paper cassettes.
如果顯示錯誤，請關閉印表機電源並查看紙匣內是否殘留任何保護材料。




Select a language, country and time.
選擇語言、國家及時間。

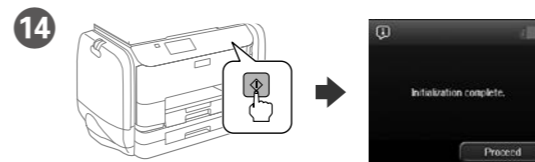


Press \diamond to start ink charging. Wait until the charging is finished.
按下 \diamond ，即開始進行墨水填充。請等待墨水補充完成。

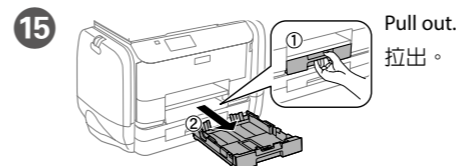

Pull out.
拉出。

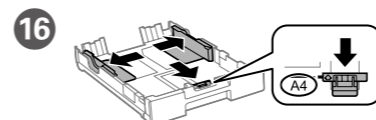


Pinch and slide the edge guides.
夾住並滑動邊緣定位器。

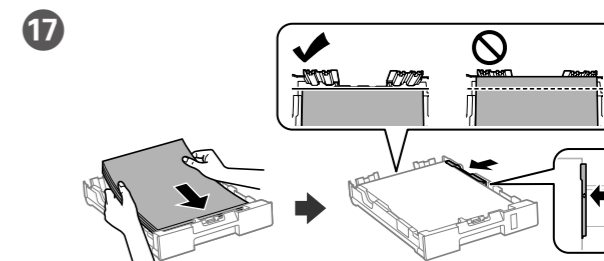


Load A4 size paper toward the front edge guide with the printable side face down then slide the side edge guides to the paper.
將 A4 大小紙張朝前方紙張邊緣定位器裝入，列印面朝下，然後將側邊紙張邊緣定位器滑靠至紙張。

Do not load paper above the \blacktriangledown arrow mark inside the edge guide.
請勿將紙張載入至邊緣定位器內部的 \blacktriangledown 箭頭標記上方。

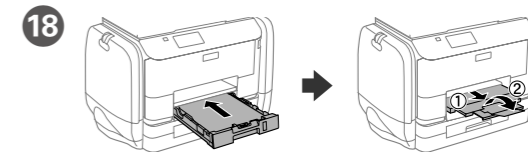

Select the paper source, then select the paper size and type.
選擇紙張來源，然後再選擇紙張大小及類型。

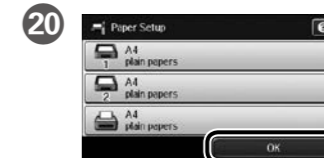

Set the paper size and type for the other sources. You can change these settings later.
設定其他來源的紙張大小及類型。您可在稍後變更這些設定。



When the fax setting wizard screen is displayed, tap start to configure the minimum settings for fax features. If you do not setting now, close the fax setting screen. The home screen is displayed and printer is ready for printing.
顯示傳真設定精靈畫面時，輕觸開始即可設定傳真功能的最小設定。如果您現在不想設定，請關閉傳真設定畫面。此時會顯示首頁畫面，且印表機已準備就緒可供列印。

2

Windows



Insert the CD, and then select A or B.
插入光碟，然後選擇 A 或 B。

If the Firewall alert appears, allow access for Epson applications.

若出現「防火牆」警示訊息，請確認發行者為 Epson，然後才開啓 Epson 應用程式。

No CD/DVD drive Mac OS X

➔ <http://epson.sn>

Visit the website to start the setup process, install software, and configure network settings.

請瀏覽網站以啟動安裝程序、安裝軟體及進行網路設定。

iOS/Android



Epson Connect



Using your mobile device, you can print from any location worldwide to your Epson Connect compatible printer. Visit the website for more information.

透過行動裝置，您可從世界任何地點將資料列印至 Epson Connect 相容印表機。如需詳細資訊，請瀏覽網站。

Questions?



You can open the PDF manuals from the shortcut icon, or download the latest versions from the following website.
See the *User's Guide* to install the PS/PCL driver.

您可從捷徑圖示開啓 PDF 手冊，或由下列網站下載最新版本手冊。
請參閱進階使用說明以安裝 PS/PCL 驅動程式。

➔ <http://support.epson.net>

Safety Instructions

Safety Instructions 安全說明

Use only the power cord supplied with the product and do not use the cord with any other equipment. Use of other cords with this product or the use of the supplied power cord with other equipment may result in fire or electric shock.
印表機的電源線只適用這台印表機，不得與其他設備的電源線。印表機使用其他電源線，或將隨附電源線用於其他設備，可能會造成電線走火或觸電。

Be sure your AC power cord meets the relevant local safety standard.
確定 AC 電源線符合當地的安全標準。

Never disassemble, modify, or attempt to repair the power cord, plug, printer unit, scanner unit, or options by yourself, except as specifically explained in the product's guides.
除產品指示中所特別說明的部分外，請勿自行拆解、更改或企圖維修電源線、插頭、列印單元、掃描單元或選購品。

Unplug the product and refer servicing to qualified service personnel under the following conditions:
The power cord or plug is damaged; liquid has entered the product; the product has been dropped or the casing damaged; the product does not operate normally or exhibits a distinct change in performance. Do not adjust controls that are not covered by the operating instructions.

遇有下列情形時，請拔下印表機的電源線，並洽詢合格的服務人員進行維修：
電源線或插頭受損、液體流進印表機、印表機摔落或外殼受損、印表機運作不正常或效能出現明顯差異。請勿調整操作說明中沒有提到的控制項目。

Place the product near a wall outlet where the plug can be easily unplugged.
將本印表機放在靠近牆壁電源插座的地方，以便拔下插頭。

Do not place or store the product outdoors, near excessive dirt or dust, water, heat sources, or in locations subject to shocks, vibrations, high temperature or humidity.
請勿將印表機放置或儲存在室外、靠近灰塵粉未較多之處、水源、熱源，以及易震動、搖晃或高溫潮濕的地方。

Take care not to spill liquid on the product and not to handle the product with wet hands.
請小心避免將任何液體潑灑在這台印表機上，雙手潮濕時請勿操作印表機。

Keep this product at least 22 cm away from cardiac pacemakers. Radio waves from this product may adversely affect the operation of cardiac pacemakers.
請將本印表機與心臟節律器至少保持 22 公分的距離，以免本印表機所釋放的無線電波影響心臟節律器的運作。

If the LCD screen is damaged, contact your dealer. If the liquid crystal solution gets on your hands, wash them thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately.

若液晶螢幕有所損壞，請聯絡您的經銷商。若液晶溶液接觸您的雙手，請以肥皂及清水徹底洗淨。若液晶溶液噴到眼睛，請立刻以清水沖洗。若完全沖洗後仍感到不適或視力有問題，請馬上就醫。

Keep ink supply units out of the reach of children.
確保墨水海量包遠離兒童伸手可及之處。

Be careful when you handle used ink supply units, as there may be some ink around the ink supply port.
If ink gets on your skin, wash the area thoroughly with soap and water.
If ink gets into your eyes, flush them immediately with water.
If discomfort or vision problems continue after a thorough flushing, see a doctor immediately.
If ink gets into your mouth, spit it out immediately and see a doctor right away.
拿取用過的墨水海量包時請格外注意，因為墨水補充埠周圍可能會殘留一些墨水。

如果墨水沾到您的皮膚，請用肥皂與水徹底清洗該部位。
如果墨水接觸到雙眼，請立即用清水沖洗。
如果在徹底沖洗後仍感不適或視線模糊，請儘速就醫。
如果墨水進入您的口中，請立即吐出並儘速就醫。

Avoid using a telephone during an electrical storm.
There may be a remote risk of electric shock from lightning.
避免在雷電暴風雨的天氣使用電話，有可能因閃電而發生遠距離觸電的危險。

Do not use a telephone to report a gas leak in the vicinity of the leak.
當附近有瓦斯洩漏時，請勿使用電話回報洩漏情形。

Always keep this guide handy.
請妥善保管本使用說明。

To prevent injuries, the product should be lifted and carried by two or more people.
為避免受傷，應由兩名以上成人抬起及搬運本產品。

To prevent ink leakage, remove all ink supply units before moving or transporting the product.
為預防墨水洩漏，在移動或搬運產品前，請先取出所有墨水海量包。

Information for Users in Taiwan Only 此資訊僅適用於台灣地區

- ❑ 產品名稱：多功能印表機
- ❑ 額定電壓：AC 100 - 240 V
- ❑ 額定頻率：50 - 60 Hz
- ❑ 耗電量：
 - 單機複印時：約 22 W
 - 就緒模式：約 9.6 W
 - 省電模式：約 3.0 W
 - 關機模式：約 0.4 W
- ❑ 額定電流：0.8 - 0.4 A

製造年份、製造號碼和生產國別：見機體標示

警語

檢修本產品之前，請先拔掉本產品的電源線。

功能規格

- ❑ 列印方式：微針點壓電噴墨技術
- ❑ 解析度：最大可達 4800 x 1200 dpi
- ❑ 適用系統：
 - Windows 8.1, 8, 7, Vista, XP SP1 以上版本、XP Professional x64 Edition, Server 2012 R2*, Server 2012*, Server 2008 R2*, Server 2008*, Server 2003* 和 Server 2003 R2* (* 僅限印表機驅動程式與掃描器驅動程式。)
 - Mac OS X 10.5.8, 10.6.x, 10.7.x, 10.8.x, 10.9.x

使用方法

見內附相關說明文件

緊急處理方法

發生下列狀況時，請先拔下印表機的電源線並洽詢Epson授權服務中心：

- ❑ 電源線或插頭損壞
- ❑ 有液體噴灑到印表機
- ❑ 印表機摔落或機殼損壞
- ❑ 印表機無法正常操作或是列印品質與原來有明顯落差

製造商：SEIKO EPSON CORPORATION
地址：80 Harashinden, Hirooka, Shiojiri-shi, Nagano-ken, 399-0785, JAPAN
電話：81-263-52-2552

進口商：台灣愛普生科技股份有限公司
地址：台北市信義區松仁路7號14樓
電話：(02) 8786-6688 (代表號)

注意事項

- ❑ 只能使用印表機標籤上所註明的電源規格。
- ❑ 請保持工作場所的通風良好。

Windows® is a registered trademark of the Microsoft Corporation.
Mac OS is a trademark of Apple Inc., registered in the U.S. and other countries.
Android™ is a registered trademark of Google Inc.

The contents of this manual and the specifications of this product are subject to change without notice.

