


如何列印滾筒紙


1. 將滾筒紙饋入印表機




1. 請確定印表機的電源是開啓的，再移除紙張支撐板。
2. 請將紙張厚度調整桿切換至“□”。

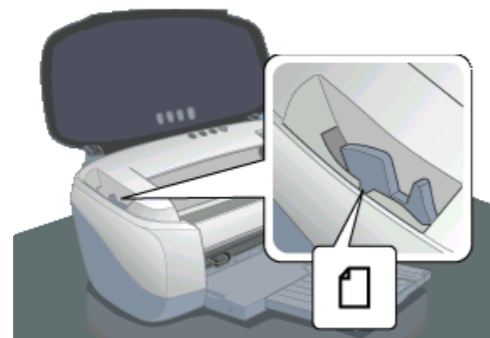

3. 將滾筒紙放入滾筒紙進紙槽中。

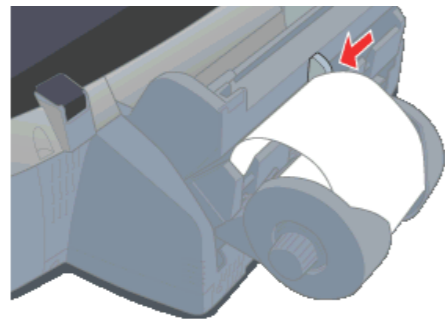


4. 打開印表機上蓋，確認滾筒紙有饋入印表機中。

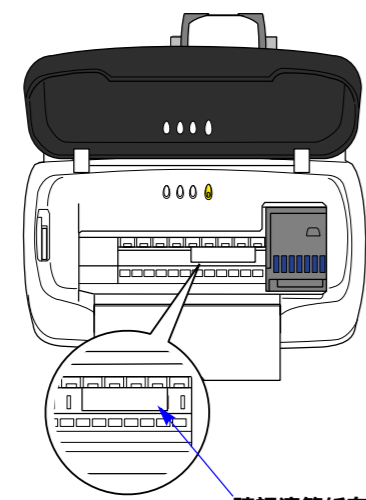

確認滾筒紙有饋入印表機中

5. 依照滾筒紙的寬度，調整左側邊緣定位器。

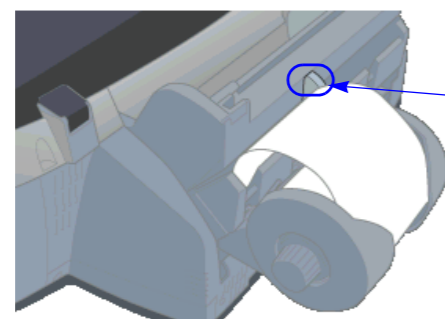


左側邊緣定位器

2. 列印




1. 開啓印表機驅動程式，點選“工具”。

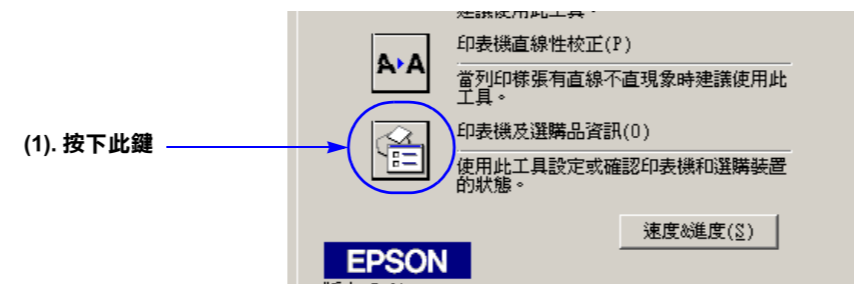

(1). 按下此鍵


2. 點選此檢查盒

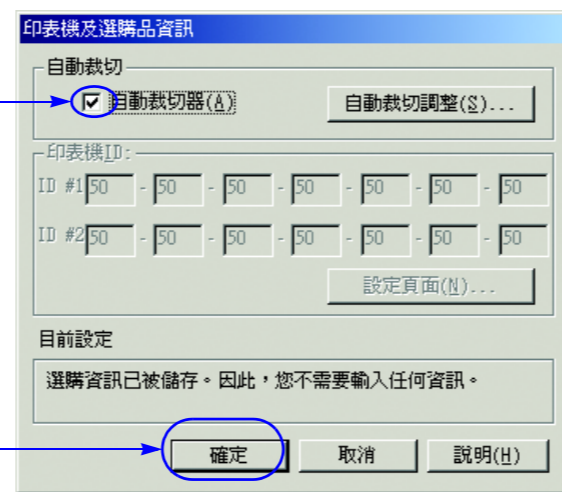

(3). 按下此鍵

2. 雙擊桌面上“EPSON PhotoQuicker 3.2”圖示。

3. 開啓相片檔案。

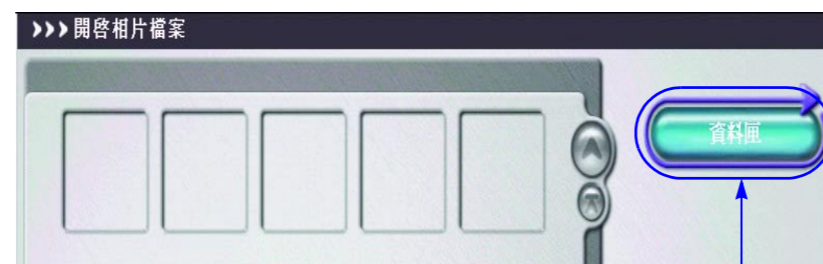

(1). 按下此鍵



(3). 按下此鍵

(2). 選擇相片檔案

預覽視窗

4. 按下“下一步”，選擇列印版面。

(2). 版面選擇 4 x 6 inch



(1). 紙張尺寸選擇 100mm

(3). 按下此鍵

5. 選擇紙張種類。



(1) 選擇優質照片紙

(2). 選擇雙邊裁切

(3). 按下此鍵

6. 印表機開始列印資料。

7. 完成列印工作之後，按一下『∞』鍵，印表機會自動裁切滾筒紙。

附註：
按下控制面板上的『∞』鍵三秒鐘不放，即可退出滾筒紙。

關於 PhotoQuicker 軟體的操作，請按下“說明”，參考線上使用手冊。

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. The information contained herein is designed only for use with this EPSON printer. EPSON is not responsible for any use of this information as applied to other printers.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

SEIKO EPSON CORPORATION shall not be held liable for any damage resulting from electromagnetic interferences that occurs from the use of any interface cables other than those designated as EPSON Approved Products by SEIKO EPSON CORPORATION.

EPSON is a registered trademark and EPSON Stylus is a trademark of SEIKO EPSON CORPORATION.

PRINT Image Matching Version 2.0. Copyright 2002 SEIKO EPSON CORPORATION. All rights reserved. PRINT Image Matching is a trademark of SEIKO EPSON CORPORATION. The PRINT Image Matching logo is a trademark of SEIKO EPSON CORPORATION.

PRINT Image Matching is a term for the print command that is embedded in header file of the image created by digital camera. It contains color setting and image parameter information.

Part of the photo data stored on the Printer Software CD-ROM is licensed from Design Exchange Co., Ltd. Copyright © 2000 Design Exchange Co., Ltd. All rights reserved.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.




如何列印光碟片



1. 光碟片的規格


□ 適用 EPSON STYLUS PHOTO 950 的光碟片規格如下所示：

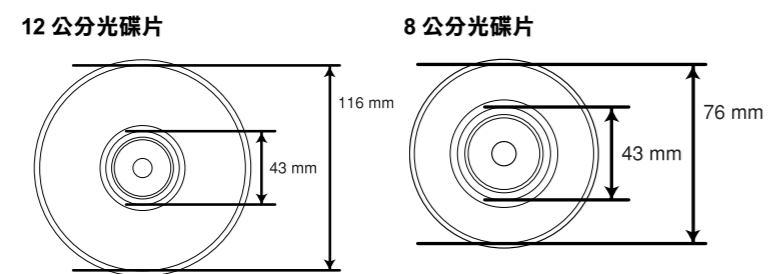


□ 可列印式光碟片（表面為印刷面）。

2. 安裝光碟托盤


1. 請確定印表機電源是開啓的。
2. 打開印表機上蓋，將紙張厚度調整桿切換至“↑”。此時，面板上的“□”指示燈會不停閃爍。

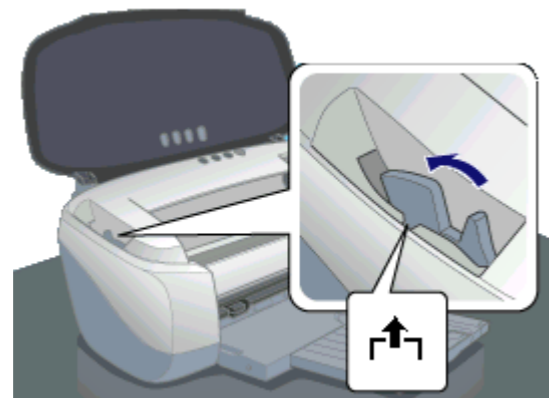



3. 將前方導板放在出紙托盤上，沿著出紙槽兩側的導槽，向內推到底為止。

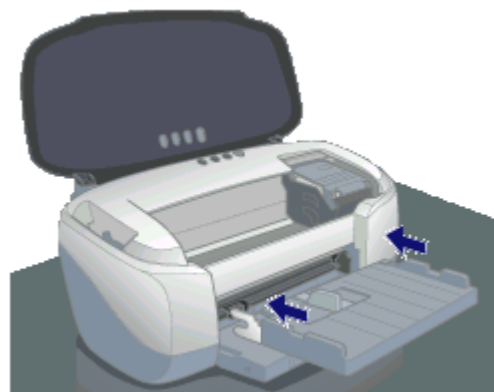

4. 將光碟片的列印面朝上，放在光碟托盤上。

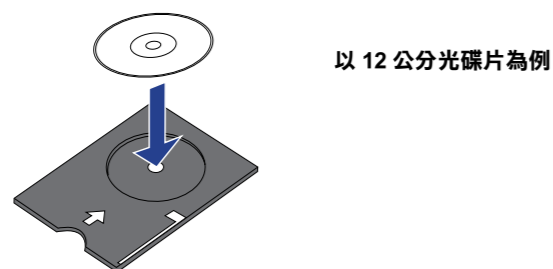

5. 將光碟托盤沿著前方導板的右側邊緣，輕輕推入印表機中，直到光碟托盤上的半圓形缺口對齊前方導板上的半圓形符號。

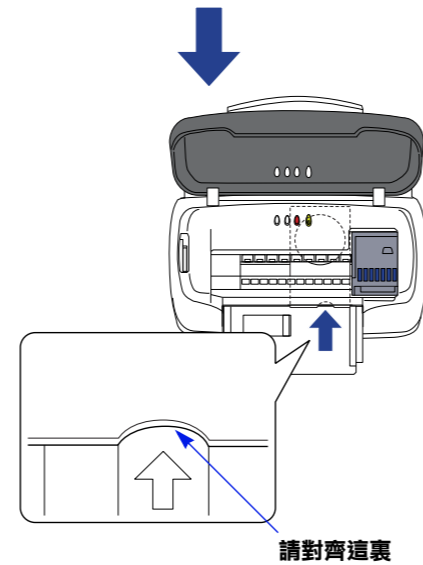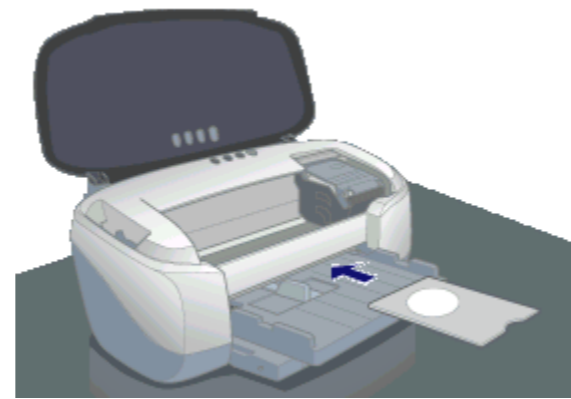


6. 移動左側邊緣定位器，使之靠在光碟托盤的邊緣。



7. 將紙張厚度調整桿切換至“⊙”，此時面板上的“□”指示燈將會熄滅。



8. 關上印表機上蓋，按下“□”鍵。印表機會自動調整光碟片的列印位置。

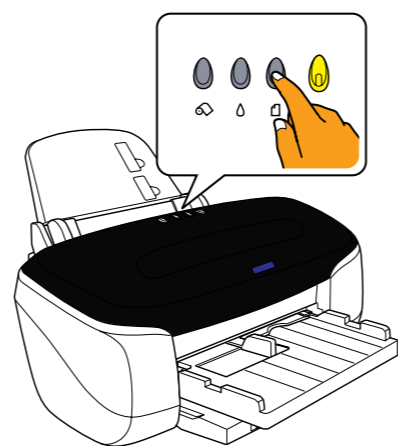


附註：
再按一下“□”鍵，印表機會退出光碟片。

3. 準備資料


1. 設定印表機驅動程式

1. 將“EPSON Stylus Photo 950”設為預設的印表機。

1. 開啓印表機驅動程式，點選“主選單”。

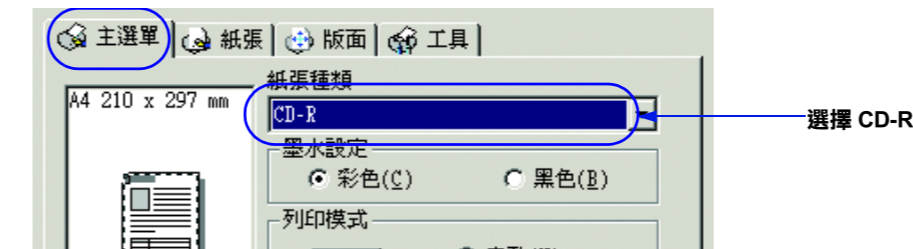

2. 點選“紙張”選單。

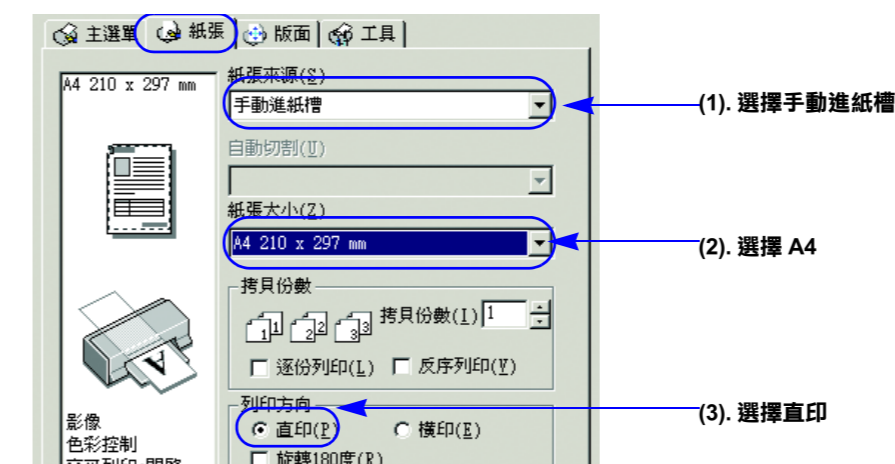

3. 按下“確定”鍵，關閉印表機驅動程式。

2. 啟動 EPSON Print CD 軟體

雙擊桌面上 EPSON Print CD 圖示。



3. 選擇背景來源

1. 按下工具列的“背景”，開啓“選擇背景”對話框。



2. 按下“編輯背景”，點選要使用的影像，再按下“確定”。




4. 編輯文字

1. 按下工具列的“ABC”，開啓“文字設定”對話框。
2. 點選“文字”。



3. 將文字拖曳到您的位置上。

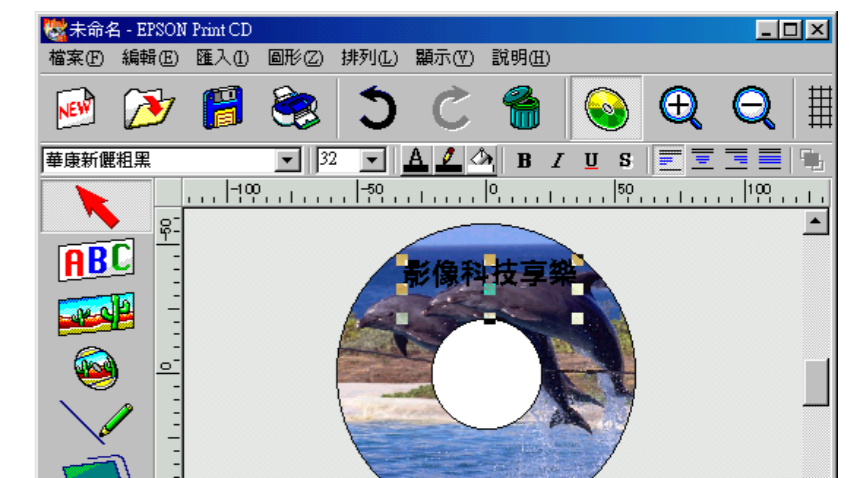

詳細說明，請參考“印表機百寶箱”光碟片中線上進階使用說明的“列印光碟片”。

4. 列印

1. 點選“列印”，開啓“列印”對話框。



2. 按下“確定”鍵，印表機便開始列印光碟片。

