

快速索引

複印功能



紙張大小

● A4
● 10x15 4"x6"

黑白複印

Start B&W

彩色複印

Start Color

Fit to Page / 縮放至頁面大小

● A4
● 10x15 4"x6"

● Fit to Page

Fit to Page / 縮放至頁面大小

● A4
● 10x15 4"x6"

● Fit to Page

紙張大小

● A4
● 10x15 4"x6"

黑白草稿複印

Start B&W

● Stop

按下『●』鍵不放再按下『◇』鍵

彩色草稿複印

Start Color


● Stop

按下『●』鍵不放再按下『◇』鍵


取消複印

● Stop

放置紙張

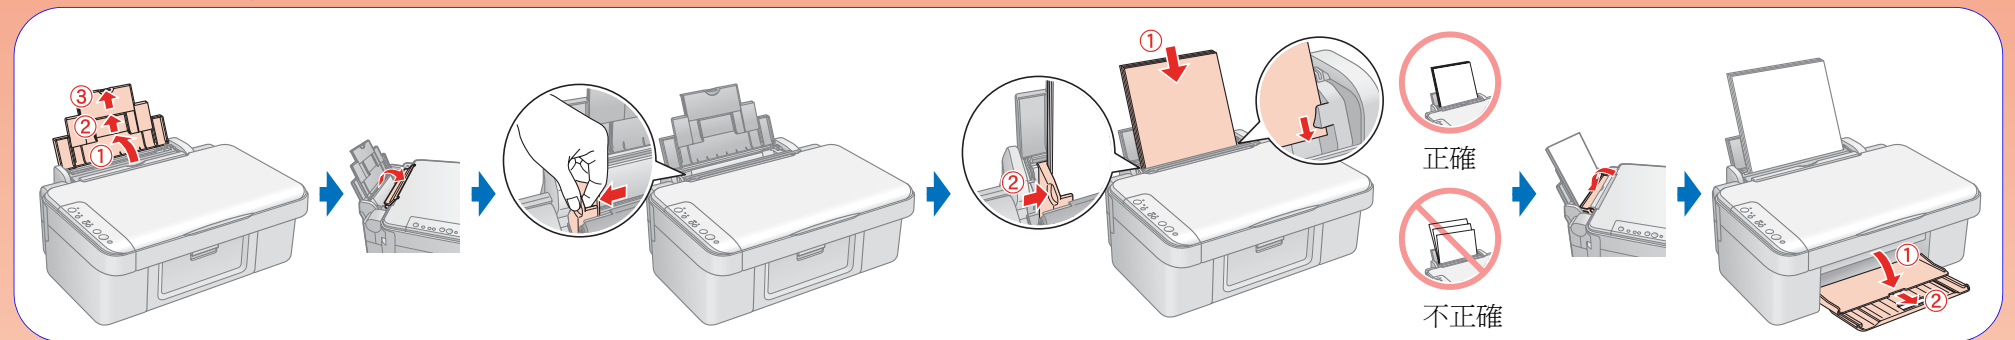


放置原稿

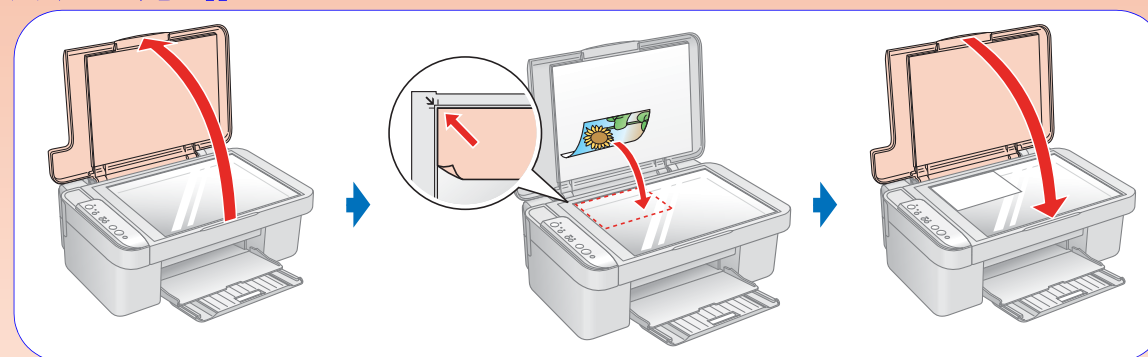

選擇紙張

紙張種類	紙張大小	自動進紙槽的容量 (張)
Plain Paper	A4	100
EPSON Bright White Ink Jet Paper	A4	100
EPSON Premium Glossy Photo Paper	10 × 15 cm (4 × 6 in.)	20
EPSON Premium Semigloss Photo Paper	10 × 15 cm (4 × 6 in.)	20

維護

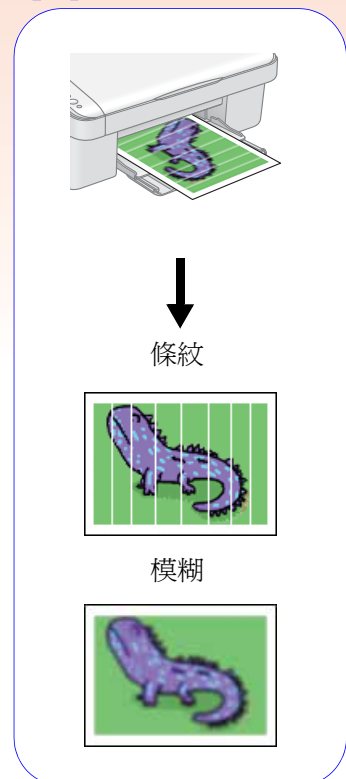

1. 噴嘴檢查

按下『●』鍵，關閉電源

按下『●』鍵不放，再按下『●』鍵 3 秒鐘不放。

良好

不良

請執行“印字頭清潔”

2. 印字頭清潔

按下『●』鍵 3 秒鐘不放

閃爍

請稍候


亮起

請再執行 1. 噴嘴檢查


確認印字頭已清潔乾淨




更換墨水卡匣

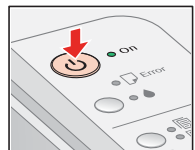


按下『』鍵，開啓電源

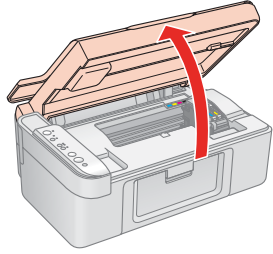









按下『』鍵

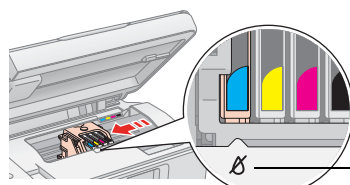


墨水用盡

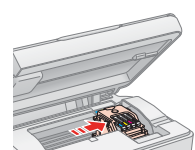


請重覆這個步驟，直到指示出所有已用盡的墨水卡匣

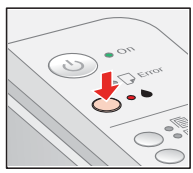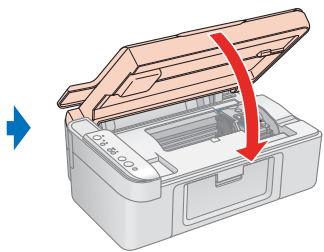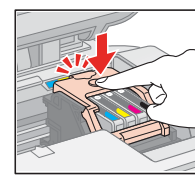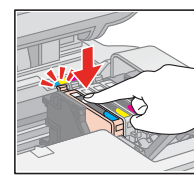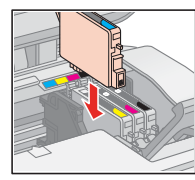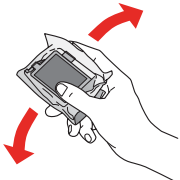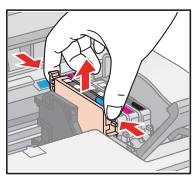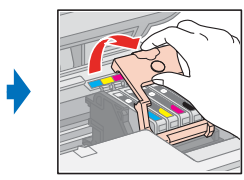

按下『』鍵

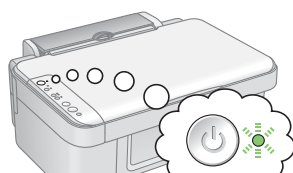

閃爍

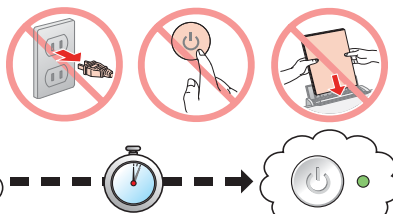

請稍候約 1 分鐘的時間



亮起


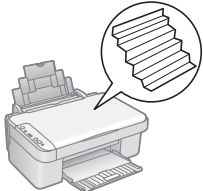
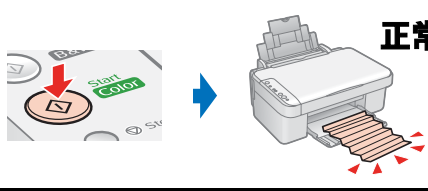



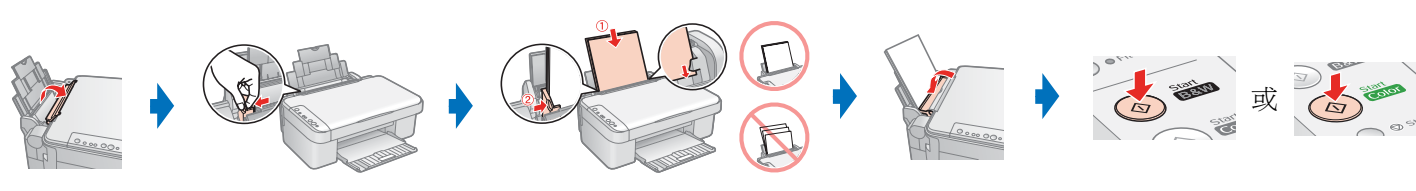

 
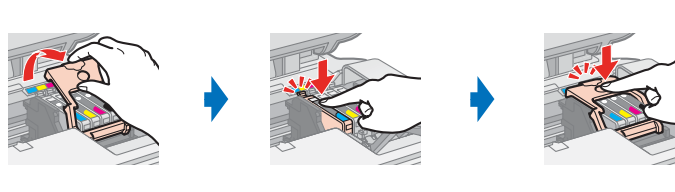





EPSON 墨水卡匣

顏色	產品編號
黑色	T0621/T0631
藍色	T0632
紅色	T0633
黃色	T0634

解決問題的方法

錯誤指示燈號

  = 閃爍

指示燈號	原因	解決問題的方法
 Error		<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>正常</p>  </div> <div style="text-align: center;"> <p>不正常</p>  </div> </div> <p>關閉電源</p> <p>開啓電源</p>
 Error		
		<p>▶ 請參考“更換墨水卡匣”，更換墨水卡匣。</p> <p>如果更換墨水卡匣後，燈號仍然亮起或不停閃爍時，請依照右側的步驟操作。</p> 
		
所有的燈號不停閃爍		請洽詢 Epson 授權維修中心。
 (其它的燈號是熄滅的)	省電模式	按下『  Start Color』鍵，魔珠相片複合機會回復至就緒的狀態。

複印時的問題

