

注意事項 (此是大方向，並非一定就是此零件故障 以服務人員實際更換零件為主)

故障訊息	說明
E 004	(2-4) Engine board malfunction
E 008	(2-8) Main motor malfunction
E 009	(2-9) Fuser motor malfunction
E 011	(2-11) Transfer Belt fan malfunction
E 012	(2-12) Power supply cooling fan malfunction
E 013	(2-13) Inside cooling fan malfunction
E 014	(2-14) Suction fan malfunction
E 015	(2-15) Fuser fan malfunction
E 016	(2-16) Polygon motor malfunction
E 018	(2-18) Laser malfunction
E 020	(2-20) 2nd transfer roller gap control malfunction
E 021	(2-21) Transfer Belt Cleaner gap control malfunction
E 022	(2-22) Transfer Belt rotation malfunction
E 023	Imaging rack rotation problem
E 024	(2-24) Heater roller heating malfunction
E 025	(2-25) Heater roller low temperature malfunction
E 026	(2-26) Heater roller high temperature malfunction
E 027	(2-27) Heater roller thermistor malfunction
E 028	(2-28) Pressure roller heating malfunction
E 029	(2-29) Pressure roller low temperature malfunction
E 030	(2-30) Pressure roller high temperature malfunction
E 031	(2-31) Heater roller thermistor malfunction
E 032	(2-32) Fuser roller gap control malfunction
E 033	(2-33) OHP detection sensor malfunction
E 034	(2-34) Multiple manual feeder pusher malfunction
E 041	(2-41) Main unit memory counter malfunction
E 042	(2-42) Main unit memory data malfunction
E 043	(2-43) Main unit memory access malfunction
E 044	(2-44) Main unit memory incorrectness
E 998	Engine communication error
C 0017	CPU error (Interrupt exception)
C 0088	CPU error (System call exception)
C 0089	CPU error (Break point exception)
C 0091	CPU error (Disabled floating-point exception)
C 0300	CPU error (Reserved (undefined) exception)
C 0301	CPU error (Machine check exception)
C 0302	CPU error (Data access exception)
C 0303	CPU error (Instruction access exception)
C 0304	CPU error (Alignment exception)
C 0305	CPU error (Program exception)
C 0306	CPU error (Trace exception)
C 0307	CPU error (Performance monitor exception)
C 0308	CPU error (System administration interrupt exception)
C 0309	CPU error (Temperature management interrupt exception)
C 0800	IPL error (Controller defective)
C 0998	Engine communication error (Only when powering on)
C 0999	No Engine Flash ROM program data
C 1002	Standard RAM error (When the standard size is not detected)
C 1010	Verify error
C 1020	RAM error (Slot 0)
C 1021	RAM error (Slot 1)
C 1100	ROM checksum error (bit 0 ~ 15)
C 1101	ROM checksum error (bit 16 ~ 31) (Font)
C 1120	ROM checksum error (bit 0 ~ 7) (Program)
C 1121	ROM checksum error (bit 8 ~ 15)
C 1122	ROM checksum error (bit 16 ~ 23) (Program)
C 1123	ROM checksum error (bit 24 ~ 31) (Program)
C 1170	Optional Font ROM module checksum error
C 1180	Optional ROM module A checksum error
C 1181	Optional ROM module B checksum error
C 1185	Unsupported ROM module
C 1200	EEPROM write error
C 1210	EEPROM write count limit
C 1400	Engine initialization malfunction
C 1500	CCNV hardware error
C 1550	Compression SRAM initialization hardware error
C 1600	Video related hardware error (including PWM IC calibration)
C 1700	Built-in network hardware error
C 1800	SPD error of ROM module
C 1999	Other hardware error
C 2000	Software error