EPSON

Wireless Network Setup Guide

無線網路設定指南

Procedure may vary depending on your OS. 程序可能視作業系統而異。



604E 57060 / MB3446X4-1 Copryright© 2011 Seiko Epson Corporation. All rights reserved.



Windows 7

1 Select **Start** → **Control Panel** → **Network** and Internet.

less router or a wireless adapter work properly.

- 2 Click Network and Sharing Center.
- 3 Click Change adapter settings.
- 1 選擇 Start(開始) → Control Panel (控 制台) → Network and Internet (網路及
- 2 按一下 [Network and Sharing Center (網 路和共用中心)]。
- 3 按一下 [Change adapter settings (變更 介面卡設定)]

Q1

Windows XP

1 Select **start** → **Control Panel** → **Network** and Internet Connections.


Confirm your computer's network settings, and then choose what to do next. Follow the instructions for the environment in which your network devices such as a wire-


- 2 Click Network Connections.
- 1 選擇 start (開始) \rightarrow Control Panel (控制台) ightarrow Network and Internet Connections(網路及網際網路連線)
- 2 按一下 Network Connections (網路連

Mac OS X

- 1 Select **System Preferences** from the Apple
- 2 Click **Network** icon.
- 1 在蘋果選單中選擇 System Preferences (系統偏好設定)。
- 2 按一下 Network (網路) 圖示。



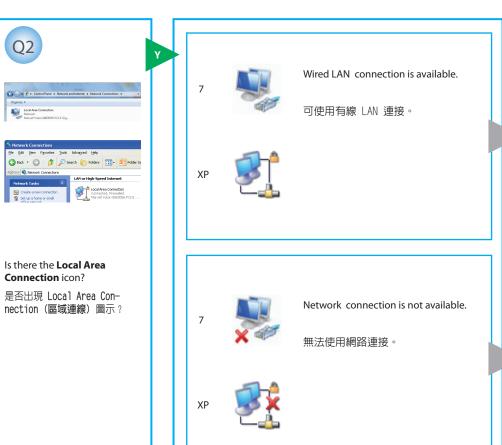


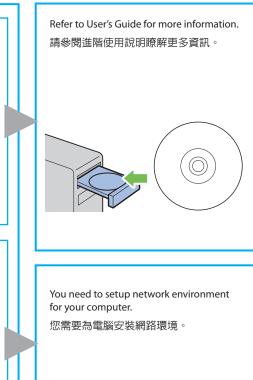



Be sure to get the SSID and security information from a system administrator in advance when you use other than WPS.

使用非 WPS 的方式時,請務必事先向系統管理員索 取 SSID 與安全性資訊。

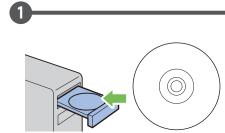

3

Insert the *Software Disc* provided with the printer in your computer.

將印表機隨附的 Software Disc 放入電腦。

If you select **Advanced**, refer to User's Guide for

若您選擇 [Advanced (進階)],請參閱進階

more information.

使用說明瞭解更多資訊。



Click Easy Install. 按一下 [Easy Install]。



If you agree to the terms of the **SOFT-**WARE LICENSE AGREEMENT, select Agree and then click Next.

若同意 SOFTWARE LICENSE AGREEMENT (軟體授權合約)的條款,請選擇 [Agree (同意)] 後再按 [Next (下一步)]。




Q1

Click Start Setup. 按一下 [Start Setup (開始 設定)]。



Click Connect Your Printer. Select your type of connection screen appears.

按一下 [Connect Your Printer (連接印表 機)]。即顯示[選擇連線類型]畫面。

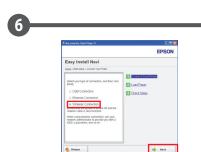

Select Wireless Connection, and then click Next. The setting method selection window appears.

選擇 [Wireless Connection (無線連接)],再 按一下 [Next (下一步)]。即顯示 [選擇設定方 式〕視窗。



Ensure that **Wizard** is selected, and then click **Next**. Follow the on-screen instructions to connect the USB

確認已選擇 Wizard (精靈),再按一下 [Next (下一 步)]。依照畫面上的指示連接 USB 纜線。



Enter the SSID and select Type of wireless network. Configure the security setting, and then click Next.

輸入 SSID 並選擇 Type of wireless network (無線網路的種類)。設定安全 性設定,再按一下 [Next (下一步)]。



Select IP Mode depending on your network scheme, and then click Next. 根據您的網路配置選擇 [IP Mode (IP 模 式)],然後按一下[Next(下一步)]。



Ensure that the wireless settings are displayed, and then click **Apply**. The Complete configuration screen appears.

確認畫面上的無線網路設定後,按一下 [Apply (**套用**)]。將出現完成設定畫面。



Wait a few minutes




Click Print Printer Setting, and confirm that "Wireless Status" is "Good", "Acceptable" or "Low" on the


按一下 [Print Printer Setting (列印印表機 設定(P))],並確認報告上的 [Wireless Status] 為 [Good]、[Acceptable] 或 [Low]。

When "Wireless Status" is "No Reception", check if the wireless settings are correctly configured. To reconfigure the wireless settings, click **Next** on the Complete configuration screen and then click **Return**.

[Wireless Status] 顯示 [No Reception] 時,請 檢查無線網路是否已正確設定。若要重新設定無線 網路,按一下完成設定畫面的 [Next (下一步)], 再按一下 [Return (返回)]。

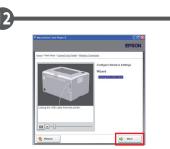


Click **Next**. Follow the on-screen instructions to disconnect the USB cable. 按一下 [Next (下一步)]。依照畫面上的 指示拔除 USB 纜線。

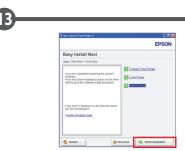

Confirm there are no errors displayed on the LCD panel, and then click **Start Installation**. Follow the instructions until the "Congratulations!" screen appears.

在 LCD 面板上確認無誤後,按一下 [Start Installation (開始安裝)]。請遵照指示,直到顯示「Congratulations! (恭喜!)」畫面為止。

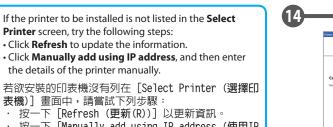

· 按一下 [Refresh (更新(R))] 以更新資訊。 · 按一下 [Manually add using IP address (使用IP 位址手動新增(M))],再手動輸入印表機的詳細資訊。



Click Finish. Set up is complete. 按一下 [Finish (結束)]。完成設定。





Ad Hoc Settings for Windows

Windows 的 Ad Hoc 設定

