

Guide to Control Panel

Buttons and Functions

	Turns the printer on or off.
	Clears a network error. Hold down for 5 seconds or more to make network settings using the WPS push button.
	Prints a network connection report to determine the causes of any network problems. To get more information, hold this button down for more than 7 seconds to print a network status sheet.
	Starts monochrome or color copying on A4 size plain paper. To increase the number of copies (by up to 20 copies), press this button within 1 second intervals.
	Stops the current operation. Hold this button down for 5 seconds until the button flashes to run print head cleaning.
	Check Scanned Images: Press the and buttons simultaneously to run software on a USB-connected computer and check scanned images.
	Copy in Draft Mode: Press the and buttons simultaneously to copy in draft mode. For users in Western Europe, draft mode is not available.
	PIN Code Setup (WPS): Hold down the Wi-Fi and buttons simultaneously to start PIN Code Setup (WPS).
	Wi-Fi Direct (Simple AP) Setup: Hold down the Wi-Fi and buttons simultaneously to start Wi-Fi Direct (Simple AP) Setup.
	Restore Default Network Settings: Turn the printer on while holding down the button to restore the default network settings. When the network settings are restored, the printer turns on and the network status lights flash alternately.
	Print Nozzle Check Pattern: Turn the printer on while holding down the button to print the nozzle check pattern.

*1: Only for ET-2810 Series and L3250 Series.





Reading the Indication Lights

	The printer is connected to a wireless (Wi-Fi) network.
	The printer is connected to a network in Wi-Fi Direct (Simple AP) mode.
	Wi-Fi connection error has occurred. Press the Wi-Fi button to clear the error and try again.
	Initial ink charging may not be complete. See section 2 on the front page to complete initial ink charging.
	No paper is loaded or more than one sheet has been fed at a time. Load paper and press the or button.
	A paper jam has occurred. Remove the paper and press the or button. See the "Clearing Paper Jam" section. If the indicator light continues flashing, see the jammed paper section from "Solving Problems" in the User's Guide.
	The printer was not turned off correctly. After clearing the error by pressing the or button, cancel any pending print jobs. We recommend performing a nozzle check because the nozzles may have dried or clogged. To turn off the printer, make sure you press the button.
	Flashing simultaneously: An ink pad is nearing or at the end of its service life.
	Flashing alternately: A borderless printing ink pad is nearing or at the end of its service life. Borderless printing is not available, but printing with a border is available. To replace the ink pad or borderless printing ink pad, contact Epson or an authorized Epson service provider.
	The printer has started in recovery mode because the firmware update failed. For more details, see the error indicator table from "Solving Problems" in the User's Guide.
	A printer error has occurred. Remove any paper inside the printer. Turn the power off and on again. If the error continues to occur after turning the power off and on again, contact Epson support.

控制面板說明

按鍵與功能

	開啟或關閉印表機的電源。
	清除網路錯誤。按住 5 秒以上可使用 WPS 按鍵進行網路設定。
	列印出網路連線報告，以確定任何網路問題的原因。若要取得更多資訊，請按住此按鍵 7 秒以上以列印網路狀態表。
	開始在 A4 尺寸普通紙張上的單色或彩色列印。若要增加份數（最多 20 份），請在 1 秒的間隔內按下此按鍵。
	停止目前的操作。按住此按鍵 5 秒直到 按鍵閃爍，可執行印字頭清潔。

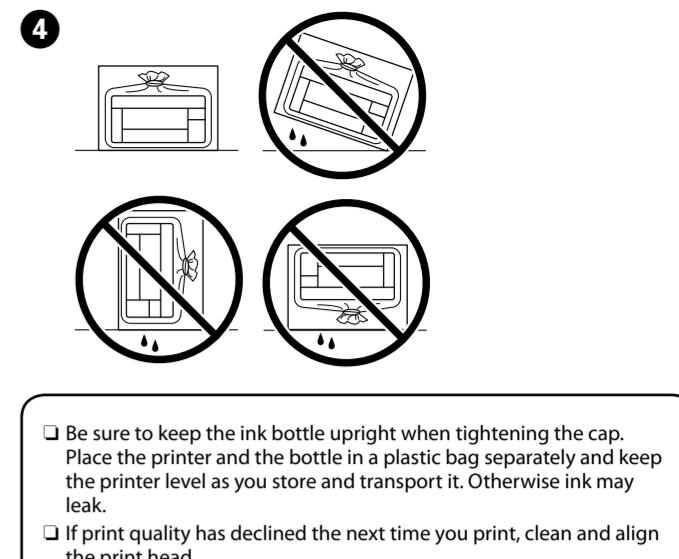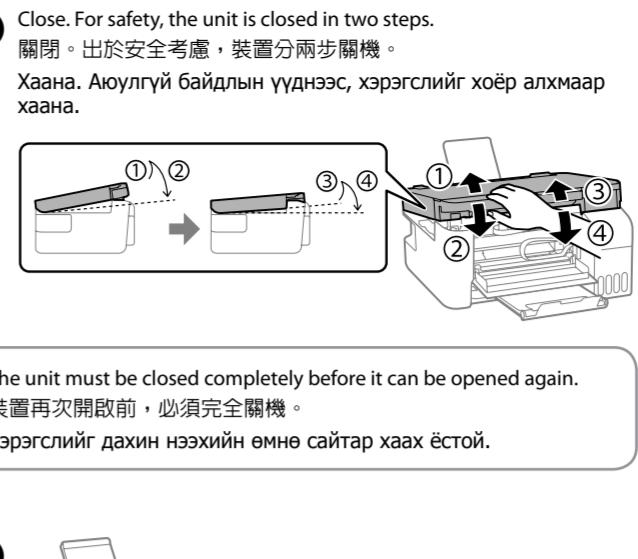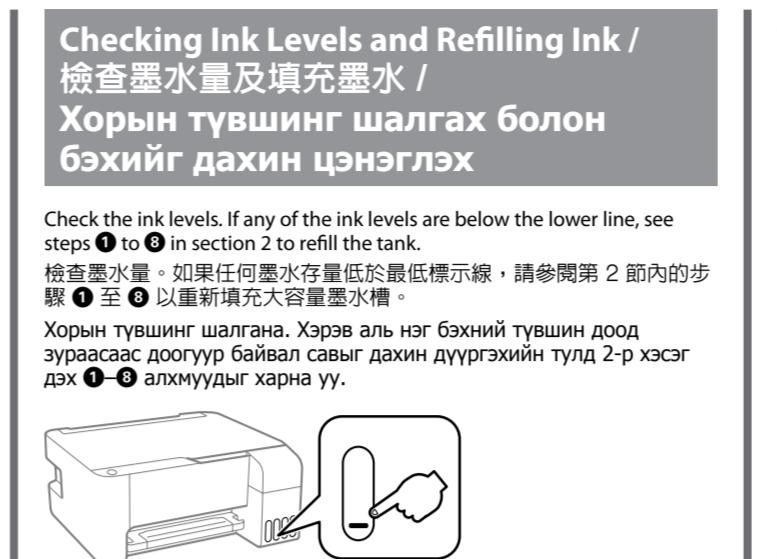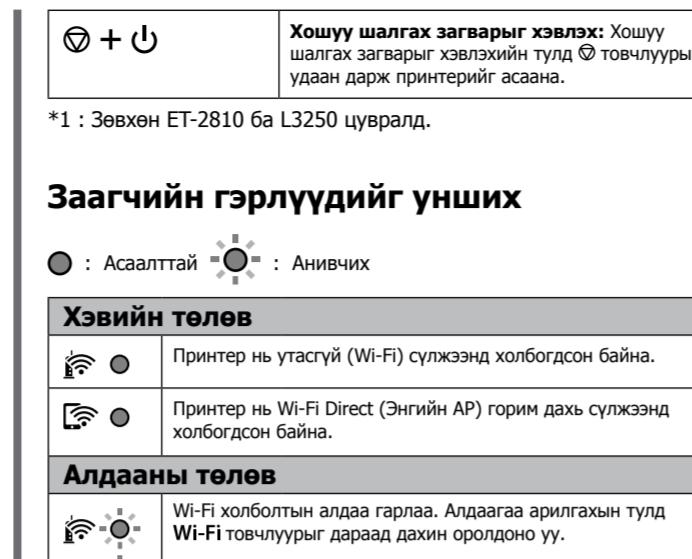

*1: 僅適用於 ET-2810 系列和 L3250 系列。

讀取指示燈

: 亮起 : 閃爍

正常狀態	
	印表機已連接至無線 (Wi-Fi) 網路。
	印表機已連接至處於 Wi-Fi Direct (Simple AP) 模式下的網路。
錯誤狀態	
	發生 Wi-Fi 連線錯誤。按下 Wi-Fi 按鍵以清除錯誤，然後重新嘗試。
	初次墨水充填可能未完成。參閱正面第 2 節以瞭解如何完成初次墨水填充。
	未裝入紙張或一次裝入多張紙張。裝入紙張，並按下 或 按鍵。
	發生夾紙，取出紙張並按下 或 按鍵。請參閱「清除夾紙」章節。若指燈持續閃爍，請參閱進階使用說明「解決問題」中關於夾紙的範例。
	印表機未正確關閉。按 或 按鍵消除錯誤之後，取消任何待執行列印工作。建議您執行噴嘴檢查，因為噴嘴可能已變乾或阻塞。若要關閉印表機，請務必按 按鍵。
	同時閃爍：集塵棉的使用壽命即將結束或已結束。 交替閃爍：無邊列印集塵棉的使用壽命即將結束或已結束。無法使用無邊列印，但可使用有邊列印。若要更換集塵棉或無邊列印集塵棉，請聯絡 Epson 或 Epson 授權服務供應商。
	印表機因動體更新失敗而開始進入復原模式。如需詳細資訊，請參閱進階使用說明「解決問題」中的錯誤指示燈表。
	發生印表機錯誤。取出印表機內的任何紙張。關閉電源，然後重新開啟。若重新開啟後仍出現錯誤，請洽 Epson 授權服務中心。

Хянах самбарын заавар

Товчлуурүүд ба үйлдлүүд

	Принтерийг асааж, уттраан.
	Сүлжээний алдаа арилгана. WPS түүлэх товчлуурыг ашиглан сүлжээний тохигоог хийхийн тулд 5 ба түнээс дээш секунц дарна уу.
	Аливаа сүлжээний асуудлын шалтгааны тодорхойлохын тулд сүлжээний холбогдуулж тайлан хэвэлэн. Нэмэлт измээлэл авах зорилгоор сүлжээний төлөвлөгөөн худсгыг хэвлэхийн тулд энэ товчлуурыг 7 секундээс удаан дарна уу.
	*1 A4 хэмжээтэй энгийн цассан дээр моногром эсвэл ёнгөт хуулбарыг эхлүүн. Хуулбарын тоог (20 хувь хурталь) нэмэгдүүгээрхийн тулд энэ товчлуурыг 1 секундэнд зайдай дарна уу.
	Одоогийн ахилгалааг зогсоноо. Принтерийн толгойны цаварлагзгээг эхлүүлэхийн тулд товч анившиг хүртэл 5 секунц энхүү товчийн дарна уу.
	Сканердсан зуургудыг шалгах: USB холбогдлыг компьютерд дээр программын хангамж ажиллуулах, сканердсан зуургудыг шалгахын тулд болон товчлууруудыг зөргүүлэхийн зэрэг дарна уу.
	*1 Ноорогор хувилын: Ноорогор хувилын тулд болон эсвэл товчлууруудыг зөргүүлэхийн тулд энэ товчлуурыг хувилын хувилыг эхлээрэй.
	ПИН кодын тохигоог (WPS): ПИН кодын тохигоог (WPS) эхлүүлэхийн тулд Wi-Fi болон эсвэл товчлууруудыг зөргүүлэхийн зэрэг дарна уу.
	Wi-Fi Direct (Энгийн AP) тохигоог: Wi-Fi болон товчлууруудыг зөргүүлэхийн тулд энэ товчлуурыг эхлүүлэв.
	Сүлжээний анхдагч тохигоог сэргээх: Сүлжээний анхдагч тохигоог сэргээхийн тулд товчлууруудыг зөргүүлэхийн тулд энэ товчийн дарна уу.

Copying / 複印 / Хуулах

Only for ET-2810 Series and L3250 Series.
僅適用於 ET-2810 系列和 L3250 系列。

Зөвхөн ET-2810 ба L3250 цувралд.

