 


EPSON STYLUS™ PRO GS6000

EPSON
EXCEED YOUR VISION

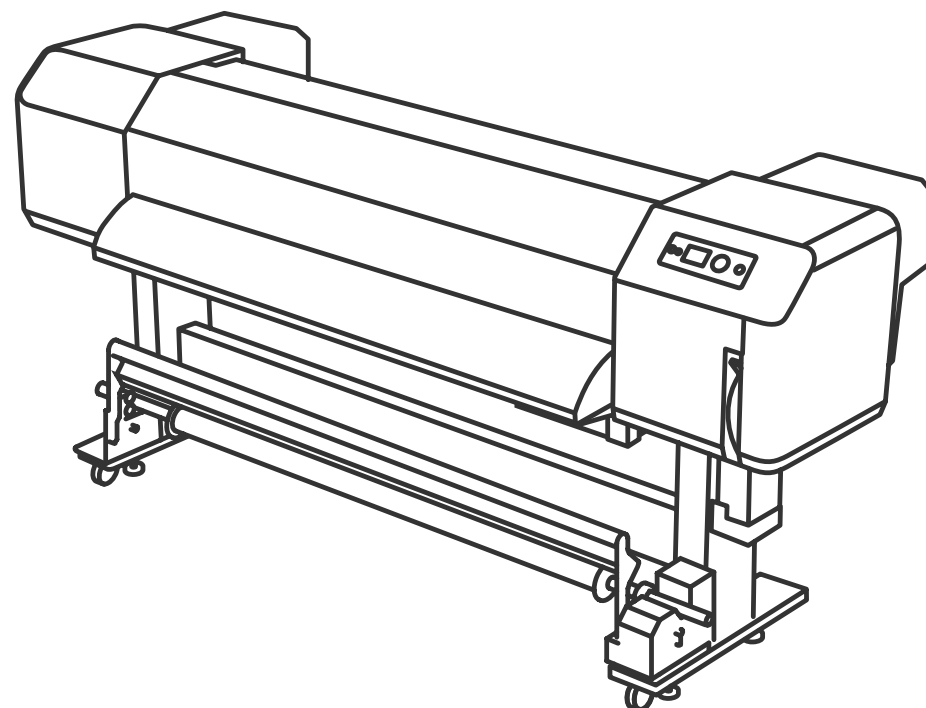




EN Unpacking and Setup Guide





TW 組裝與設定手冊



	Warning: Warnings must be followed carefully to avoid bodily injury.	警告： 請務必遵守警告事項，以免身體受傷。
	Caution: Cautions must be observed to avoid damage to your equipment.	注意： 請務必遵守注意事項，以免損害設備。
	Note: Notes contain important information about the printer.	附註： 包含有關印表機的重要資訊。

Safety Instructions 安全說明


					
EN	❑ The printer unit is heavy and unwieldy. Have six or more people unpack and assemble the printer and stand.	❑ Place the printer on a flat, stable surface that is larger than the printer. The printer will not operate properly if it is tilted or at an angle.	❑ Keep the work area well-ventilated. This prevents fire, and stops operators from feeling sick from fumes or bad smell.	❑ Do not place the printer where it is humid or dusty. It could lead to an electric shock and fire.	❑ Be sure to use the power cord supplied with the printer. Using other power cords can cause an electric shock or fire.
TW	❑ 這台印表機主體重且龐大。需要六個人以上的人力，才能從包裝箱中取出印表機和腳架，並進行組裝。	❑ 請將印表機放在平坦、穩固且空間大於印表機機身的地方。這台印表機無法在傾斜或是晃動的地方正常運作。	❑ 請保持工作場所的通風良好。這樣可以避免燃燒，並且不會讓操作員因濃煙或不好的臭味而感到噁心。	❑ 請勿將印表機放在潮溼或滿是灰塵的地方。這樣的環境可能會導致觸電或引起火災。	❑ 只使用這台印表機內附的電源線。使用其他的電源線可能會引起火災或造成觸電。

				
EN	❑ Handle ink with care. Before using the printer, see the safety instructions in the User's Guide.	❑ The paper guide, platen, and paper holder plate will become hot due to the heater temperature setting. Beware of being burned.	❑ Avoid locations that are subject to direct sunlight or near air conditioners.	❑ When not using the printer for a long time (one week or more), perform head cleaning once a week. If head cleaning is not performed, the print head may get clogged.
TW	❑ 請小心處理墨水。使用印表機之前，請查看使用手冊中的安全說明。	❑ 由於加熱器的溫度設定，紙張支撐板、壓盤、和紙張支撐架的金屬部份可能會變熱。當心燙傷。	❑ 避免放在常會遭到陽光直射或靠近冷氣機的位置。	❑ 當長時間 (一星期或以上) 不使用印表機時，請一週執行一次印字頭清潔。若沒有執行印字頭清潔，印字頭噴嘴可能會阻塞。



Opening box 打開包裝箱




 
- ❑ The printer unit is heavy and unwieldy. Have six or more people unpack and assemble the printer and stand.
- ❑ 這台印表機主體重且龐大。才能從包裝箱中取出印表機和腳架，並進行組裝。

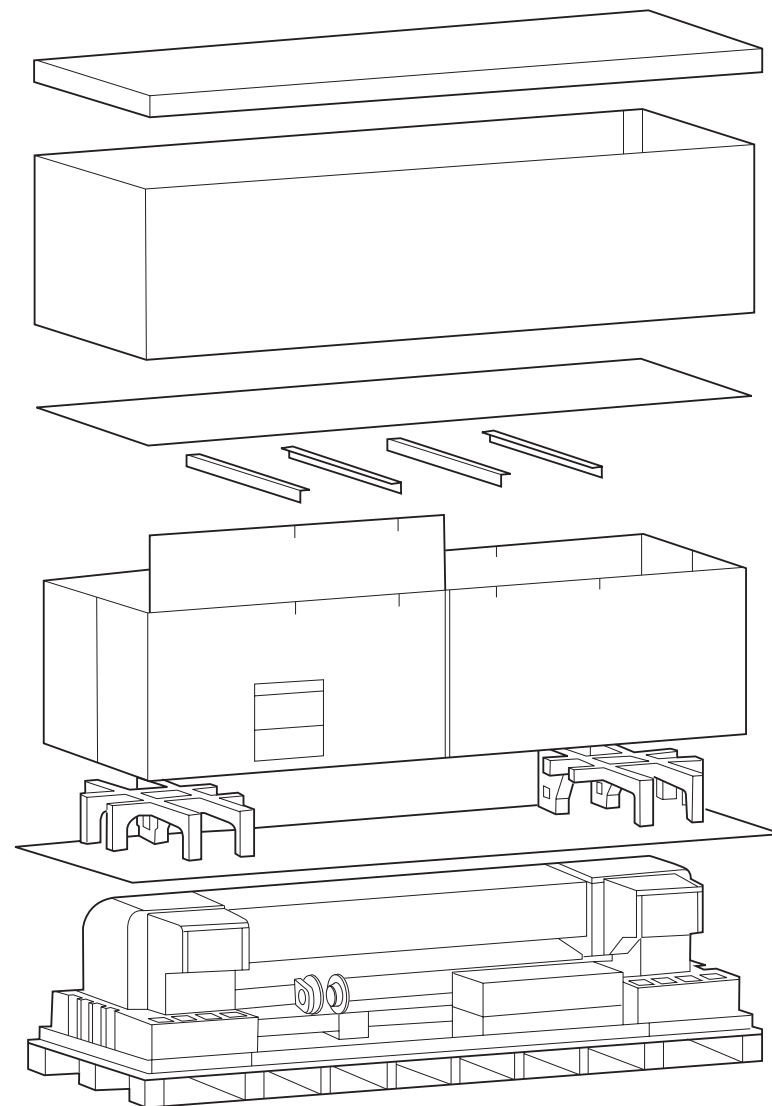


Unpacking 清點配件

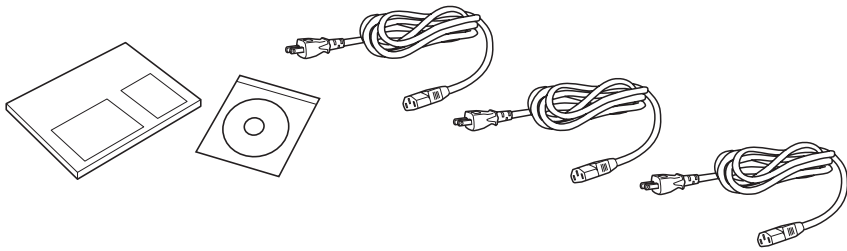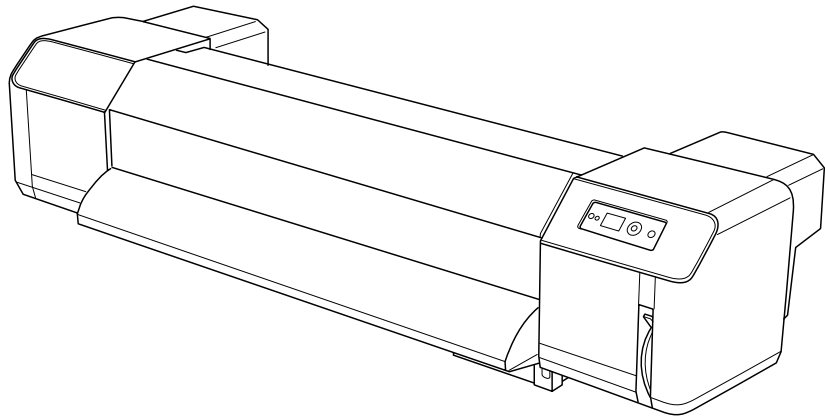  


Maintenance Kit 保養套件

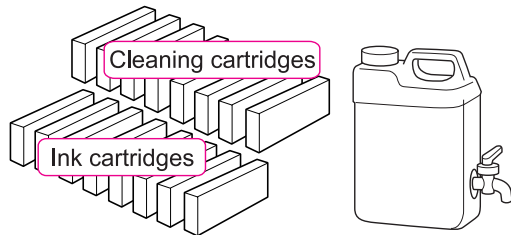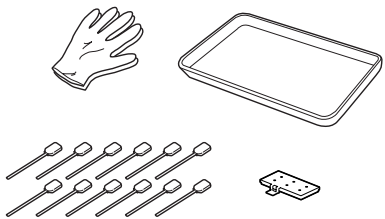  


Carrying Bar (Option) 搬運輔助桿 (選購品)

 

Stand 腳架

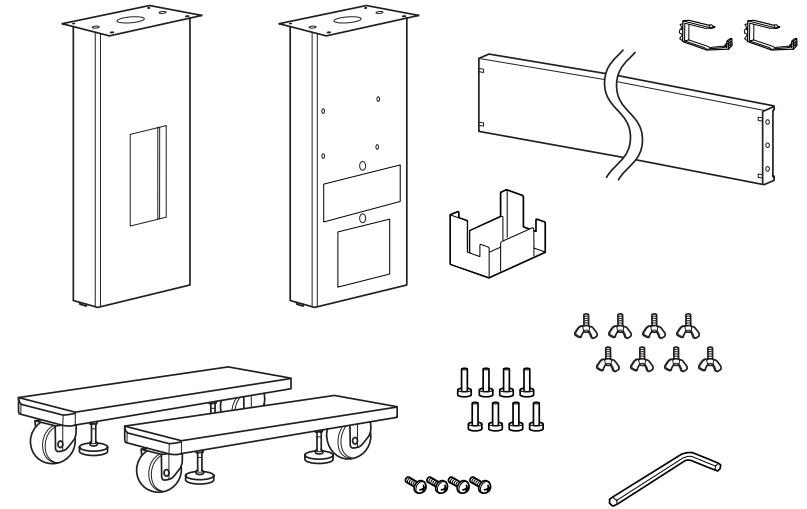 


Auto Take-Up Reel Unit 自動收紙器

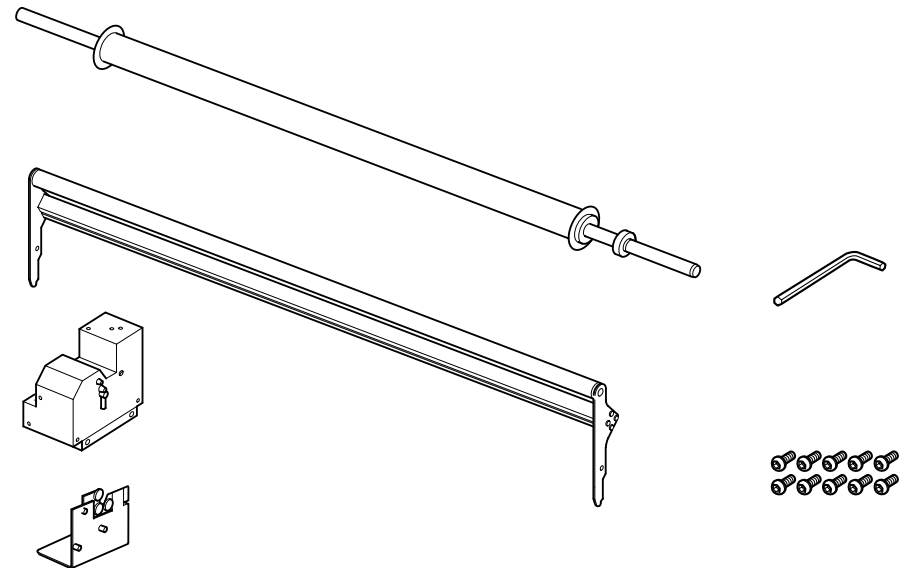 


Assembling 組裝

 
1

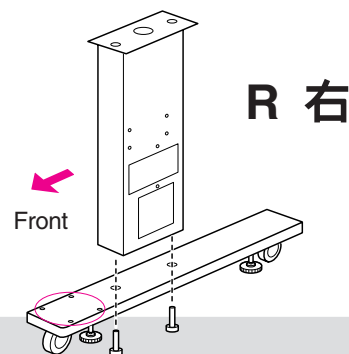


2

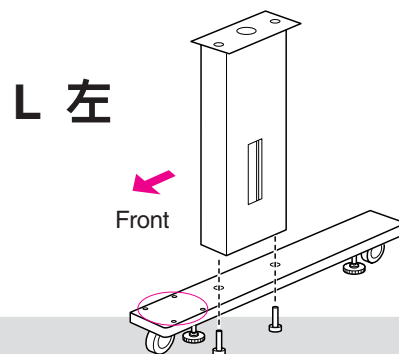 


3

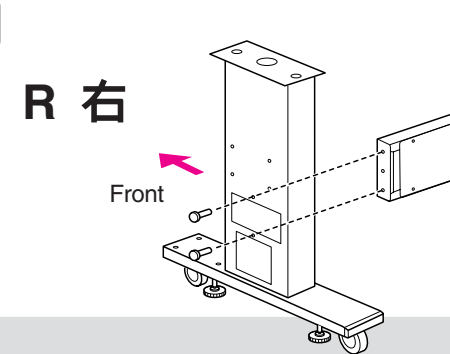 


4

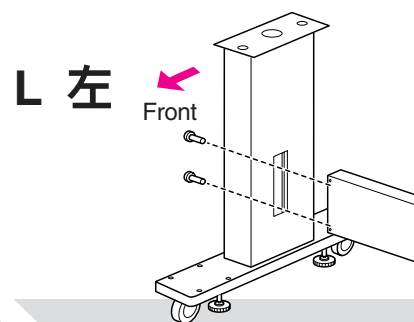 

5

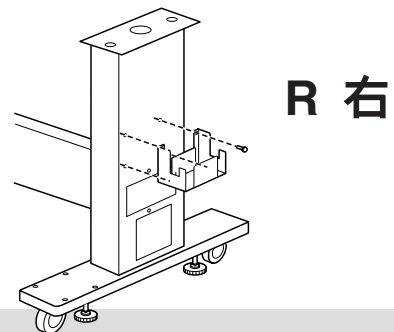 


6

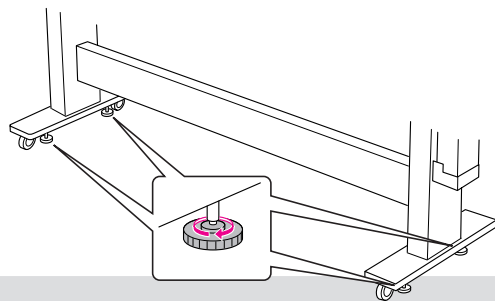 


❑ Always lock the Stand with the Adjuster when setting up or using the printer.

❑ 當安裝或使用印表機時，請調整固定旋鈕來固定腳架。


 
7

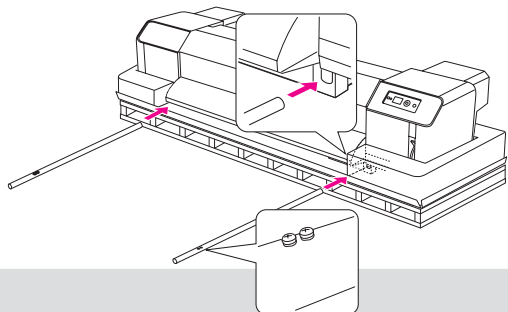

8

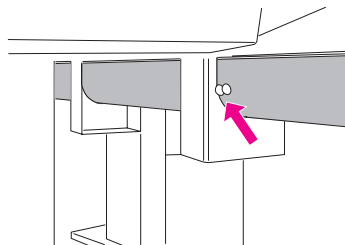 


9

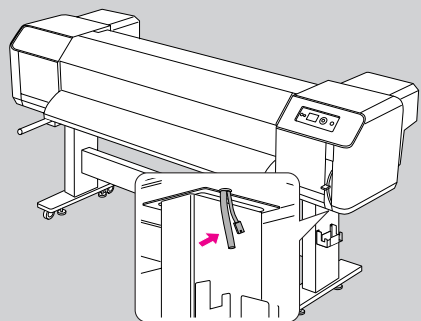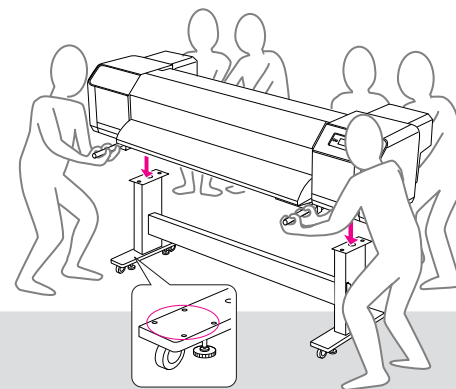  


❑ Do not damage the waste fluid sensor connector and the waste fluid tube when mounting the printer.

❑ 當組裝印表機時，請勿損壞廢棄墨水的感應器接頭以及廢棄墨水的墨管。


 
10

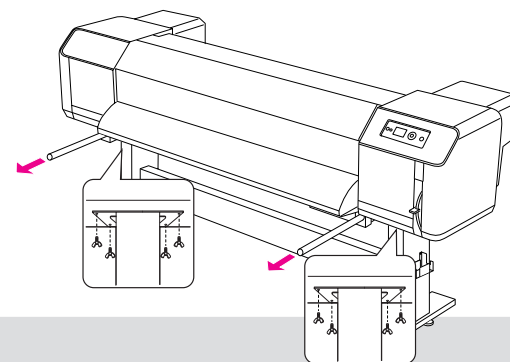


11

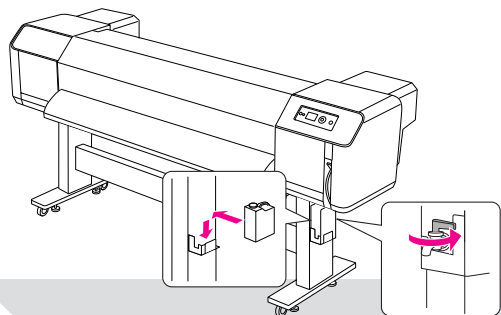 

12

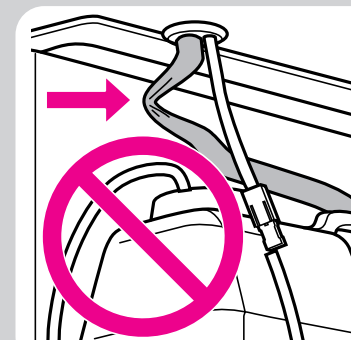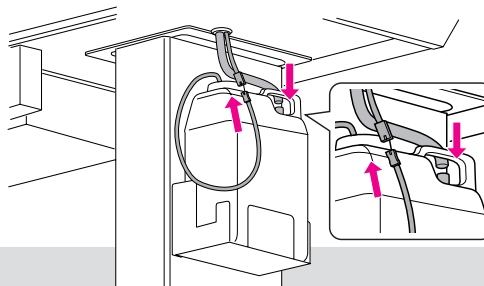  


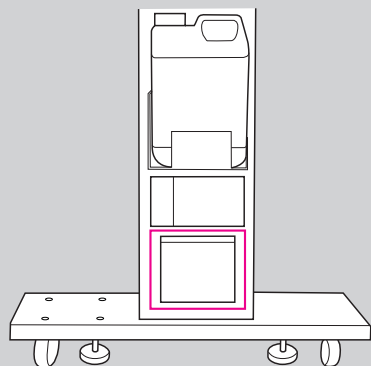 


□ Caution label in French, Spanish and Taiwanese are available. If necessary, attach one of them onto where English label is already attached.

□ 警告事項標籤適用在法國、西班牙和台灣。若有需要，請將其中一張標籤貼在已貼有英文標籤的上面。

 
13

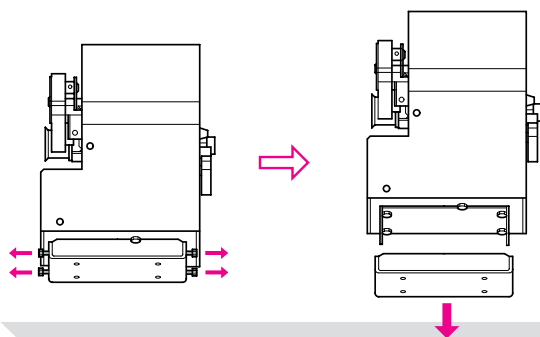


14

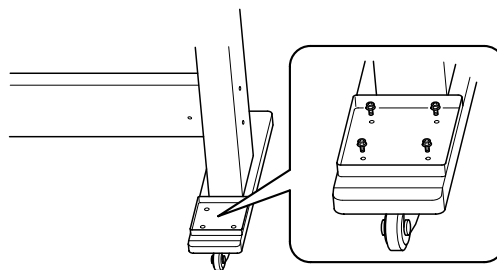 


15

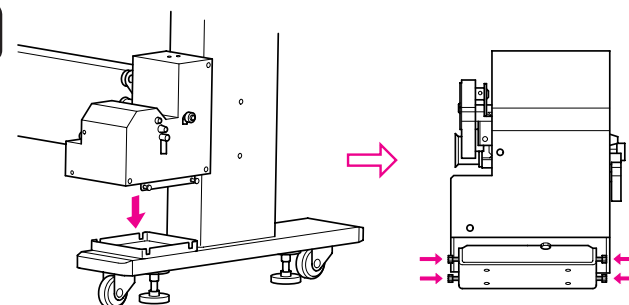 


16

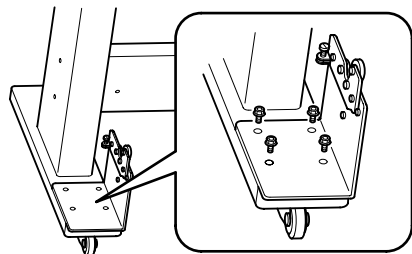 


17

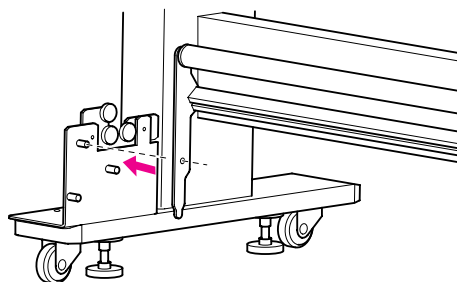 


18

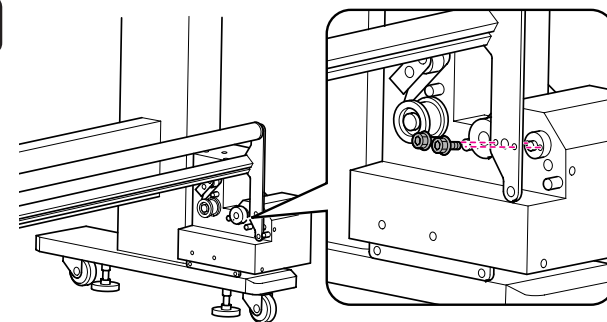 


19

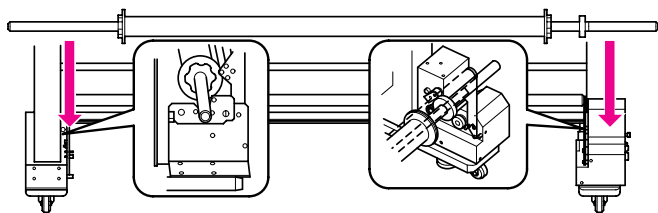 

20

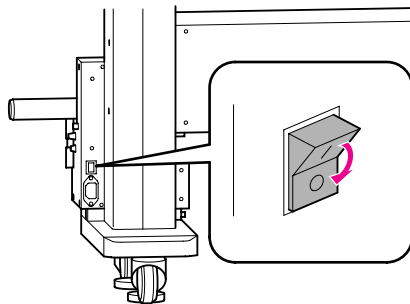 


21

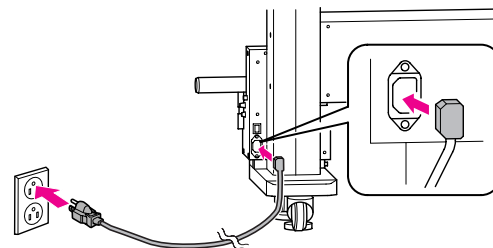 


Setting up 設定

 
22

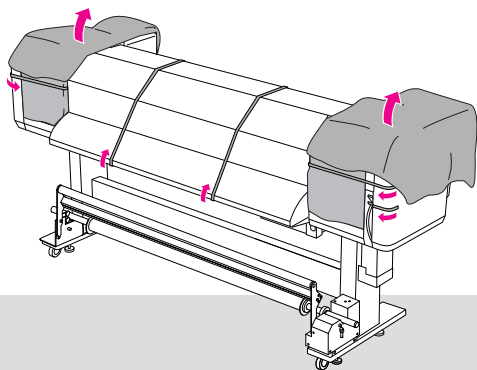


23

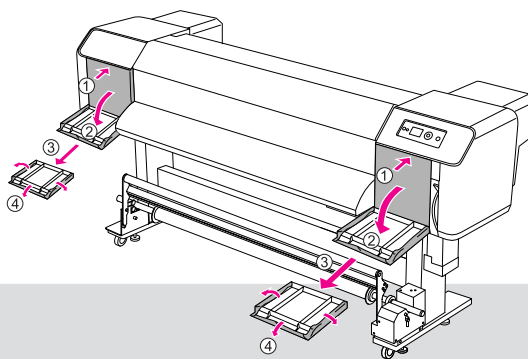 


24

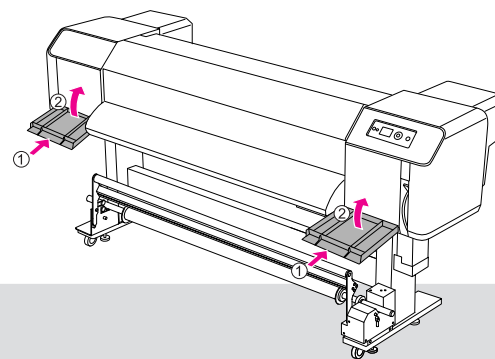 


25

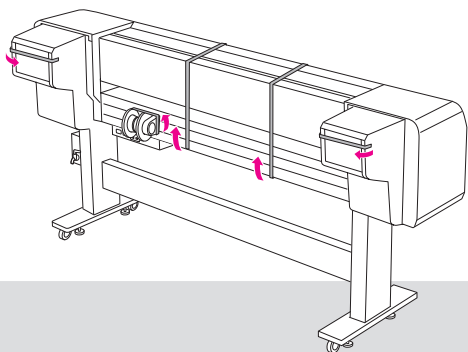 

26

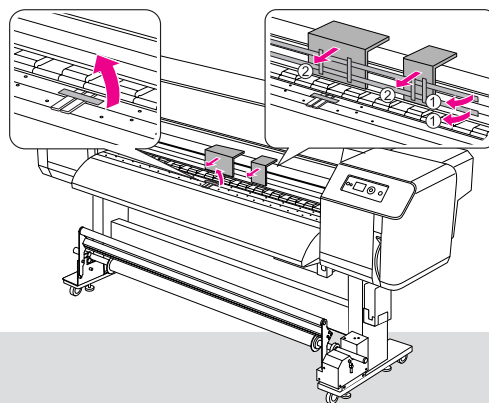 


27

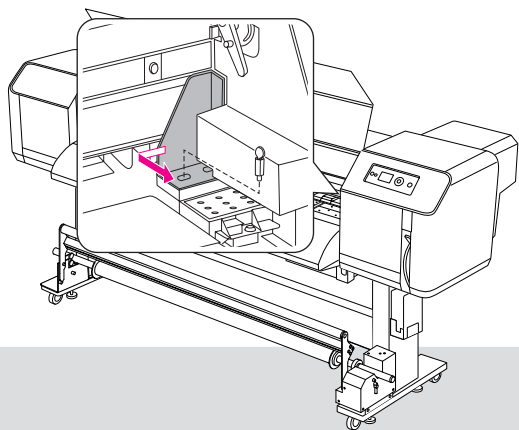 


❑ Do not re-install the metal plate. Store it for later use.

❑ 請勿再安裝金屬板。請將其保存以備日後使用。

 
28

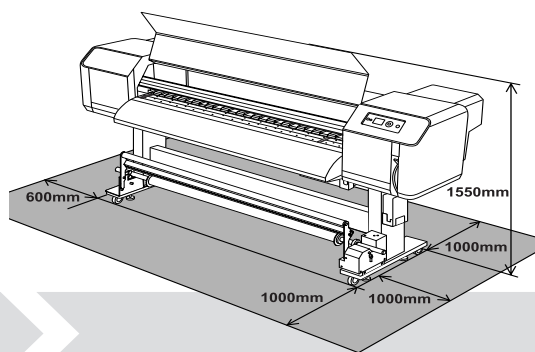


29

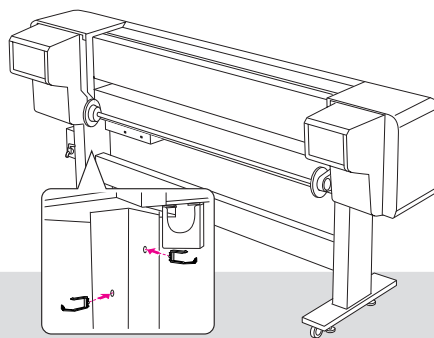 

30

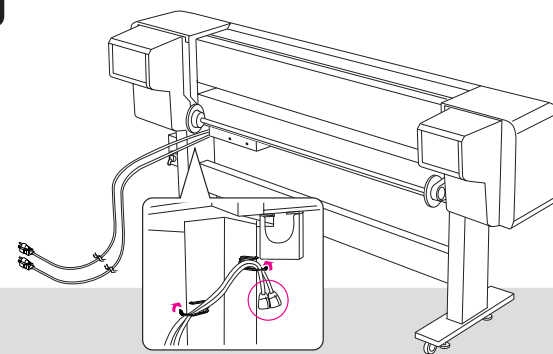 


31

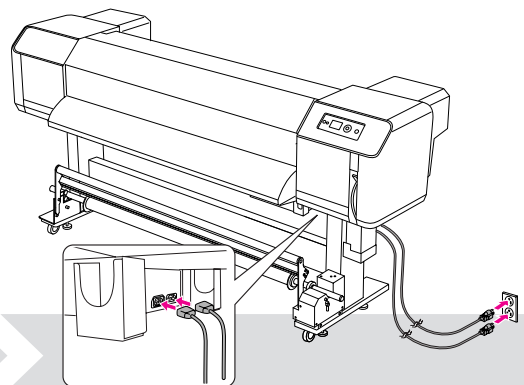 


❑ A total capacity of 22A (100-120 V region) or 12A (200-240 V region) is required for plugging in the two power cables. If necessary, plug the two power cables into different power sources.

❑ 總額定電流為 22A (100-120 V 地區) 或 12A (220-240 V 地區) 都需要插上兩條電源線。若有需要，請將這兩條電源線插在不同的電源插座。

 32

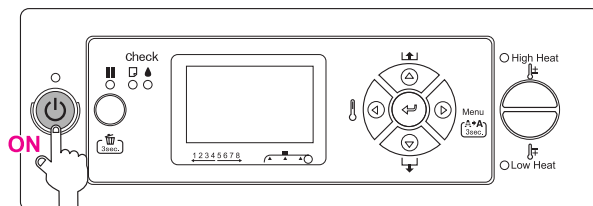


33

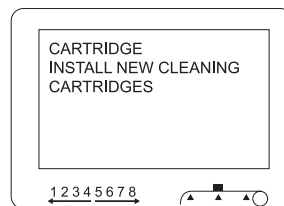 


34

 
Cleaning cartridges

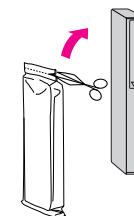

35

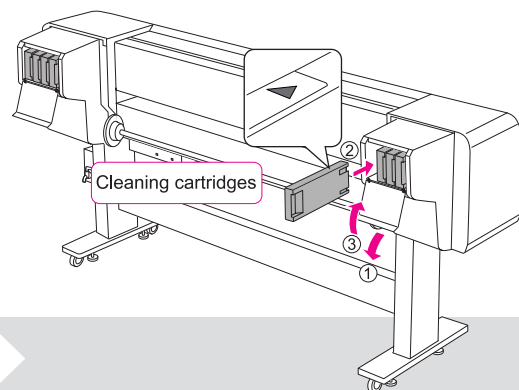 


36

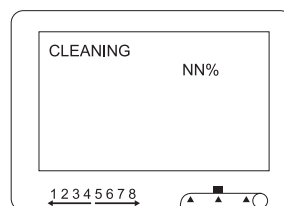 


about 8 min. 約 8 分鐘

 
37

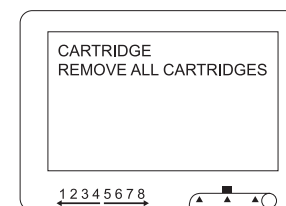

38

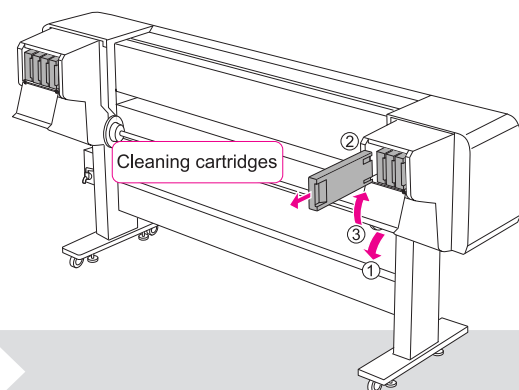 


39

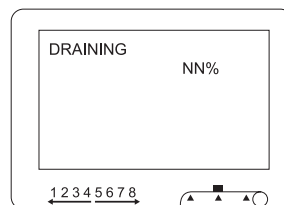 


about 12 min. 約 12 分鐘

 40

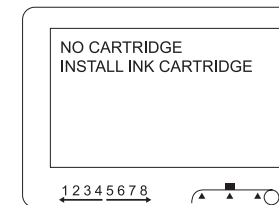


41

 
Ink cartridges

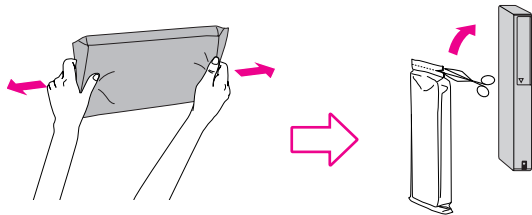


42

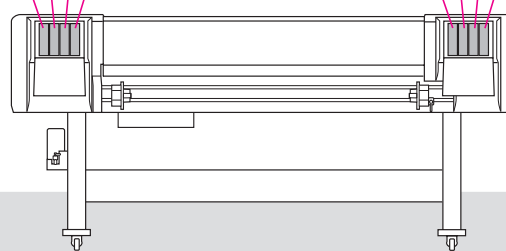 Magenta
CyanYellow
BlackLight Magenta
Light CyanGreen
Orange

 43

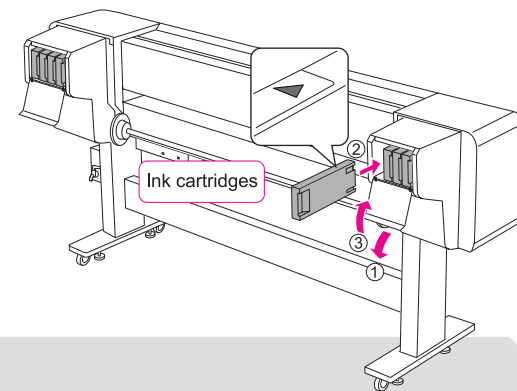


44

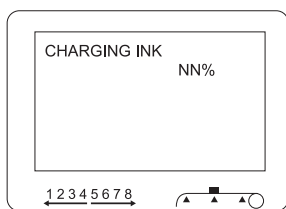 


about 18 min. 約 18 分鐘

 
45

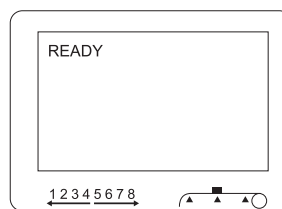


46

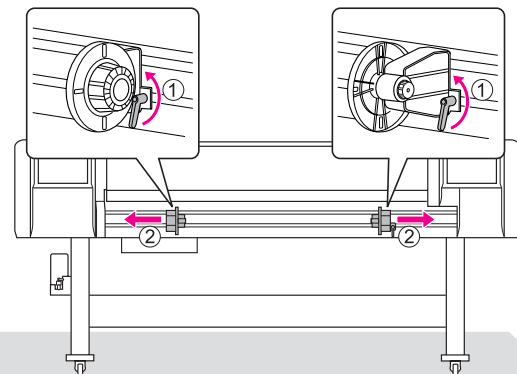 


47

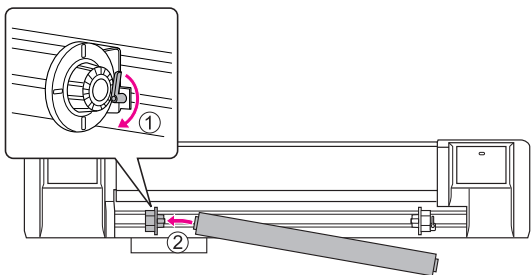 


48

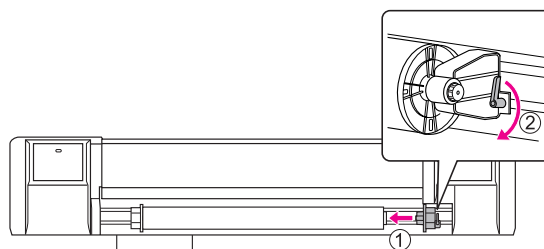 


49

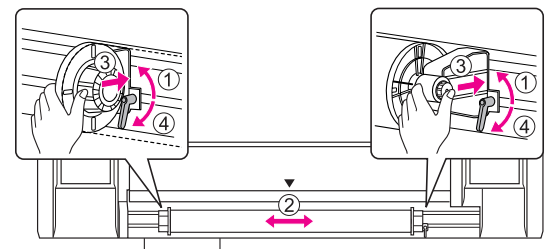 


50

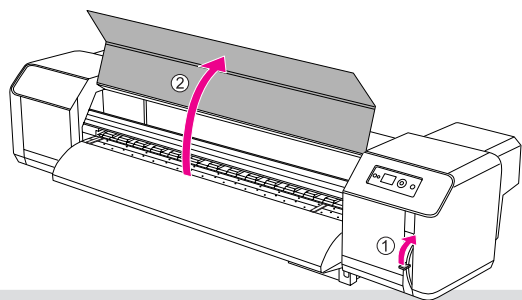 


51

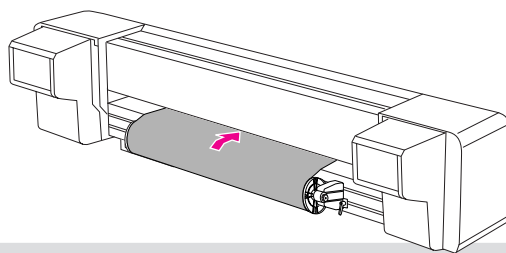 

52

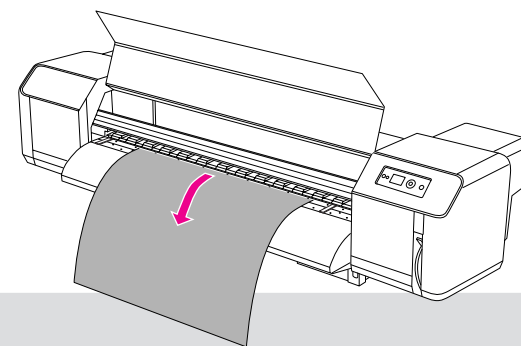 


53

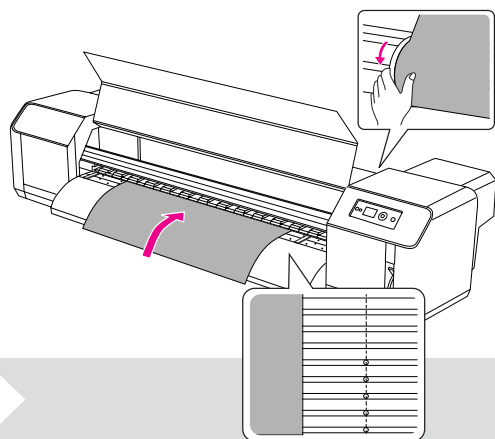 

□ Confirm that the right edge of the roll media does not go beyond the loading mark. If it does, it may affect print quality.


□ 請確認滾筒紙的右邊沒有超過紙張的設定位置。若超過了，可能會影響列印品質。

 54

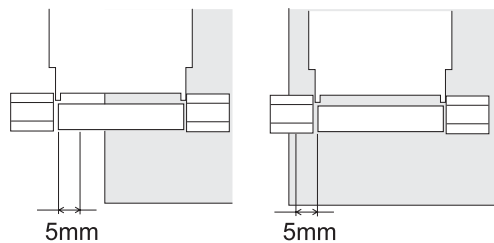

5mm

 5mm

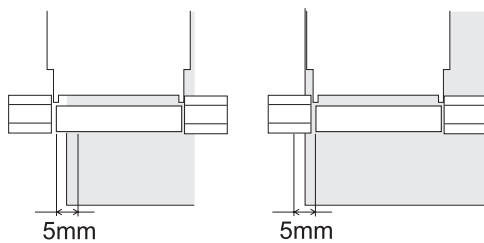

5mm

 
5mm



→ 56



→ 55

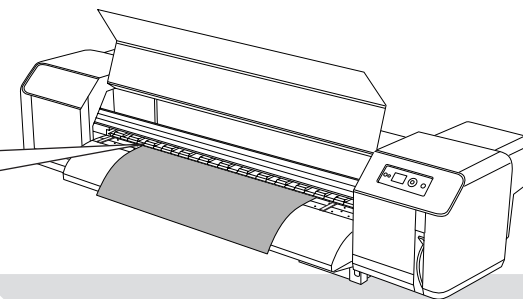





❑ When setting the roll media, set both sides of the media at least 5 mm away from the edge of the pressurizing roller. Slippage or creases may occur during printing.

❑ 當設定滾筒紙時，將紙張的兩邊至少距離壓紙滾筒的邊緣 5 mm。否則，列印時可能會發生滑動或皺痕。

 
55

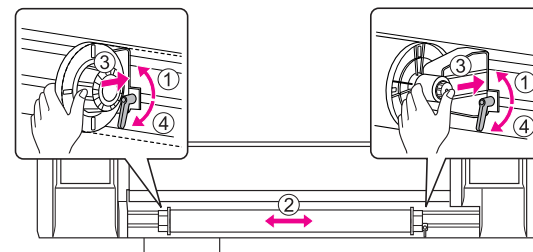

56

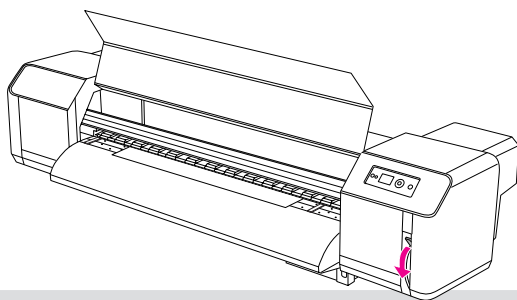 


57

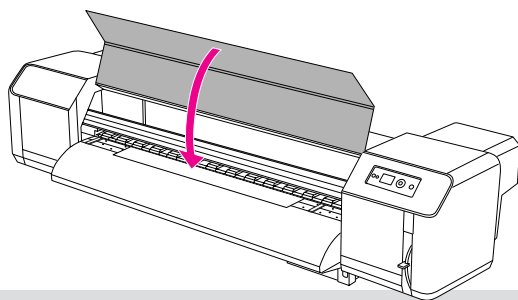 


Test printing 測試列印

 
58

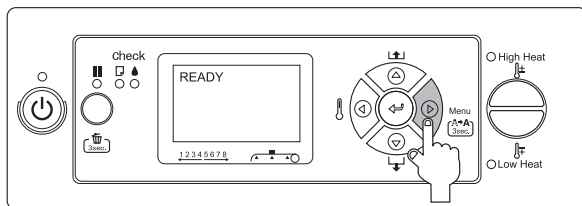


59

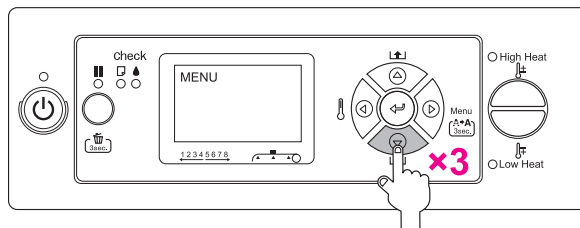 


60

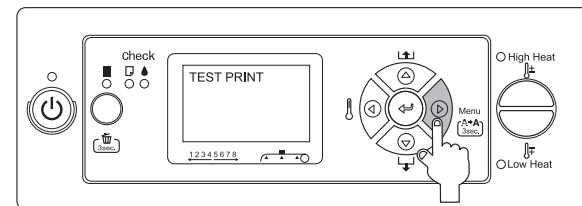 

61

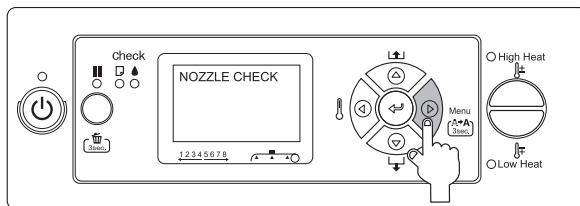 

62

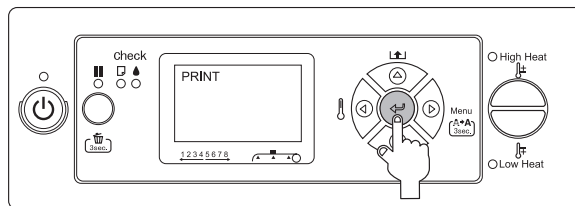 

63

 


67




64


64

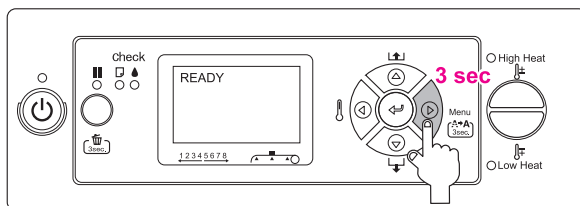

65

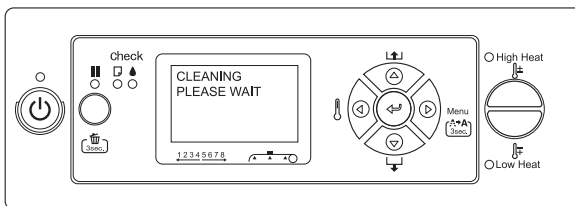 


66

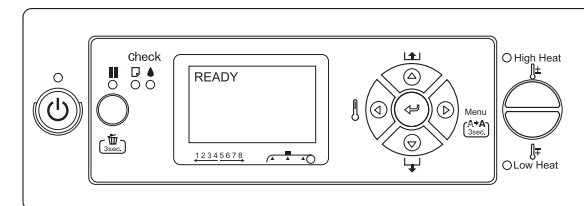 


58

 67

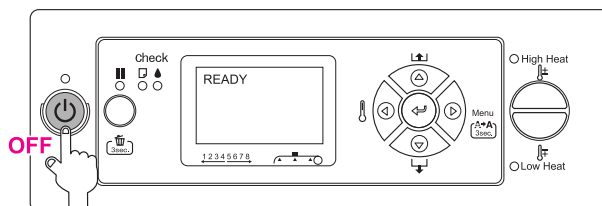


Software installation 安裝軟體

 68 USB

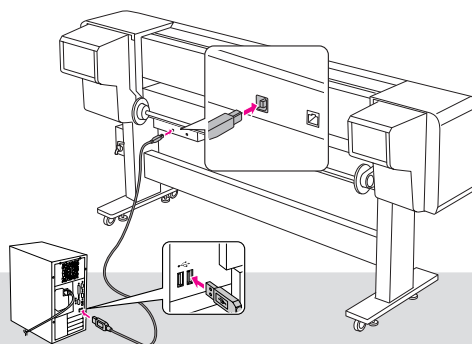


69

 Ethernet 乙太網路

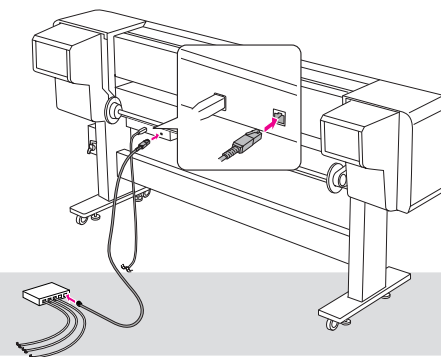


70

 ①

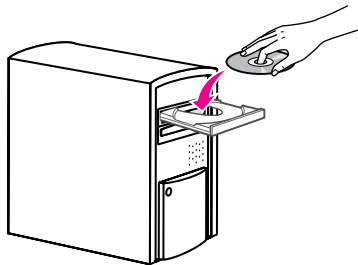


Windows only 僅適用於 Windows

 ②

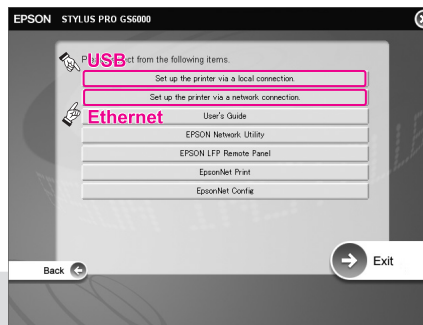


71

 Windows

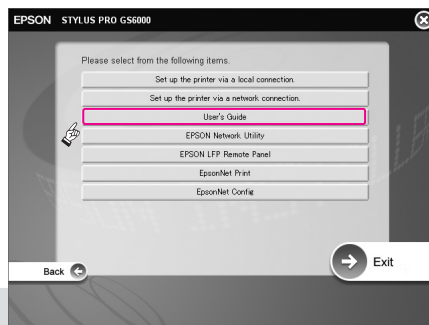

Mac OS

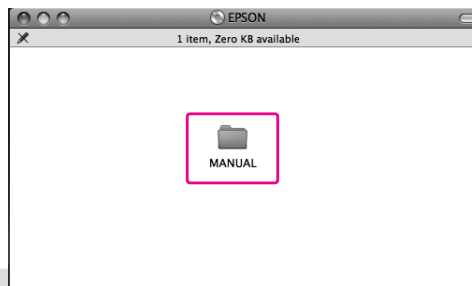 

❑ See the User's Guide for detailed information on the printer.

❑ 請參考進階使用說明中有關印表機的詳細資料。

For United Kingdom Users

Use of options

EPSON (UK) Limited shall not be liable against any damages or problems arising from the use of any options or consumable products other than those designated as Original EPSON Products or EPSON Approved Products by EPSON (UK) Limited.

Safety information



Warning:

This appliance must be earthed. Refer to rating plate for voltage and check that the appliance voltage corresponds to the supply voltage.

Important:

The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

Green and yellow - Earth

Blue - Neutral

Brown - Live

If you have to fit a plug:

As the colours of the mains lead of this appliance may not match coloured markings used to identify the terminals in a plug, please proceed as follows:

The green and yellow wire must be connected to the terminal in the plug which is marked with the letter E or earth symbol (\perp).

The blue wire must be connected to the terminal in the plug marked with the letter N.

The brown wire must be connected to the terminal in the plug marked with the letter L.

If damage occurs to the plug, replace the cord set or consult a qualified electrician.

Replace fuses only with a fuse of the correct size and rating.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson printer. Epson is not responsible for any use of this information as applied to other printers. Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation.

EPSON® is a registered trademark, and EPSON STYLUS™ and Exceed Your Vision are trademarks of Seiko Epson Corporation.

Microsoft® and Windows® are registered trademarks of Microsoft Corporation.

Apple® and Macintosh® are registered trademarks of Apple Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Copyright © 2008 Seiko Epson Corporation. All rights reserved.

商品中文標示

產品名稱：EPSON 大圖輸出機

型號：EPSON STYLUS PRO GS6000

電力規格

- ☐ 額定電壓：AC 100-120 V
- ☐ 輸入電壓範圍：AC 90 至 132 V
- ☐ 額定頻率範圍：50 至 60 Hz
- ☐ 輸入頻率範圍：49 至 51 Hz
- ☐ 額定電流：22 A
- ☐ 耗電量：約 680 W
在省電模式下，約 24 W
在關機模式下，約 3 W

警語

檢修印表機前，請先拔掉機器的電源線。

功能規格

- ☐ 解析度：最大可達 1440 x 1440 dpi
- ☐ 適用系統：
根據所使用的 RIP 規格而定

使用方法

見內附相關說明文件。

緊急處理方法

發生下列狀況時，請先拔下印表機的電源線並洽詢 Epson 授權服務中心：

- ☐ 電源線或插頭損壞
- ☐ 有液體噴灑到印表機
- ☐ 印表機摔落或鐵架損壞
- ☐ 印表機無法正常操作或是列印品質與原來有明顯落差

注意事項

- ☐ 只能使用印表機標籤上所註明的電源規格。
- ☐ 請保持工作場所的通風良好。

製造編號或製造年份：見機體標示

生產國別：見機體標示

製造商：SEIKO EPSON CORPORATION

地址：80 Harashinden, Hirooka, Shiojiri-shi, Nagano-Ken, 399-0785, JAPAN

電話：81-263-52-2552

進口商：台灣愛普生科技股份有限公司

地址：台北市信義區松仁路 7 號 14 樓

電話：(02) 8786-6688 (代表號)



廢電池請回收



Printed in XXXXXX



411214800