

致	Epson 愛用者
文件來源	Epson 客服中心
主題敘述	如何修改 Epson Photo+ Tool 拖放列印檔案的預設印表機？
適用機型	L120, L121, L1110, L1210, L805, L3110, L3116, L3210, L3216, L3150, L3156, L3250, L3256, L3260, L4150, L4160, L4260, L5190, L5196, L5290, L6170, L6270, L6190, L6290, L6580, L14150, L15160, M1120, M1170, M2110, M2120, M2170, M3170, M15140, XP-2101, XP-4101, XP-15010, WF-2831, WF-2861, WF-3821, WF-7311

內文說明：透過 Epson Photo+ Tool 的設定頁面修改預設印表機。

範例機型：L5290

步驟 1：開啟[Epson Photo+ Tool]程式。



步驟 2：點選[顯示設定畫面]。



步驟 3 : 分別修改[拖放(相片)]、[拖放(文件)]內的印表機。相片與文件列印可分別選擇不同機型的印表機。



步驟 4 : 按下[確定]



---End---