

LQ-310 安裝說明

清點配件



412550100

EPSON
EXCEED YOUR VISION

1

僅特定國家/地區隨機內附。
插頭的外形會因國家/地區而有不同。

組裝印表機

2

向上拉並穩穩推入

安裝

安裝

移除 打開

確定移除印表機中的所有保護膠帶

請勿觸碰印表機內部的白色排線

移除

向上推並固定

旋緊色帶

將色帶插入印字頭和印字頭座之間

注意：請勿將色帶插入印字頭座的遠端。

壓住兩側的塑膠卡榫使其插入印表機

旋緊

印字頭座

< 正確 > < 錯誤 >

接續

掛回並推入

安裝 闔上印表機上蓋

安裝紙張張力裝置

連接電源線

3

請確認電源是 (關閉) 的狀態

將電源線連接至印表機，然後將電源插頭插入有接地的電源插座上。

將印表機連接至電腦

4 注意：

- 在插入界面連接線之前，請先確認接頭的連接方向是否正確。
- 印表機開啓時請勿連接或拔除電源線。

USB

請將連接線的接頭牢牢地插入印表機的 USB 連接埠

將連接線的另一端連接至電腦主機的 USB 連接埠

IEEE1284 (並行)

請將並行界面連接線接頭，牢牢地插入印表機的並行界面連接埠

牢牢地插入並固定

EIA-232D (序列)


請將並行界面連接線接頭，牢牢地插入印表機的並行界面連接埠

牢牢地插入並固定

接續背面

安裝印表機軟體


5 Windows 8

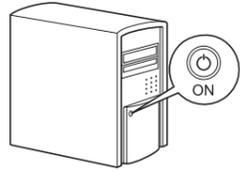

<http://www.epson.com.tw/>

下載並安裝印表機驅動程式。

Windows 7/Vista/XP/2000

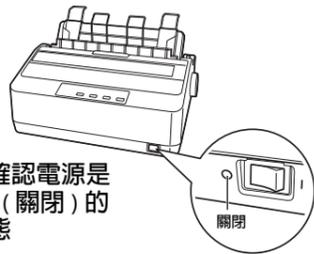

請確認電源是
○ (關閉) 的狀態

將百寶箱光碟片放入光碟機中



請依照指示操作




選擇 [是] 繼續

附註：
安裝印表機軟體時，可能必須具有管理員權限。如果您有任何問題，請洽詢管理員。

放置紙張

6 在連續報表紙上列印

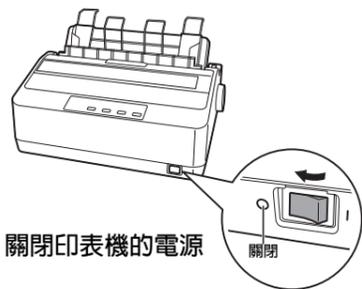

關閉印表機的電源



移除




將紙張選擇桿往前移


為清楚呈現內部，圖解已拆下印表機上蓋，不過上蓋並沒有拆下的需要。




將牽引器上的送紙輪固定桿往上扳，以鬆開送紙輪

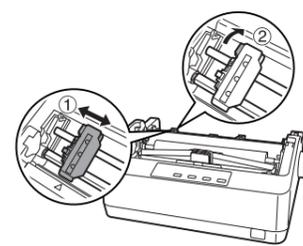

將左邊的送紙輪滑至 ▽ 並固定

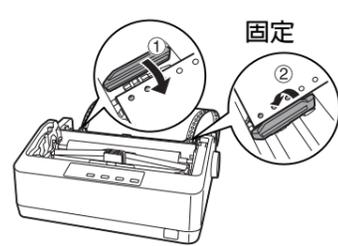

將右邊的送紙輪滑至紙張的邊緣

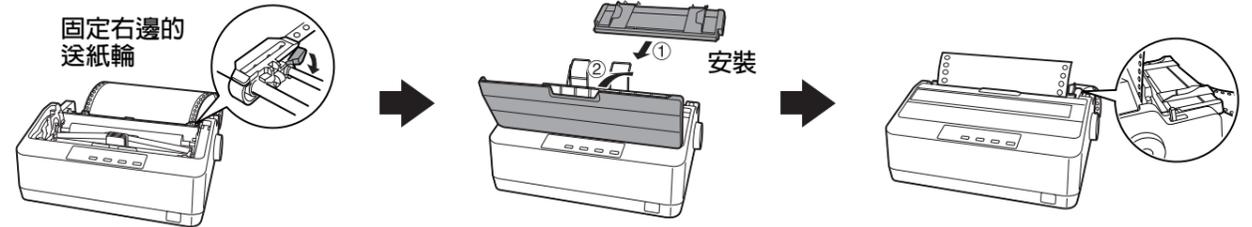


固定右邊的送紙輪

安裝

列印單張紙



將紙張選擇桿往後移至單張紙進紙的位置

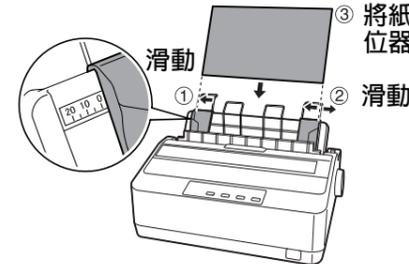

將左邊的紙張邊緣定位器滑至 0 位置

將紙張左側靠齊邊緣定位器放入 (列印面朝上)

取得更多資訊

7 印表機安裝完成，並準備就緒。

關於印表機和故障排除的詳細資訊，請查看“進階使用說明”。

將百寶箱光碟片放入光碟機中



請依照指示操作



若無法在“進階使用說明”中找到所需的資訊，請瀏覽以下網站：

<http://www.epson.com.tw/>

拖曳可複製，雙擊則可開啓

其他資訊

電力規格

- 額定電壓：AC 99 至 132 V
- 額定頻率：50 至 60 Hz
- 額定電流：1.5 A
- 耗電量：26 W (ISO/IEC 10561 letter pattern)

警語

檢修本產品之前，請先拔掉本產品的電源線。

功能規格

列印方式：撞擊式點矩陣

緊急處理方法

- 發生下列狀況時，請先拔下印表機的電源線並洽詢 Epson 授權服務中心：
- 電源線或插頭損壞
 - 有液體噴灑到印表機
 - 印表機摔落或鐵架損壞
 - 印表機無法正常操作或是列印品質與原來有明顯落差

注意事項

- 只能使用印表機標籤上所註明的電源規格。
- 請遵守印表機上所有的警示和說明。

製造年份及製造號碼：見機體標示
生產國別：見機體標示

製造商：SEIKO EPSON CORPORATION
地址：2070 Kotobukikoaka, Matsumoto-shi, Nagano-ken, 399-8702, Japan
電話：81-263-86-9668

進口商：台灣愛普生科技股份有限公司
地址：台北市信義區松仁路 7 號 14 樓
電話：(02) 8786-6688 (代表號)

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein. Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions. Seiko Epson Corporation and its affiliates shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation. EPSON and EXCEED YOUR VISION are registered trademarks of Seiko Epson Corporation. Microsoft®, Windows®, and Windows Vista® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners.

Epson disclaims any and all rights in those marks.

The contents of this manual are subject to change without notice.

Copyright © 2013 Seiko Epson Corporation. All rights reserved.

Printed in XXXXX

接續