

EPSON®

EPSON PERFECTION™ 640U

Color Image Scanner

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product.

SEIKO EPSON CORPORATION and its affiliates shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

EPSON is a registered trademark of SEIKO EPSON CORPORATION.

IBM and PS/2 are registered trademarks of International Business Machines Corporation. Apple, Macintosh, Mac, iMac, and Power Macintosh are registered trademarks of Apple Computer, Inc.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States of America and other countries.

Adobe and PhotoDeluxe are registered trademarks of Adobe Systems Incorporated.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective companies.

Copyright © 2000 by SEIKO EPSON CORPORATION, Nagano, Japan.



Printed on Recycled Paper.

Reference Guide

Contents

Introduction

Features	1
About This Guide	2

Chapter 1 Using the Buttons

The 3 Buttons Feature	1-2
The EPSON SMART PANEL for Scanner	1-3
About applications in the EPSON SMART PANEL window	1-3
Assigning an application to the Start button	1-10
Using the Copy Button to Copy	1-11
Using the Scan Button to Scan	1-11
Assigning Another Application to the Buttons on Windows . . .	1-13

Chapter 2 Scanning Basics

Selecting a Mode	2-2
Full Auto mode	2-2
Manual mode	2-3
Scanning from the Full Auto Mode	2-4
Scanning from the Manual Mode	2-7
Optimizing Image Scanning	2-8
Manually optimizing images	2-9
Displaying a preview image	2-10
Adjusting the Highlight Setting	2-10
Adjusting the Shadow Setting	2-12
Adjusting the Gamma Setting	2-13
Applying a Preset Tone Curve	2-14
Adjusting the Gray Balance Intensity Setting	2-17
Adjusting the Saturation Setting	2-18
Using the Tone Curve	2-18
Saving your own tone curve	2-21

Deleting a customized tone curve	2-22
Closing the Tone Correction dialog box	2-22

Chapter 3 Understanding EPSON TWAIN Features

Overview	3-2
Previewing Images	3-3
Image Types	3-6
Image Type list	3-6
Changing Resolution	3-8
Unsharp Mask	3-8
Size	3-8
Image Controls	3-9
Tone Correction	3-12
Color Adjustment	3-14
Auto Exposure	3-15
Reset Button	3-16
Auto Locate	3-16
Configuration Button	3-18
Scan Button	3-20

Chapter 4 Calibrating Your System

Overview	4-2
Calibrating Your Screen	4-2
For Windows 98 and 2000 users	4-3
For Macintosh users	4-5
Using ICM/sRGB (For Windows Users)	4-6
Using ColorSync (For Macintosh Users)	4-7

Chapter 5 Maintenance and Troubleshooting

Maintenance	5-3
Cleaning the scanner	5-3
Replacing the fluorescent lamp	5-4
Removing the Cover for Thick or Large Documents	5-4

Using the Stand to Hold the Scanner	5-6
Transporting the Scanner	5-7
Problems and Solutions	5-7
Error Indicator	5-8
Operating Problems	5-9
The fluorescent lamp does not come on..	5-10
The scanner does not scan.	5-10
The scanner software does not work properly..	5-10
Quality Problems.	5-11
The entire image is distorted or blurred.	5-11
Part of the image is distorted or blurred.	5-11
Edges of the document are not scanned..	5-12
Colors are patchy or distorted at the edges of the image.	5-12
The image is faint or out of focus.	5-12
The image is too dark.	5-12
Straight lines in the image come out jagged.	5-13
The image does not look the same as the original.	5-13
A line of dots is always missing from the scanned image..	5-13
When scanning printed matter, textured patterns of dots appear inside particular areas of the image.	5-14
Colors on your monitor are different from those in the original image..	5-14
Printed colors are different from those in the original image..	5-14
The printed image is larger or smaller than the original..	5-15
Scanned images cannot be printed or come out garbled when printed.	5-15
Software Setup Problems	5-15
You cannot install EPSON TWAIN.	5-15
Software Operation Problems	5-16
You cannot start EPSON TWAIN..	5-16
Scanning Problems	5-17
Image is dark, with little or no detail.	5-17
You cannot scan an image or you only get a few dots for the scanned image..	5-17
Moiré (cross-hatch) patterns appear in the scanned image	5-17
Colors differ from the original..	5-17
Pressing the button on the scanner does not start scanning..	5-18
Scanned image by using the button is missing..	5-18
Upgrading from Windows 98 to Windows 2000	5-18

Recovering from Scanner Software Installation Problems on Windows	
5-21	
For Windows 98 users	5-22
For Windows 2000 users	5-25
Sizing up Your System.	5-27
RAM and hard disk size.	5-27
Accelerator boards	5-27
Video cards.	5-27
Monitors	5-28
File compression software	5-28

Appendix A Technical Specifications

System Requirements	A-2
For PCs	A-2
For Macintosh computers.	A-3
Scanning.	A-4
Electrical.	A-5
AC Adapter	A-5
Environmental	A-6
Safety Approvals	A-7
Scanner	A-7
AC adapter	A-7
CE marking	A-8
Scanner	A-8
AC adapter	A-8
USB Interface.	A-9
Initialization Methods	A-10

Appendix B Contacting Customer Support

Overview	B-2
--------------------	-----

Glossary

Introduction

Features

The CD-ROM that comes with your scanner contains the EPSON scanner software suite, including EPSON TWAIN. The software suite is the perfect companion for your EPSON scanner. Using your scanner and the software from the CD-ROM, you can scan images in color, grayscale, or black and white, and save them as files or print them out. Other software such as EPSON SMART PANEL for Scanner support the 3 Buttons (↵ Start/⊞ Copy/↵ Scan) feature to make scanning much easier.

- ❑ The software supports the following EPSON scanner:
EPSON Perfection 640U
- ❑ EPSON TWAIN directly controls all of the features of your EPSON scanner. This program is the standard cross-platform interface for other applications.

The CD-ROM also contains other applications that let you use your scanner in exciting new ways. For detailed information, refer to the supporting documentation.

- ❑ EPSON SMART PANEL for Scanner allows your scanner to access software that supports the 3 Buttons feature.
- ❑ EPSON Screen Calibration utility allows you to calibrate your scanner and monitor to reproduce images identical to the originals.

About This Guide

The information in this guide is divided into nine chapters, with a glossary and index provided for your reference.

- ❑ Chapter 1 describes how to use the buttons on your scanner.
- ❑ Chapter 2 explains the basic steps of scanning.
- ❑ Chapter 3 provides a complete description of EPSON TWAIN features. Refer to this chapter when modifying scanning settings.
- ❑ Chapter 4 covers how to calibrate your monitor to match your EPSON scanner. If you notice that colors on your screen or in your printout do not match the original image, see this chapter.
- ❑ Chapter 5 contains maintenance and troubleshooting information. If your software does not operate properly or scanned images are not what you expect, see this chapter.
- ❑ Appendix A contains technical specifications information.
- ❑ Appendix B contains customer support information.

Notes contain important information and useful tips about your scanner and software.

To set up and use the scanner, see your scanner's *Startup Guide*. EPSON TWAIN online help can also provide you with information on modifying EPSON TWAIN settings.

Chapter 1

Using the Buttons

The 3 Buttons Feature	1-2
The EPSON SMART PANEL for Scanner	1-3
About applications in the EPSON SMART PANEL window	1-3
Assigning an application to the Start button	1-10
Using the Copy Button to Copy	1-11
Using the Scan Button to Scan	1-12
Assigning Another Application to the Buttons on Windows...	1-13


The 3 Buttons Feature

The 3 Buttons (🔍 Start/📄 Copy/📤 Scan) feature allows you to scan and send data to a target application with a single press of the 🔍 Start, 📄 Copy, or 📤 Scan button on the scanner. You can assign an application to the 🔍 Start button in the EPSON SMART PANEL window. The following sections describe the details.

Note for Windows users:

- ❑ *The 3 Buttons feature is supported by Windows 98 and 2000 when the EPSON SMART PANEL for Scanner is not installed. You can assign a desired application to the 🔍 Start, 📄 Copy, or 📤 Scan button on the scanner. See “Assigning Another Application to the Buttons on Windows” on page 1-13 for details on setting up the button.*

- ❑ *Depending on the installed application on your PC, when you press the buttons on the scanner, the following dialog box may appear. If this happens, click Cancel and then set up EPSON SMART PANEL for Scanner as “Scanner events”. This requires you to select SMART PANEL for Scanner from the Send to this application list in the EPSON Perfection640 Properties dialog box. For more details, see “Assigning an application to the buttons” on page 1-14.*

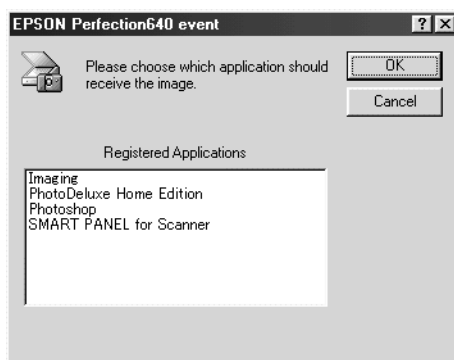

The EPSON SMART PANEL for Scanner

EPSON SMART PANEL for Scanner allows you to scan and send data directly to an assigned application with a single press of the buttons (⏏ Start/📄 Copy/🔍 Scan) on the scanner. You can also obtain photos and documents in digital form quickly and easily. When you install the scanner software, the EPSON SMART PANEL is also installed at the same time. For details, refer to the EPSON SMART PANEL for Scanner documentation.

Note:

For information on the EPSON SMART PANEL for Scanner installation, refer to the Startup Guide.

There are two modes offered by Scan Assistant:

Photo Scan Assistant

Photo Scan Assistant helps you achieve the best results in scanning color documents such as photos and magazines; this mode is used in applications such as Scan to E-mail, Scan to Application, and Scan for Creativity.

Document Scan Assistant

Document Scan Assistant helps you scan documents for processing by the optical character recognition (OCR) software; this mode is used in Scan to OCR.



About applications in the EPSON SMART PANEL window


The EPSON SMART PANEL window contains the following applications:

- ❑ “Copy” on page 1-5
- ❑ “Scan to E-mail” on page 1-6


- ❑ “Scan to OCR” on page 1-7
- ❑ “Photo Print” on page 1-8
- ❑ “Scan to Application” on page 1-9
- ❑ “Scan for Creativity” on page 1-10

These applications can access your scanner, which means by clicking an application’s icon on the EPSON SMART PANEL window, you can use the scanner to scan and then send data directly to the application.

In addition, you can assign any of the above applications to the  Start button on the scanner. This makes scanning and then sending data to the assigned application even simpler. All you need to do is press the  Start button.

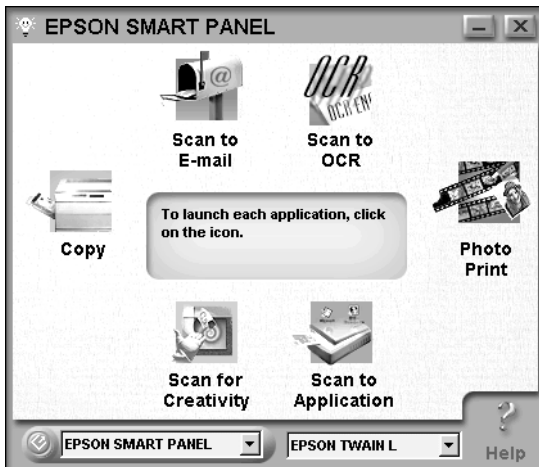

Note:


The application currently assigned to the  Start button has the Start button icon added to its application icon.

Copy

Use this application to turn your scanner into a digital copy machine. The application looks like a real copy machine, yet its functions are far more powerful and flexible than the conventional copy machines. For details, refer to the EPSON SMART PANEL for Scanner documentation.




Note:

By default, this application has been assigned to the  Copy button. For details, see “Using the Copy Button to Copy” on page 1-11.

Scan to E-mail

Use this application to scan and save the result or send e-mails with your scanned image. When the following Photo Scan Assistant dialog box appears, you can change the settings. For details, refer to the EPSON SMART PANEL for Scanner documentation.

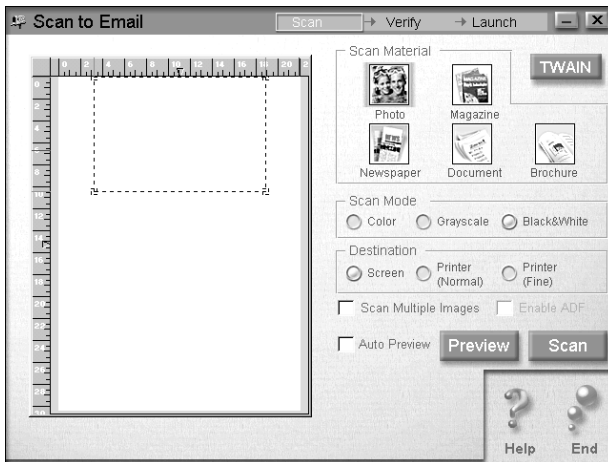

Scan to OCR

Use this application to scan and convert images to text. The converted text can be saved or sent to a word processing application. When the following Document Scan Assistant dialog box appears, you can change the settings. For details, refer to the EPSON SMART PANEL for Scanner documentation.

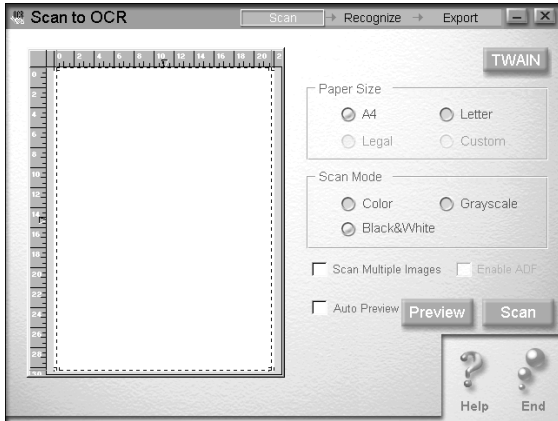



Photo Print

Use this application to scan and then print images as photos. You can print in various sizes, or place several photos on the same page. You can also create collages or print several versions of the same image easily. For details, refer to the EPSON SMART PANEL for Scanner documentation.




Scan to Application

Use this application to scan and send images to an application. When the following Photo Scan Assistant dialog box appears, you can change the settings. For details, refer to the EPSON SMART PANEL for Scanner documentation.

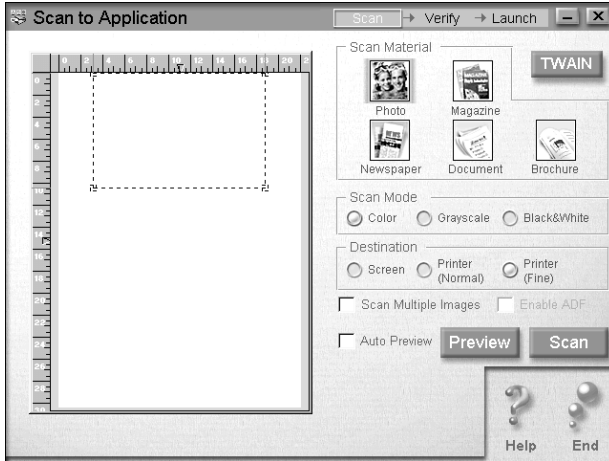


Scan for Creativity


This application can be used only if Adobe® PhotoDeluxe® is installed. When the following Photo Scan Assistant dialog box appears, you can change the settings. For details, refer to the EPSON SMART PANEL for Scanner documentation.

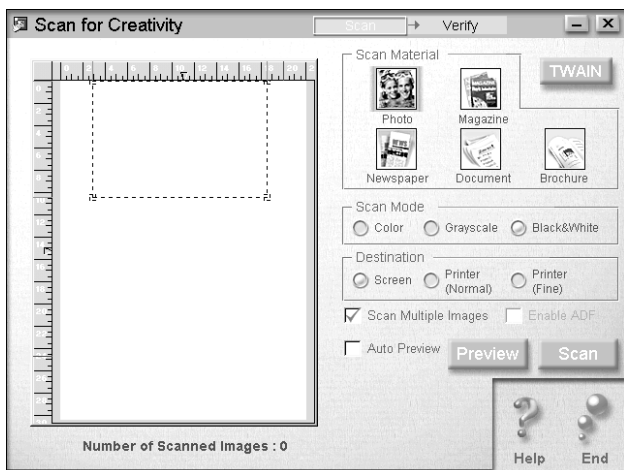


Note:

By default, this application is assigned to the  Scan button. For details, see “Using the Scan Button to Scan” on page 1-11.


Assigning an application to the Start button


To assign an application in the EPSON SMART PANEL window to the  Start button on the scanner, follow the steps below.

1. Click the EPSON SMART PANEL for Scanner icon on the task bar to start EPSON SMART PANEL for Scanner.
2. Select an application from the EPSON SMART PANEL list box.

The selected application is assigned to the  Start button.

Using the Copy Button to Copy


You can use the  Copy button on the scanner (together with the Copy application in the EPSON SMART PANEL window) to make copies, as follows:

Press the  Copy button on the scanner. The following window appears.





The document is scanned and then printed in high quality.


Note:

- To cancel the operation or change the setting, click the  Cancel button on the Copy Utility window, and then change the setting.
- For details about the settings, refer to the EPSON SMART PANEL for Scanner documentation.

Using the Scan Button to Scan

If PhotoDeluxe is installed, you can use the  Scan button on the scanner to scan and send images to PhotoDeluxe.

1. Press the  Scan button on the scanner. The following window appears.

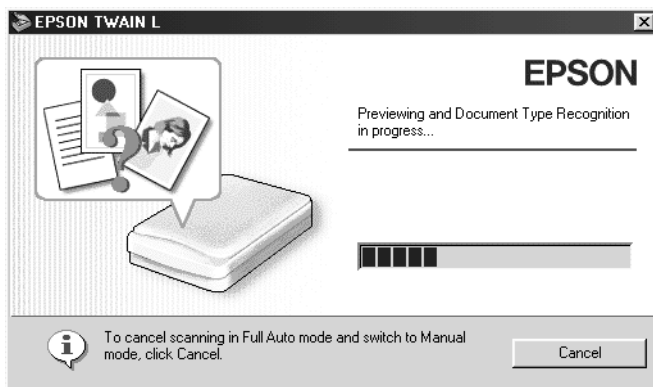


EPSON TWAIN automatically previews the images and recognizes the image type.

Note:

To cancel the operation, click Cancel and then click Close.

2. The following window appears with a progress bar to indicate the scanning progress. You can see the type of document being scanned. When scanning multiple photos, you scan also see the number of scanned image.

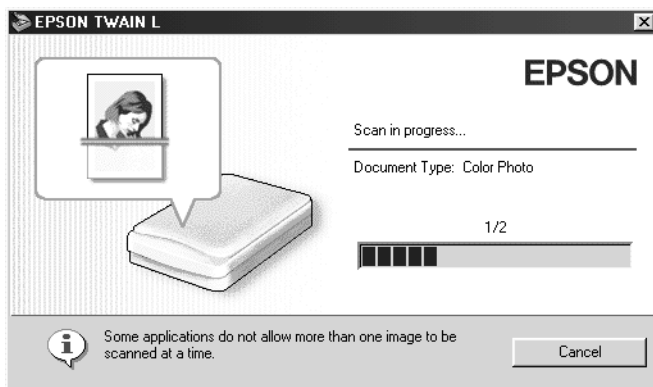


Images are automatically optimized. You can scan easily and quickly without changing any complex settings. EPSON TWAIN automatically recognizes the image type, locates the target image, detects the skew of the target image, adjusts the exposure, and then starts scanning.

3. The scanned image is sent to PhotoDeluxe.

Assigning Another Application to the Buttons on Windows

You can assign any application, other than EPSON SMART PANEL for Scanner, which supports “Scanner events” (for example, Microsoft Imaging for Windows, as long as it is installed) on Windows 98 or Windows 2000 to the button on the scanner. When you press the button, EPSON TWAIN’s dialog box opens or scanning starts and the scanned image is automatically sent to the application (which does not need to be opened).

Once EPSON TWAIN is installed, the Scanners and Cameras icon appears in Control Panel, and your scanner is listed in the Scanners and Cameras Properties dialog box similar to the one shown below.

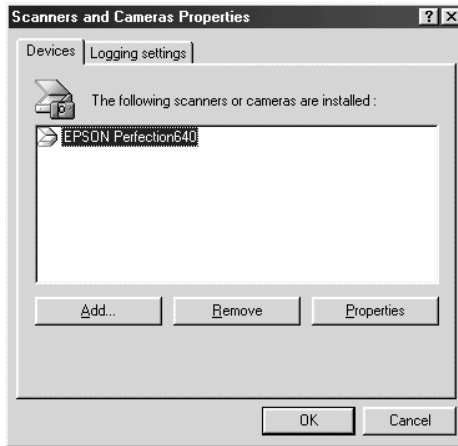

Note for Macintosh users:


On your Macintosh computer, you cannot assign any application other than EPSON SMART PANEL for Scanner to the buttons on the scanner.

Assigning an application to the buttons

Make sure the application supports "Scanner events", and then follow the steps.

1. Double-click the Scanners and Cameras icon in Control Panel.

2. In the Scanners and Cameras Properties dialog box, select your scanner from the installed scanners and cameras list. Click Properties, and then select the Events tab.

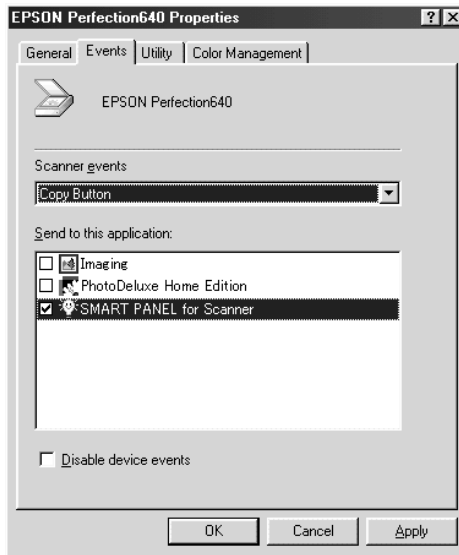

3. Select a desired button from the Scanner events list and then select the check box of the desired application in the Send to this application list; clear the rest of the check boxes.

Note:

- If multiple applications are selected, when the button is pressed, a dialog box appears to prompt you to select just one from the list.*
 - Some applications do not support linkage to scanners and digital cameras. Only applications in the Send to this application list support linkage.*
4. Click Apply and then OK.

Disabling the button

If you need to disable “Scanner events”, select the Disable device events check box in the EPSON Perfection640 Properties dialog box. When this check box is clear, Windows can detect if the button is pressed and then launch the application you selected in the Send to this application list.

Chapter 2


Scanning Basics

Selecting a Mode	2-2
Full Auto mode	2-2
Manual mode	2-3
Scanning from the Full Auto Mode	2-4
Scanning from the Manual Mode	2-7
Optimizing Image Scanning	2-8
Manually optimizing images	2-9
Displaying a preview image	2-10
Adjusting the Highlight Setting	2-10
Adjusting the Shadow Setting	2-12
Adjusting the Gamma Setting	2-13
Applying a Preset Tone Curve	2-14
Adjusting the Gray Balance Intensity Setting	2-17
Adjusting the Saturation Setting	2-18
Using the Tone Curve	2-18
Saving your own tone curve	2-21
Deleting a customized tone curve	2-22
Closing the Tone Correction dialog box	2-22

Selecting a Mode

EPSON TWAIN offers two modes for scanning: Full Auto mode and Manual mode.

Full Auto mode

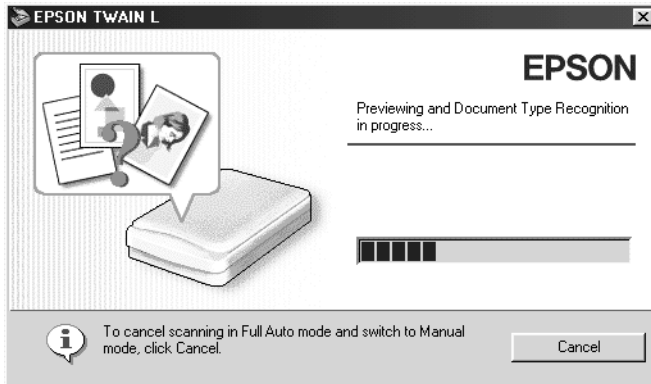


In the Full Auto mode, an image is automatically optimized. If you want to scan quickly and easily without changing any complex settings, select the Full Auto mode. To have more control over your scanning settings, click **Cancel** during preview and document type recognition and then click the Manual Mode button to open the Manual mode window.

Note:

Depending on the image you want to scan, you may not get the expected scanned image. In this case, scan the image in the Manual mode.


Manual mode

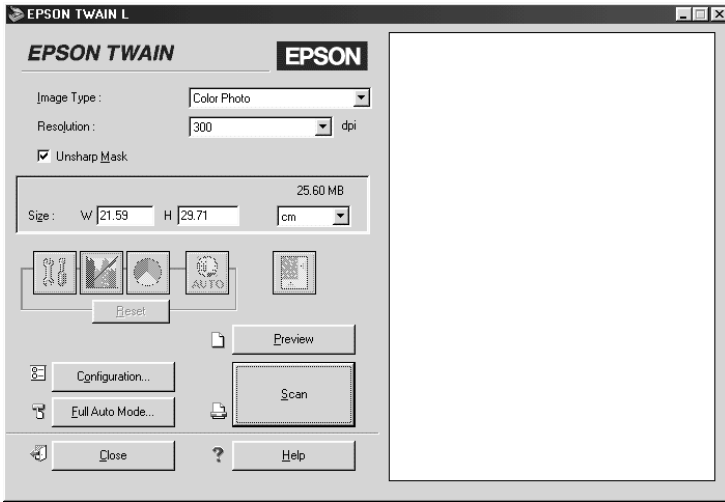

In the Manual mode, there are many more options available to give you greater control over your scanning. If you want to sharpen, correct, enhance or preview your images before scanning them, select the Manual mode. If you do not need all the options that the Manual mode provides, click the Full Auto Mode button to open the Full Auto mode window.

Scanning from the Full Auto Mode


1. Start the TWAIN-compliant application and open EPSON TWAIN. The following window appears.

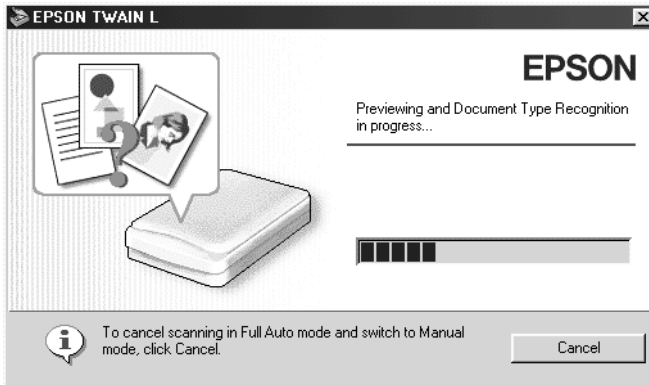

EPSON TWAIN automatically previews the image and recognizes the image type. See "Document Type Recognition setting" on page 2-5.

If you want to make more settings, click Cancel and then click the Manual Mode button to open the Manual mode window.

2. After EPSON TWAIN has previewed and recognized the image type, the following window appears. EPSON TWAIN automatically sets the “Image Location setting” on page 2-6 and “Exposure setting” on page 2-7, and then starts scanning. If you scan multiple photos, the number of scanned image will be indicated.

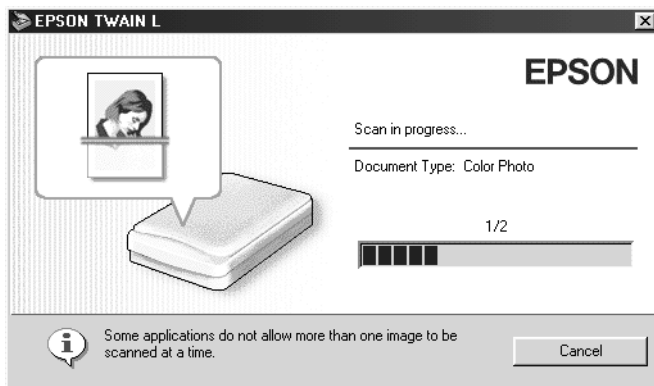

Note:

- ❑ You cannot scan an image which exceeds the available memory or disk space. If you try to scan a very large image, an alert appears on the screen.
- ❑ Before scanning, be sure to calibrate your screen. For details, see “Calibrating Your Screen” on page 4-2.
- ❑ After an image is scanned, be sure to save or export it.

Document Type Recognition setting

The image is automatically recognized as one of the following document type:

Color Photo: 24-bit color scanning

Black & White Photo: 8-bit gray scanning

Illustration:	24-bit color scanning with color smoothing to reduce the colors in an image to limited number of index colors
Text/Line Art:	Black and white scanning
Color Document:	24-bit color scanning with de-screening to remove moiré patterns
Black & White Document:	8-bit gray scanning with de-screening

Note:

A moiré is a cross-hatch pattern that appears on scanned images when scanning printed material. It is a result of interference that occurs due to the difference between the pitches of the scanning and the halftone screens.


Image Location setting

Auto Locate:	The scanner automatically locates and selects the target image. The image appears without white borders. If the document type is photo, Auto Locate applies to each photo; otherwise it covers the whole area of the image.
Detect Skew Angle:	The scanner automatically detects the skew of the target image. If the document type is photo, Detect Skew Angle applies to each photo. If the document type is Text/Line Art, it covers the whole area of the image.

Exposure setting

The scanner automatically optimizes the exposure of an image defined by Auto Locate. The Gamma, Highlight and Shadow settings are automatically set.

Scanning from the Manual Mode

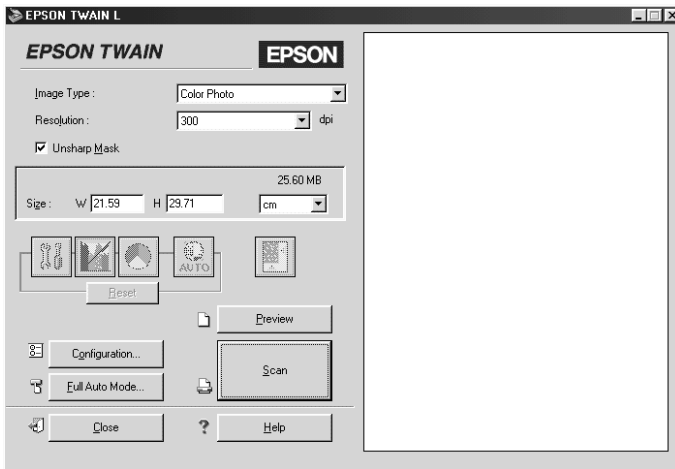

The Manual mode allows you to make detailed settings. You can set parameters for a setting or select special functions provided with EPSON TWAIN to attain the highest quality scanned images.

Note:


- ❑ *Online help also provides you with information on settings. Click Help to access the online help.*

- ❑ *You cannot scan an image which exceeds the available memory or disk space. If you try to scan a very large image, an alert appears on the screen.*

- ❑ *Before scanning, be sure to calibrate your screen. For details, see “Calibrating Your Screen” on page 4-2.*
- ❑ *After an image is scanned, be sure to save or export it.*

Optimizing Image Scanning

EPSON TWAIN can automatically adjust and optimize the exposures and colors of scanned images during scanning. You can also make adjustments manually with the image quality adjustment tools in Manual mode window. This section provides general information on optimizing images with these tools.

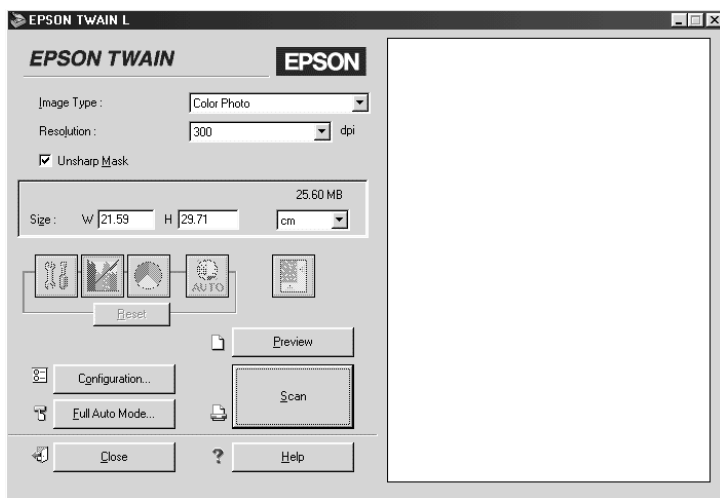

Manual mode window

Note for Macintosh users:

Most illustrations shown in this section are for Windows, so they may vary in appearance from what actually appears on your screen. The instructions are the same, except as noted.

Manually optimizing images

To optimize images manually, adjust the following EPSON TWAIN settings in the order specified below:

Adjust the brightness and contrast

1. Adjust the Highlight and Shadow settings in the Image Controls dialog box. See “Adjusting the Highlight Setting” on page 2-10 and “Adjusting the Shadow Setting” on page 2-12.
2. Adjust the Gamma setting in the Image Controls dialog box. See “Adjusting the Gamma Setting” on page 2-13.
3. Adjust the tone curve with a predefined tone correction setting in the Tone Correction dialog box. See “Applying a Preset Tone Curve” on page 2-14.

Make color adjustments

4. Adjust the Gray Balance Intensity setting in the Color Adjustment dialog box. See “Adjusting the Gray Balance Intensity Setting” on page 2-17.
5. Adjust the Saturation setting in the Color Adjustment dialog box. See “Adjusting the Saturation Setting” on page 2-18.
6. Manually adjust the tone curve for individual colors in the Tone Correction dialog box. See “Using the Tone Curve” on page 2-18.

To make the following adjustments in EPSON TWAIN, you need to display a preview image in the Preview window. See the following section for details.

Displaying a preview image

The Preview window on the right side of the Manual mode window shows you how your adjustments will affect the image as you make them. The Preview window is also the starting point for accessing the Image Controls, Color Adjustment, and Tone Correction dialog boxes that contain tools for optimizing your image.

Note:

See “Previewing Images” on page 3-3 for Preview window options, and “Configuration Button” on page 3-18 for information about how to control preview image quality.

1. After selecting the Image Type, click Preview to start prescanning. A preview image of the document appears on your screen. When the Automatic Preview check box in the Configuration dialog box is selected, a preview image is automatically displayed after EPSON TWAIN is started.
2. Click one of the buttons below to open the dialog box with the image optimization tools you need.



Image Controls button



Tone Correction button



Color Adjustment button

Adjusting the Highlight Setting

Highlights are the brightest areas of an image.

1. In the Image Controls dialog box, click the eyedropper button under Highlight.



The pointer changes to an eyedropper, with movement restricted to within the Preview window.

2. Move the eyedropper to the location you want to select as the highlight point and click it.

The brightness of the pixel at the point you click is set as the highlight level, and the other parts of the image are adjusted accordingly.

3. To change the highlight level (brightness) of the point you selected, move the Highlight slider left or right, or enter a value in the text box. You can enter a value between 61 and 490 for the highlight.


Note:

See "Image Controls" on page 3-9 for further information on adjusting the highlight level.

Adjusting the Shadow Setting

Shadows, the darkest areas of an image, are the opposite of highlights.

1. In the Image Controls dialog box, click the eyedropper button under Shadow.

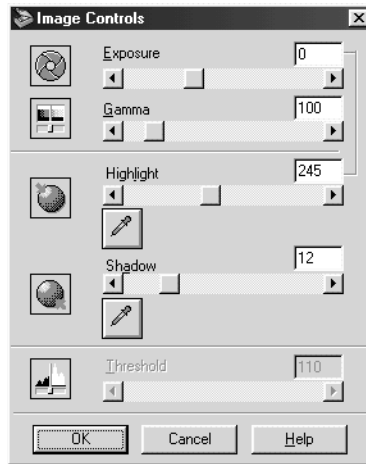

The pointer changes to an eyedropper, with movement restricted to within the Preview window.

2. Move the eyedropper to the location you want to select as the shadow point, and then click.

The brightness of the pixel at the point you click is set as the shadow level, and the other parts of the image are adjusted accordingly.


3. To change the shadow level (darkness) of the point you selected, move the Shadow slider left or right, or enter a value in the text box. You can enter a value between 0 and 60 for the shadow.

Note:

See “Image Controls” on page 3-9 for further information on adjusting the shadow level.

Adjusting the Gamma Setting

Gamma is the difference in contrast between the light tones and dark tones of an image. Any change you make in the gamma level only affects the mid-tones of the image.

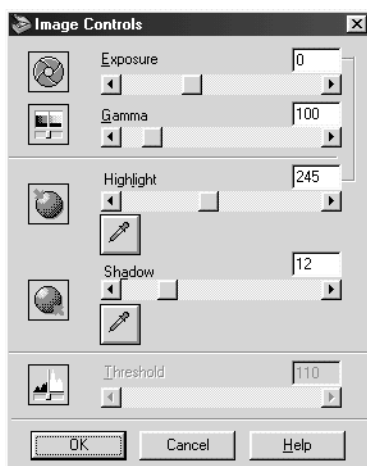

To change the gamma level of the image, move the Gamma slider left or right, or enter a value in the text box.

You can enter a value between 50 and 500 for the gamma.


Note:

See “Image Controls” on page 3-9 for further information on adjusting the gamma level.

Applying a Preset Tone Curve


You can finely adjust the contrast within an image by applying one of the preset tone curves. This allows more control over the image when used in conjunction with the Auto Exposure settings in the Manual mode window. The Tone Curve Name list in the Tone Correction dialog box provides the five most common tone correction curves, described below.

Linear

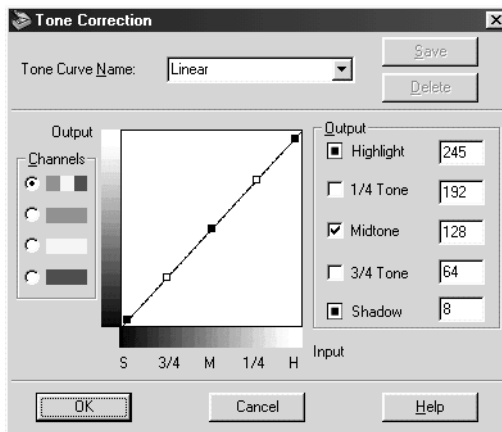


A linear tone curve has no tone correction. Use this setting if you are satisfied with the tone of the preview image.

Lighten

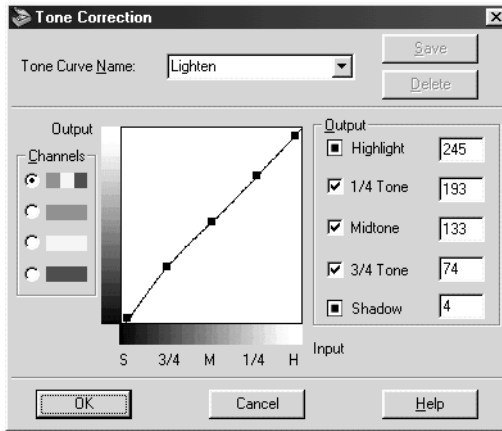


Adjusts darker images (like underexposed film) to make them slightly brighter.

Darken

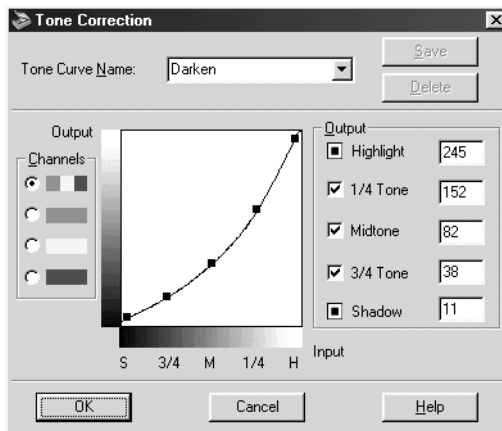


Adjusts brighter images (like overexposed film) to make them slightly darker.

Flat Contrast

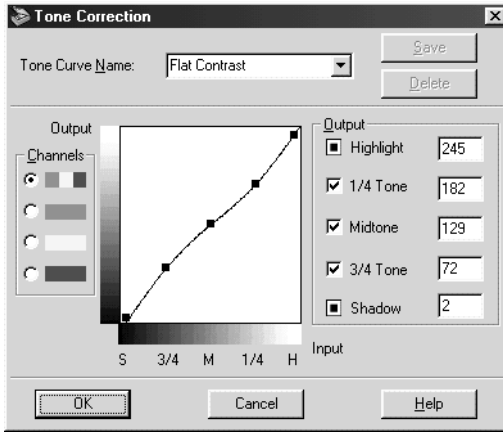

Flattens high contrast images to make them look more natural.

High Contrast

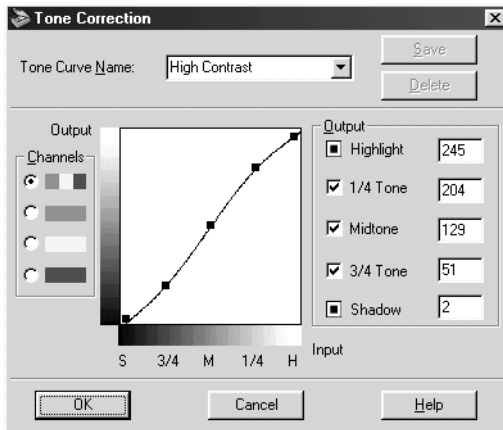

Increases the contrast of dull images.


Note:

See “Using the Tone Curve” on page 2-18 and “Tone Correction” on page 3-12 for more information on tone correction.

Adjusting the Gray Balance Intensity Setting

Gray balance makes it possible to remove a cast (tint) from a specific color.

1. In the Color Adjustment dialog box, click the eyedropper button under Gray Balance Intensity.

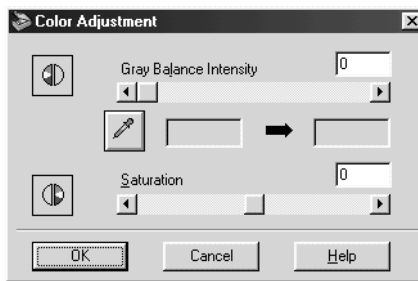

The mouse pointer changes to an eyedropper, with movement restricted to within the Preview window.

2. Move the eyedropper to a location where you want to adjust its gray balance intensity, and then click the color.

The color you selected appears in the two boxes below the Gray Balance Intensity slider.

3. Move the slider left or right, or enter a value in the text box to change the gray balance intensity level of the color.


You can enter a value between 0 and 100. Changing the value causes the color in the right hand box to change accordingly. The changes are also reflected in the image in the Preview window.

Note:

See “Color Adjustment” on page 3-14 for more information on adjusting the gray balance intensity level.

Adjusting the Saturation Setting

Saturation is the density of a color. Higher saturation makes the color appear richer, while lower saturation makes it appear paler.

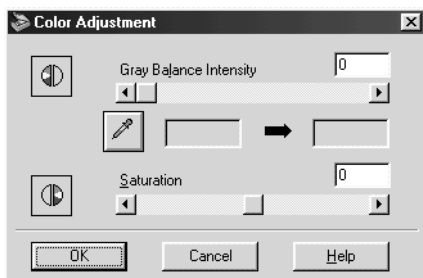

To change the saturation level of the image, move the Saturation slider left or right, or input a value in the text box.

You can enter a value between -100 (lowest color density) and 100 (highest color density).

Note:

See “Color Adjustment” on page 3-14 for more information on adjusting the saturation level.

Using the Tone Curve

The tone curve provides you with a versatile means for adjusting the intensity of the colors of the image being scanned. You can adjust the shadow, mid-tone, and highlight values, which helps to ensure well-balanced coloring of the image.


Note:

- ❑ *Use of the tone curve is recommended for fine adjustments after you have previewed the image and adjusted the highlights and the shadows using Auto Exposure and the Image Controls dialog box. Use of the tone curve to make initial settings is not recommended.*
- ❑ *The Tone Correction button is unavailable whenever Text/Line Art is selected for the Image Type.*

The tone curve is located in the Tone Correction dialog box, which appears when you click the Tone Correction button in the Manual mode window. The following section describes how to use each of the controls in the Tone Correction dialog box.



Tone Correction button

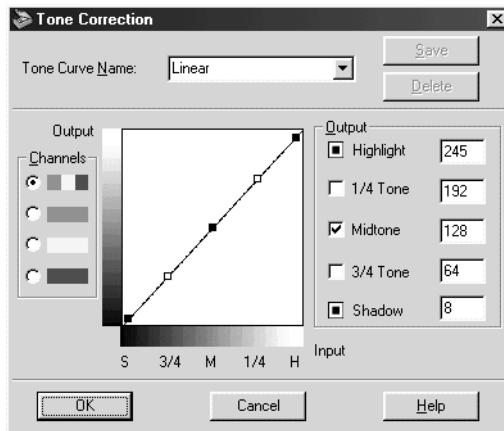

Tone Correction dialog box

Tone Curve Name list

Use this list box to select a preset tone curve. There are five preset tone curves available shown below, and you can add your own curves to the list using the procedure in the next section, "Saving your own tone curve" on page 2-21.

Curve Name	Highlight	1/4 Tone	Midtone	3/4 Tone	Shadow	Description
Linear	245	192	128	64	8	Default curve
Lighten	245	193	133	74	4	Lightens dark image
Darken	245	152	82	38	11	Darkens bright image
Flat Contrast	245	182	129	72	2	Reduces contrast
High Contrast	245	204	129	51	2	Increases contrast

When you select a curve from the Tone Curve Name list, the settings in the Tone Correction dialog box change accordingly.

Channels

Click an option button under channels to select the color whose tone curve you want to adjust. When the master channel at the top is selected, your adjustments affect all three colors. Selecting one of the other channels allows you to adjust red, green, or blue only.

Tone curve editor

Moving the mouse pointer into the tone curve editor causes it to change to a finger. Use this pointer to drag any of the five points in the curve and change its shape. The x-axis of the curve is the brightness of the original (input values) while the y-axis is the brightness of the scanned image (output values).

To change the tone curve back to its default, select **Linear** from the Tone Curve Name list.

Output values

These are the current values for output data in accordance with the current locations of the points inside the tone curve editor. These values change when you drag points in the tone curve editor, or you can enter values here to change the shape of the tone curve. Each value can be adjusted within the range of 0 to 255.

Note:

- Each output value name has a check box to the left of it. Highlight and Shadow are always selected, but you can select or clear 1/4 Tone, Midtone, and 3/4 Tone by clicking their check boxes.*
- When a value's check box is clear, its point on the tone curve editor automatically shifts to smooth out the tone curve when one of the other points is moved.*
- When a value's check box is selected, it means that its point is fixed and it will not shift when other points are moved.*

Saving your own tone curve

Use the following procedure to assign a name to a tone curve you have customized and want to save for later use:

1. Modify the tone curve settings as described. This causes the name shown in the Tone Curve Name list to change to User Defined.
2. After customizing the tone curve, enter a name for the new curve (up to 32 characters) in the list box.
3. Click Save to save your new tone curve settings under the name you specified.

Deleting a customized tone curve

Use the following procedure to delete a custom tone curve. You cannot, however, delete the five preset tone patterns.

1. Use the Tone Curve Name list to select the custom tone curve you want to delete.
2. Click Delete.
3. When a dialog box appears, click Yes to delete the curve.

Closing the Tone Correction dialog box

You can close the Tone Correction dialog box by clicking either OK or Cancel.

- Clicking OK applies the current Tone Correction dialog box settings and closes the dialog box.

Note for Macintosh users:

Clicking the close button in the upper right corner of the dialog box has the same affect as clicking OK.

- Clicking Cancel closes the dialog box without applying the current dialog box settings.

Note for Windows users:

Clicking the close button in the upper right corner of the dialog box has the same affect as clicking Cancel.

Chapter 3

Understanding EPSON TWAIN Features


Overview	3-2
Previewing Images	3-3
Image Types	3-6
Image Type list	3-6
Changing Resolution.....	3-8
Unsharp Mask	3-8
Size.....	3-8
Image Controls.....	3-9
Tone Correction.....	3-12
Color Adjustment	3-14
Auto Exposure.....	3-15
Reset Button	3-16
Auto Locate	3-16
Configuration Button	3-18
Scan Button.....	3-20

Overview


When you start EPSON TWAIN through a TWAIN-compliant application, one of the following windows appear on the screen:

Note for Macintosh users:

Most illustrations shown in this section are for Windows, so they may vary in appearance from what actually appears on your screen. The instructions should be the same, except as noted.

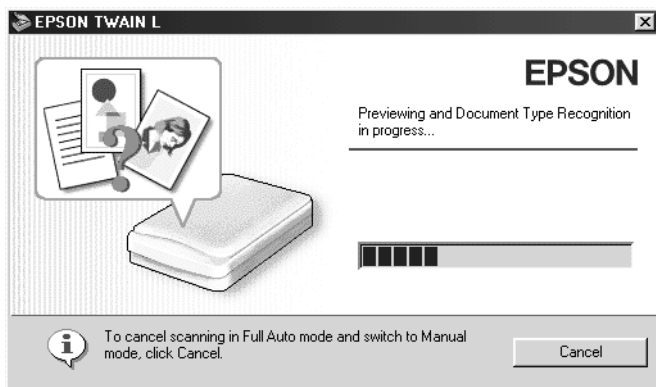

Full Auto mode

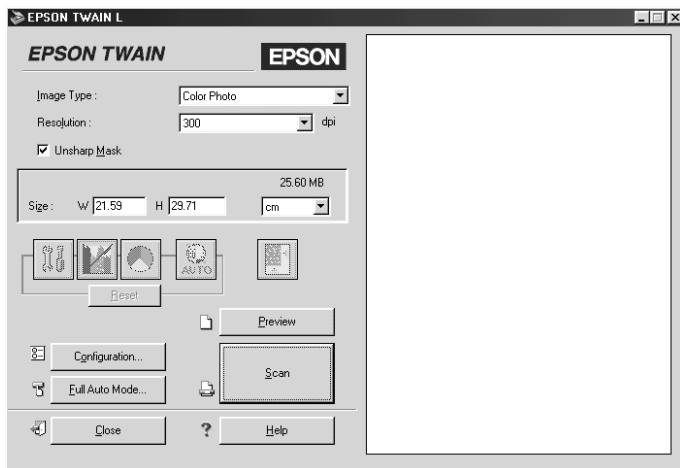

Manual mode

The following sections describe the features of EPSON TWAIN.


Note:

Some settings may appear dimmed depending on your choice of settings and the features supported by your scanner.

Previewing Images

Before you scan and save an image, you can preview it in the Preview window located on the right side of the Manual mode window. Use the preview feature to check the results of your settings.

To preview the entire image, click the Preview button.

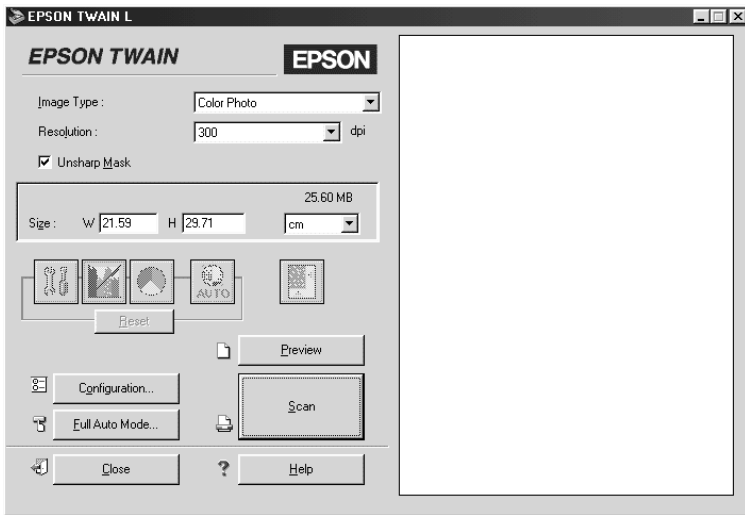


Preview window


Note:

- ❑ You cannot preview an image which exceeds the available memory or disk space. If you try to preview a very large image, an alert appears on the screen.
- ❑ When the mouse pointer is placed in the Preview window, it changes to a cross-hairs. Drag the cross-hairs over any area of the image, and a frame appears. The point where you first clicked is anchored, but the rest of the frame is sizable and movable.

- ❑ *When the mouse pointer is placed within the marquee (the frame of the selected image area), it changes to a hand. You can click and drag the marquee anywhere in the Preview window. If you drag a hand while pressing the Shift key, the marquee will be limited to vertical or horizontal movement.*

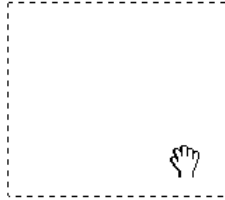

- ❑ *When the mouse pointer is placed on the edge of the marquee, it changes to an arrow allowing you to re-size the marquee. If you drag an arrow while pressing the Shift key, the marquee will be resized proportionally.*

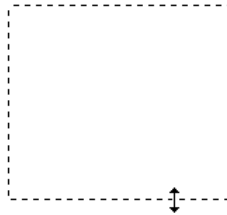

- ❑ *To remove or delete a marquee, double-click the Preview window.*

Modifying the preview image

You can see the effects of the following settings in the preview image.

- ❑ Image Type and Unsharp Mask in the Manual mode window
- ❑ Exposure, Gamma, Highlight, Shadow, and Threshold in the Image Controls dialog box

- Tone Correction in the Tone Correction dialog box
- Gray Balance Intensity and Saturation in the Color Adjustment dialog box
- Auto Exposure

Note:

Although the image in the Preview window changes as you make settings, the settings do not affect the actual image until you scan or re-scan the image.

Image Types

Use the Image Type list to select the type of image to be scanned.



Image Type list

The Image Type list provides the following settings. Click the arrows on the right to view all of the available settings.

Color Photo:

24-bit color scanning

This setting is useful when scanning color photo.

Color Document:

24-bit color scanning with de-screening to remove moiré patterns

This setting is useful when scanning magazine or catalog.

Note:

A moiré is a cross-hatch pattern that appears on scanned images when scanning printed material. It is a result of interference that occurs due to the difference between the pitches of the scanning and the halftone screens.

Black & White Photo:

8-bit gray scanning

This setting is useful when scanning black and white photo.

Black & White Document:

8-bit gray scanning with de-screening

This setting is useful when scanning magazine or newspaper.

Illustration:

24-bit color scanning with color smoothing to reduce the colors in an image to limited number of index colors

This setting is useful when scanning large areas of solid colors (for example, logos, illustrations, charts).


Text/Line Art:

Black and white scanning

This setting is useful when scanning text or line art, and is also good for OCR (Optical Character Recognition).

Changing Resolution

You can change the resolution for the current scanning operation by selecting or typing a new value. Available resolution options are 72, 96, 150, 300, 600, 1200, 2400, and 9600 dpi.

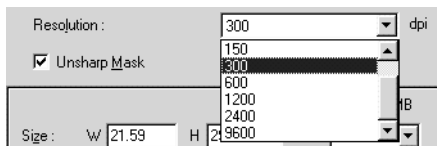

Unsharp Mask


You can select or deselect the Unsharp Mask setting. Selecting the check box improves image sharpness.

Note:

If the Image Type setting is Text/Line Art or Illustration, this check box appears dimmed and cannot be selected.

Size

The Size fields indicate the size of the image that is displayed or selected in the Preview window.



Width and Height menu:

The width and height of an image are indicated in the selected unit of measure. You can type new values directly in the indicator fields, or you can change the image area in the Preview window by creating a marquee or frame. Do this by dragging the mouse over the desired area. See “Previewing Images” on page 3-3 for more information on marquees.

Units menu:

Select a unit of measurement. You can select either pixels, inches, or cm.




Storage size indicator:

The storage size of an image is indicated in KB or MB. As you change the image area in the Preview window, this value also changes.

Image Controls



Click the Image Controls button on the Manual mode window to view the following dialog box.

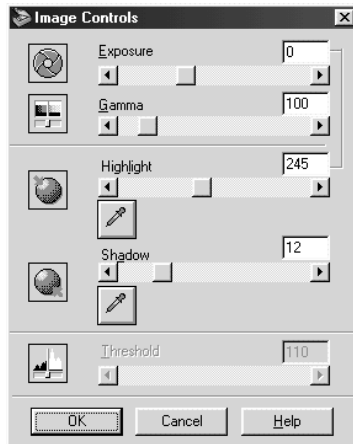

Note:

- The Image Controls settings are optimized automatically when you scan without previewing.
- The Image Controls button appears dimmed and is not available when ICM or ColorSync is selected in the Configuration dialog box.
- If Image Type is set to Text/Line Art, all the settings except Threshold appear dimmed and cannot be selected.
- You can see the effects of the Image Controls settings in the Preview window.

Exposure:

The Exposure setting lightens or darkens an image. You can select from -10 (darkest) to 20 (brightest) by moving the slider.

The Exposure and Highlight controls are related. When the Exposure setting is changed, the Highlight value is automatically set.

Gamma:

The Gamma control allows you to adjust the mid-tones in an image. You can select from 50 (darkest) to 500 (brightest) by moving the slider.

Highlight:

The Highlight control allows you to adjust the brightness level of the brightest parts of an image. You can select from 61 to 490 by moving the slider.

Click the eyedropper button beneath the slider, and the mouse pointer changes to an eyedropper. Move the eyedropper over the preview image, and click a bright area. The eyedropper “picks up” the color from that area, and uses it as the highlight for the entire image. This effect appears immediately in the preview image. Click **Cancel** to restore the original image.

Shadow:

The Shadow control allows you to adjust the darkness level of the darkest parts of an image. You can select from 0 to 60 by moving the slider.

Click the eyedropper button beneath the slider, and the mouse pointer changes to an eyedropper. Move the eyedropper over the preview image, and click a dark area. The eyedropper “picks up” the color from that area, and uses it as the shadow for the entire image. This effect appears immediately in the preview image. Click **Cancel** to restore the original image.

Threshold:


Available only when Image Type is set to Text/Line Art. The scanner scans gray shades as either black or white using this setting.

You can select from 0 (lightest) to 255 (darkest) by moving the slider.

Tone Correction



Click the Tone Correction button on the Manual mode window to view the following dialog box.

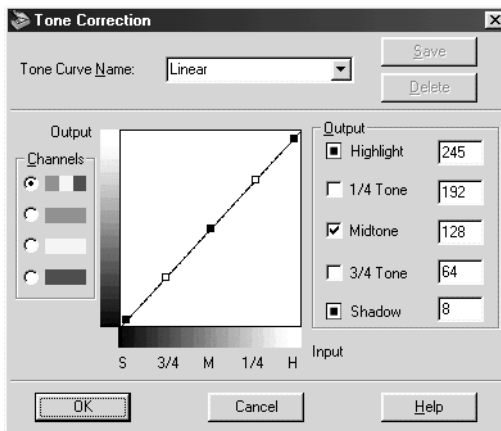

Note:

- The default Tone Curve settings are the Linear.*
- The Tone Correction button appears dimmed and is not available when Image Type is set to Text/Line Art, or when ICM or ColorSync is selected in the Configuration dialog box.*
- You can see the effects of the Tone Correction settings in the Preview window.*

The tone value represents the contrast in the tonal relationship between an original image and its reproduction on a monitor or printer.

Tone Curve Name list:

Select a tone correction setting from this list. The custom settings you have saved appear in this list.

Tone Curve editor:

The editor allows you to customize tone correction. Drag points on the tone curve to adjust the tone value. You can edit up to five tonal elements.

Output options:

If you select the check box for a specific point, such as 1/4 Tone or Midtone, you can move that point and it remains where you leave it; it is not affected by the movement of other points on the curve. If the check box is cleared, the point becomes affected by the movement of other points.

Channels options:

You can select the combined red, green, and blue (RGB) channel to modify all colors, or select these colors separately.

Note:

If Image Type is set to Black & White Photo or Black & White Document, you can only select the combined RGB channel option.

Save/Delete/OK/Cancel/Help buttons:

After you correct tone, type a name for your custom settings in the Tone Curve Name list, and then click Save.

To delete a setting, select the name of the setting you want from the Tone Curve Name list, and then click Delete.

To accept the defining Tone Correction or close the dialog box, click OK.


To cancel the operation, click Cancel.

To access the online help, click Help.

Color Adjustment



Click the Color Adjustment button on the Manual mode window to view the following dialog box.

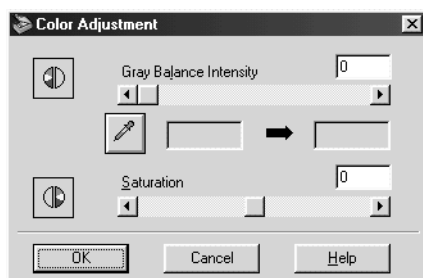

Note:

- ❑ *If the Image Type setting is Black & White Photo, Black & White Document, or Text/Line Art, or if in the Configuration dialog box ICM or ColorSync is selected, the Color Adjustment button appears dimmed and these settings cannot be selected.*
- ❑ *You can see the effects of the Color Adjustment settings in the Preview window.*

Gray Balance Intensity:

Gray Balance Intensity removes unwanted color casts and tints by balancing color saturation.

Click the eyedropper button beneath the slider. The mouse pointer changes to an eyedropper. Then click the color you want to represent gray. The eyedropper “picks up” the color and displays it in the box beside the eyedropper button. You can then correct the cast level for that color from 0 to 100 by moving the slider. The corrected color appears in the box on the right, and the effect shows up immediately in the preview image. Click Cancel to restore the original image.

Saturation:

Saturation is the property that defines color depth. Select a saturation level from -100 (less color) to 100 (more color) by moving the slider.

Auto Exposure



Click the Auto Exposure button on the Manual mode window to automatically optimize the exposure for an image. The Gamma, Highlight, and Shadow settings in the Image Controls dialog box are automatically set.

Note:

- The Auto Exposure button appears dimmed and is not available when Image Type is set to Text/Line Art, or when ICM or ColorSync is selected in the Configuration dialog box and when there is no preview image.*
- The Auto Exposure feature is automatically activated when scanning without previewing.*


Reset Button

Click the Reset button to return any image control settings you made back to their default settings. If you did not alter any image control settings, this button appears dimmed and is not available.


Auto Locate



Click the Auto Locate button on the Manual mode window to cause the scanner to automatically locate and select the target image. The image appears without white borders in the Preview window.

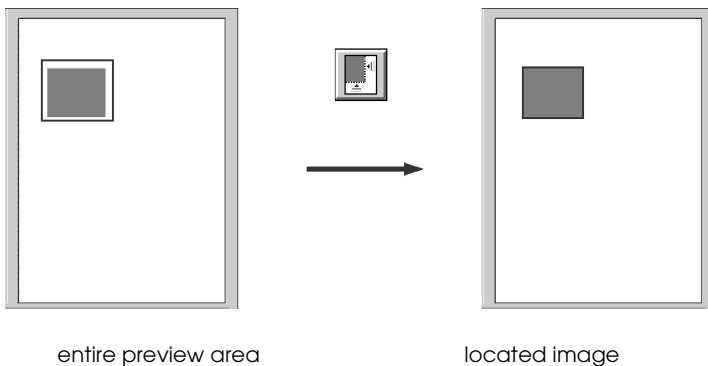

If a document contains more than one image, select a target image by creating a marquee on the image and clicking the Auto Locate button. The selected target image is located automatically.

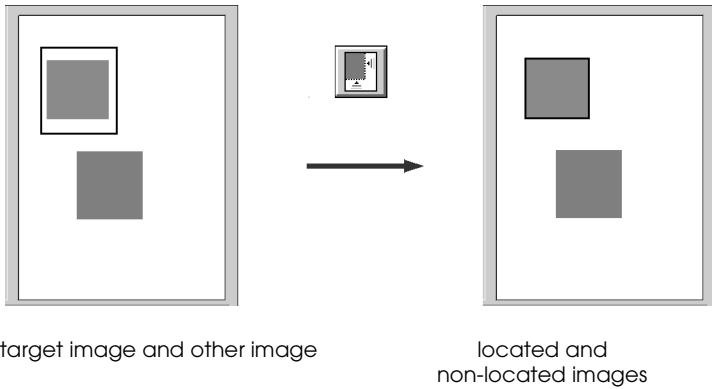


Note:

Create a marquee only on the target image. If the marquee covers other images, the Auto Locate feature does not work as expected.

Configuration Button

You can adjust the Preview window by changing the configuration. Click the Configuration button on the Manual mode window to display the following dialog box and make changes.

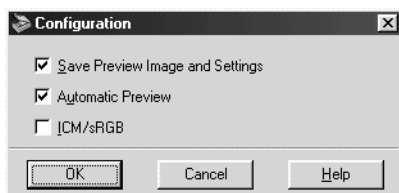

Windows



Macintosh

Save Preview Image and Settings:

Select this check box to automatically save the preview image and its image settings when you exit EPSON TWAIN (and quit scanning). The image and its settings are available the next time you restart EPSON TWAIN.

Automatic Preview:

Select this check box to enable automatic preview when EPSON TWAIN starts.

ICM/sRGB (for Windows):

Select this check box to reproduce an image in colors using the Windows ICM color management system. This setting is available only on Windows system.

Note:

- If your printer and your monitor do not support ICM, be sure to clear this check box.*
- If the Image Type setting is not Color Photo, Color Document, or Illustration, this check box appears dimmed and cannot be selected.*
- See “Using ICM/sRGB (For Windows Users)” on page 4-6 for more details.*

ColorSync (for Macintosh):

Select this check box to reproduce an image in colors using the ColorSync color management system. This setting is available only on Macintosh system.

Note:

- If your printer and your monitor do not support ColorSync, be sure to clear this check box.*
- If the Image Type setting is not Color Photo, Color Document, or Illustration, this check box appears dimmed and cannot be selected.*
- See “Using ColorSync (For Macintosh Users)” on page 4-7 for more details.*

Scan Button

Clicking the SCAN button scans the image or active marquee in the Preview window. The scanned image is transferred to the application software you used to open EPSON TWAIN so that you can work with the image from within that application.

While scanning, a progress indicator appears. If necessary, click the CANCEL button to cancel the operation.

Note:

- ❑ *You cannot scan an image which exceeds the available memory or disk space. If you try to scan a very large image, an alert appears on the screen.*
- ❑ *Before scanning, be sure to calibrate your screen. For details, see "Calibrating Your Screen" on page 4-2.*
- ❑ *After an image is scanned, be sure to save it.*

Chapter 4

Calibrating Your System

Overview	4-2
Calibrating Your Screen	4-2
For Windows 98 and 2000 users.....	4-3
For Macintosh users.....	4-5
Using ICM/sRGB (For Windows Users)	4-6
Using ColorSync (For Macintosh Users)	4-7

Overview

When you install EPSON TWAIN, the EPSON Screen Calibration utility is automatically installed.

EPSON Screen Calibration calibrates your monitor to ensure the tone and contrast on your screen match the original image. Be sure to calibrate your screen before using your scanner.


For more information regarding color and output device calibration, see the *Color Guide*.

Calibrating Your Screen



You need to calibrate your screen when you first install the scanner software, and anytime you switch to a different monitor.

For Windows 98 and 2000 users

1. Double click the Scanners and Cameras icon in Control Panel. The Scanners and Cameras Properties dialog box appears. Click the Properties button.

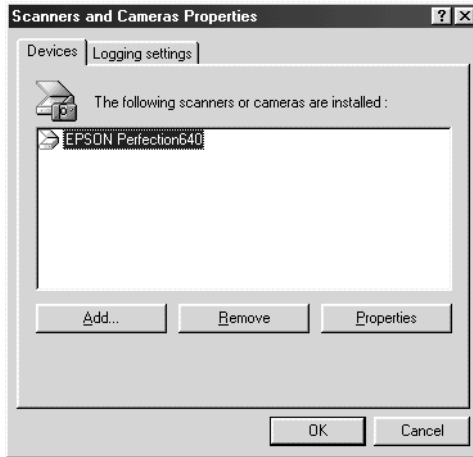

2. Click the Utility tab, then click the Screen Calibration Utility icon. The Screen Calibration dialog box appears.

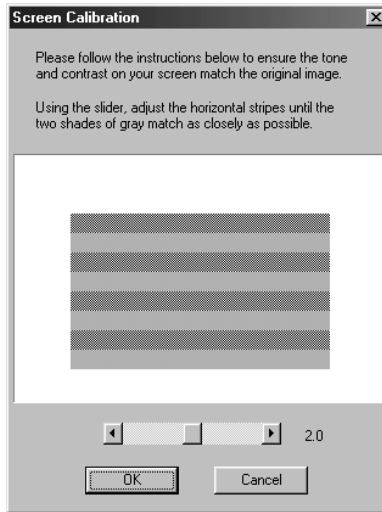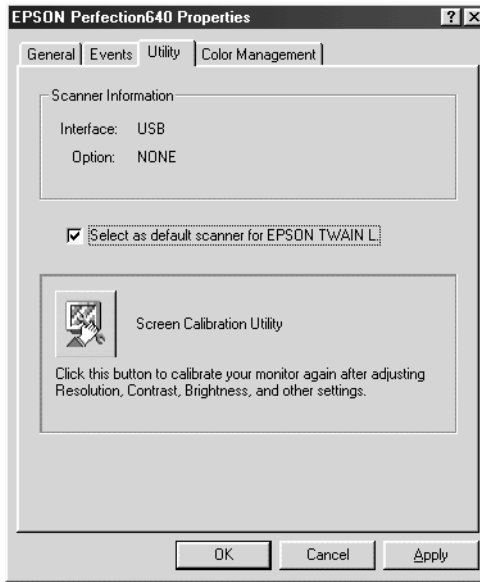

3. Look at the screen and move the slider to the right or left until the two shades of the gray horizontal stripes match.

Note:


View the screen from a short distance. While the gray stripes do not blend perfectly well, try to adjust until the different tones match as closely as possible.

4. Click OK to finish calibrating your scanner and monitor.

The setting is automatically saved as the Screen profile in the Calibration list in EPSON TWAIN's Destination dialog box. The screen profile contains calibration information for the preview image as well as the scanned image.

For Macintosh users

1. Click the EPSON Screen Calibration icon in the EPSON Scanner folder to view the Screen Calibration dialog box.

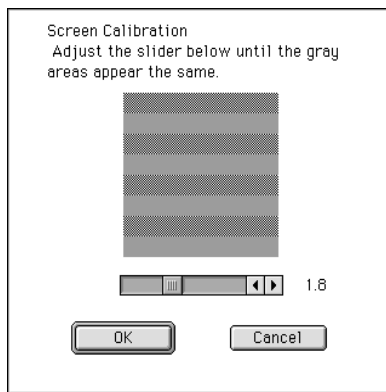

2. Look at the screen and move the slider to the right or left until the two shade of the gray horizontal stripes match.

Note:

View the screen from a short distance. While the gray stripes do not blend perfectly well, try to adjust until the different tones match as closely as possible.

3. Click OK to finish calibrating your scanner and monitor.

The setting is automatically saved as the Screen profile in the Calibration list in EPSON TWAIN's Destination dialog box. The screen profile contains calibration information for the preview image as well as the scanned image.

Using ICM/sRGB (For Windows Users)

If you use Windows 98 or 2000 and your output devices (printer and monitor) support the ICM color management system, you can use the ICM calibration method.

Note:

If your output devices do not support sRGB, leave the check box empty.

Follow the steps below:

1. Run TWAIN-compliant application and select **Acquire** or a similar command from the File menu to start EPSON TWAIN.
2. Click the **Configuration** button on the Manual mode window. Select **ICM/sRGB** in the Configuration dialog box.
3. Make any other settings you want.
4. Click **Scan**.

The scanner scans images using the sRGB profiles.

Using ColorSync (For Macintosh Users)

If your output devices (printer and monitor) support the Apple ColorSync color management system, you can use the ColorSync calibration method.

Note:

- If your output devices do not support ColorSync, leave the check box empty.*
- Before scanning, be sure to make the appropriate System Profile settings in the ColorSync control panel for optimal color matching. For more information, see your Macintosh documentation.*

Follow the basic steps below:

1. Run TWAIN-compliant application and select Acquire or a similar command to start EPSON TWAIN.
2. Click the Configuration button on the Manual mode window. Select ColorSync in the Configuration dialog box.
3. Make any other settings you want.
4. Click Scan.

The scanner scans images using the system profile selected in the ColorSync control panel.

Chapter 5

Maintenance and Troubleshooting

Maintenance	5-3
Cleaning the scanner	5-3
Replacing the fluorescent lamp	5-4
Removing the Cover for Thick or Large Documents	5-4
Using the Stand to Hold the Scanner	5-6
Transporting the Scanner	5-7
Problems and Solutions	5-7
Error Indicator	5-8
Operating Problems	5-9
The fluorescent lamp does not come on.	5-9
The scanner does not scan.	5-10
The scanner software does not work properly.	5-10
Quality Problems	5-11
The entire image is distorted or blurred.	5-11
Part of the image is distorted or blurred.	5-11
Edges of the document are not scanned.	5-11
Colors are patchy or distorted at the edges of the image.	5-12
The image is faint or out of focus.	5-12
The image is too dark.	5-12
Straight lines in the image come out jagged.	5-12
The image does not look the same as the original.	5-13
A line of dots is always missing from the scanned image.	5-13
When scanning printed matter, textured patterns of dots appear inside particular areas of the image.	5-13
Colors on your monitor are different from those in the original image.	5-14
Printed colors are different from those in the original image.	5-14
The printed image is larger or smaller than the original.	5-14
Scanned images cannot be printed or come out garbled when	

printed.....	5-15
Software Setup Problems	5-15
You cannot install EPSON TWAIN.....	5-15
Software Operation Problems	5-15
You cannot start EPSON TWAIN.	5-15
Scanning Problems.....	5-16
Image is dark, with little or no detail.	5-16
You cannot scan an image or you only get a few dots for the scanned image.	5-16
Moiré (cross-hatch) patterns appear in the scanned image	5-17
Colors differ from the original.	5-17
Pressing the button on the scanner does not start scanning.	5-17
Scanned image by using the button is missing.	5-18
Upgrading from Windows 98 to Windows 2000.....	5-18
Recovering from Scanner Software Installation Problems on Windows 5-20	
For Windows 98 users	5-21
For Windows 2000 users	5-24
Sizing up Your System.....	5-26
RAM and hard disk size.....	5-26
Accelerator boards	5-26
Video cards.....	5-26
Monitors	5-27
File compression software	5-27

Maintenance

Cleaning the scanner

To keep your scanner operating at its best, you should clean it periodically, as described below.

1. Unplug the power cord.
2. Clean the outer case with a cloth dampened with mild detergent and water.
3. If the glass of the document table gets dirty, clean it with a soft dry cloth. If the glass is stained with grease or some other hard-to-remove material, use a small amount of glass cleaner and a soft cloth to remove it. Wipe off all remaining liquid.

Be sure that there is no dust on the glass of the document table. Dust can cause white spots in your scanned image.



Caution:

- Be careful not to scratch or damage the glass of the document table, and do not use a hard or abrasive brush to clean it. A damaged glass surface can decrease the scanning quality.*
- Never use alcohol, thinner, or corrosive solvent to clean the scanner. These chemicals can damage the scanner components as well as the case.*
- Be careful not to spill liquid into the scanner mechanism or electronic components. This could permanently damage the mechanism and circuitry.*
- Do not spray lubricants inside the scanner.*
- Never open the scanner case.*

Replacing the fluorescent lamp

The luminosity of the fluorescent lamp declines over time. If the lamp breaks or becomes too dim to operate normally, the scanner stops working and the fluorescent lamp will not come on. When this happens, the lamp assembly must be replaced. For details, contact your dealer.




Caution:


Never open the case of the scanner. If you think repairs or adjustments are necessary, consult your dealer.

Removing the Cover for Thick or Large Documents

For thick materials or documents that are larger than the document table, remove the document cover.

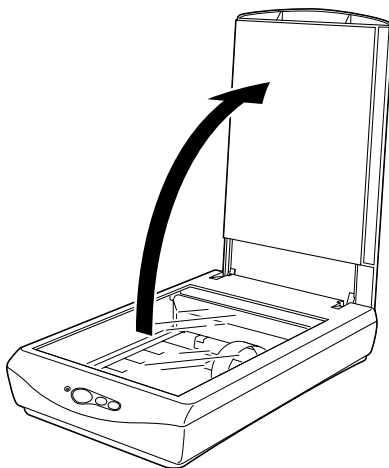

First, open the document cover.

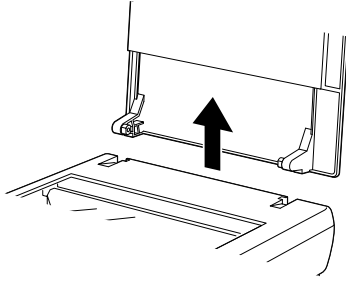


Then, pull the cover straight up.

Note:

When scanning with the cover removed, do not leave any area of the document table exposed to prevent interference from external light.


When you are finished scanning, reattach the document cover in the reverse order that you removed it.

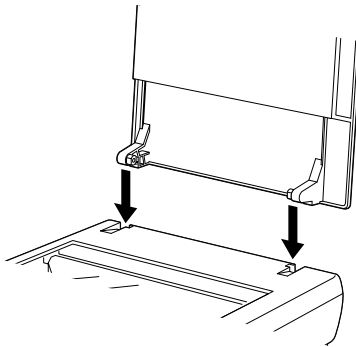

Using the Stand to Hold the Scanner

You can use the stand to hold the scanner. Before standing the scanner, you need to lock the scanner's carriage to prevent any damage. Follow the steps below.

1. Plug in the scanner and wait until the carriage moves to the home position (position closest to the cover hinges). While the carriage lamp remains on, unplug the power cord.
2. Disconnect the AC adapter from the DC inlet, and then slide the transportation lock to the left.
3. Push the scanner straight down on the stand until it sets into place.

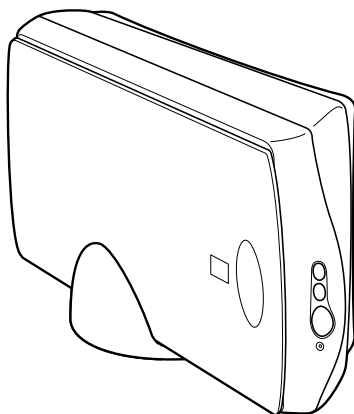



Caution:

- ❑ *Make sure the stand's rib is directly under the clips on the scanner before pushing it down into place; otherwise damage may occur.*

- ❑ *When placing the scanner on the stand, do not subject the scanner to shock such as pushing it away from the stand; otherwise damage may occur.*

- ❑ *Do not use the scanner when it is placed on the stand.*

Transporting the Scanner

Before transporting the scanner over a long distance or storing it for an extended period, you need to lock the scanner's carriage to prevent damage. Follow the steps below.

1. Plug in the scanner and wait until the carriage moves to the home position (position closest to the cover hinges). While the carriage lamp remains on, unplug the power cord.

2. Disconnect the AC adapter from the DC inlet, and then slide the transportation lock to the left.

Problems and Solutions

Most of the problems you will encounter while operating your scanner and software have simple solutions. This section divides scanner problems into six categories:

Error Indicator	page 5-8
Operating Problems	page 5-9
Quality Problems	page 5-11
Software Setup Problems	page 5-15

Software Operation Problems. page 5-16

Scanning Problems. page 5-17

See the table in “Error Indicator” on page 5-8 first. If this does not help you solve your problem, go to the category for the type of problem you have, then look for the problem description.

The online *Color Guide* also provides versatile tips and other information helpful for problem-solving.

Note:

If some settings appear dimmed in EPSON TWAIN, they cannot be selected because of the capability of your scanner or your choice of other settings.

If you cannot solve a problem after reading and following the information in this section, contact your dealer or a qualified customer support person for assistance.

Error Indicator

If an error occurs, the scanner stops and the light shows the type of error.

Color of light	Pattern of light	Error type
Red	On	“Command error” on page 5-8
	Flashing	“Interface error” on page 5-9
	Flashing	“Fatal error” on page 5-9

Command error

The scanner has received incorrect commands from your scanning software.

When this error occurs, try to rescan the document. The scanner returns to normal when it receives correct commands. Normally you do not need to reset the scanner when this type of error occurs.

Interface error

The interface setup is wrong or the scanner is not properly connected to the computer.

When this error occurs, unplug the scanner and USB connector, and then plug them back in.

Fatal error

This type of error indicates one or the following problems:

- The fluorescent lamp needs to be replaced.
- The scanner is malfunctioning.

Consult your dealer.

Operating Problems

Problems you may have while using the scanner often involve the operation of your software and computer. Operation problems usually occur because of:

- Incorrect setup of the interface (see your *Startup Guide*).
- Incorrect setup of your computer or software (see your *Startup Guide*).
- Incorrect operation of your software (see your software documentation).

Also see the documentation that came with your computer and scanner for possible solutions.

The fluorescent lamp does not come on.

- ❑ Make sure the power cord is connected to the scanner and plugged into an electrical outlet.
- ❑ If the scanner does not receive any commands after 10 minutes, it turns off the lamp. The lamp will turn back on when you scan.

The scanner does not scan.

- ❑ Wait until the indicator light stays on in green (ready for scanning).
- ❑ Try connecting the scanner directly to the computer's USB port, or use an EPSON USB cable.

The scanner software does not work properly.

- ❑ Make sure your software is installed correctly.

For Windows users:

Check if your scanner is listed more than once in the Scanners and Cameras Properties dialog box. To view the dialog box, double-click the Scanners and Cameras icon in Control Panel. Remove your scanner every place it appears in the dialog box, then reinstall EPSON TWAIN following the instructions in your *Startup Guide*.

Note:

When reinstalling the scanner software, if you see a message box and then a dialog box requesting for the EPSON Scanners Driver Disk, insert the Scanner Software CD in the CD-ROM drive. Be sure to specify the correct drive letter, the EPSON folder, the folder of your preferred language, and the Win98 or Win2000 folder as the location.

- Make sure your computer meets the memory and other system requirements specified for the software you are using.
- Make sure the computer has enough memory for your software. If the computer does not have enough memory available, see your software and computer documentation for details.

Quality Problems

The entire image is distorted or blurred.

- Make sure the document is flat against the document table.
- Make sure you do not accidentally move the document during scanning.
- Make sure the scanner is on a flat, stable surface.

Part of the image is distorted or blurred.

Make sure the document is uniformly flat against the document table. A document that is wrinkled or warped may not scan well.

**Caution:**

Do not place heavy objects on the document table.

Edges of the document are not scanned.

Position the document so that the area you want to scan is at least 5 mm from the edge guides of the document table.

Colors are patchy or distorted at the edges of the image.

- ❑ A document that is very thick or warped at the edges can cause discoloration. Cover the edges of the document with paper to block outside light.
- ❑ Make sure the document is flat against the document table.

The image is faint or out of focus.

- ❑ Make sure the document is flat against the document table.
- ❑ Adjust your software's Exposure setting. See "Image Controls" on page 3-9.
- ❑ Adjust your software's Gamma setting. See "Adjusting the Gamma Setting" on page 2-13.

The image is too dark.

- ❑ Check your software's brightness setting. See "Adjusting the Highlight Setting" on page 2-10.
- ❑ Check the brightness and contrast settings of your computer display.

Straight lines in the image come out jagged.

Make sure the document orientation is perfectly straight on the document table. Align vertical and horizontal lines with the scales at the top and side of the document table.

The image does not look the same as the original.

- ❑ Try different image setting combinations on your scanner software.
- ❑ Your software may not have sufficient color matching and color management features, or these components may not be installed correctly. See the documentation that comes with your software and computer.
- ❑ If you are importing an image file, make sure the file format is one your software can read. Also, make sure the image settings of your software are appropriate for the type of image you want to scan.

A line of dots is always missing from the scanned image.

- ❑ Print head malfunction is indicated when a line is missing on printouts only. See your printer manual.
- ❑ Scanner sensor malfunction is indicated when a line is missing on both screen images and printouts. Contact your dealer.

When scanning printed matter, textured patterns of dots appear inside particular areas of the image.

This condition is normal. The scanner automatically minimizes the problem if Image Type setting is Color Document or Black & White Document in the Manual mode window.

Colors on your monitor are different from those in the original image.

- ❑ Check the image settings of your scanner software, especially data format (bits, pixel, color), gamma correction, and color correction. Try different combinations of these settings.
- ❑ Check the color matching and color management capabilities of your computer, display adapter, and software. Some computers can change the color palette to adjust the colors on your screen. See your software and hardware manuals for details.
- ❑ Exact color matching is very difficult. Check your software and monitor documentation for information on color matching and calibration. Also see your *Color Guide*.

Printed colors are different from those in the original image.

Exact color matching is very difficult. Check your software or contact your printer company for information on color matching and calibration.

The printed image is larger or smaller than the original.

The image size settings of your software determine the size of the printed image. Do not use the size of the monitor image to judge the printed size.

Scanned images cannot be printed or come out garbled when printed.

- ❑ Make sure your printer is properly connected to the computer, correctly set up, and maintained. See your printer manual for details.
- ❑ Check that your software is properly installed and set up for your printer. See your software manual.

Software Setup Problems

You cannot install EPSON TWAIN.

- ❑ Check if your computer and operating system meets the system requirements.
- ❑ Make sure your computer has enough memory to run the application.

Software Operation Problems

You cannot start EPSON TWAIN.

- ❑ Plug in the scanner and then turn on the computer.
- ❑ Unplug the scanner and turn off the computer. Then check the connection between the scanner and the computer.
- ❑ Make sure that EPSON TWAIN is selected in your application software.
- ❑ Make sure your software is installed correctly.

For Windows users:

In the Device Manager menu, make sure your scanner's name appears under Imaging Device hardware type without a question (?) or an exclamation (!) mark. If the scanner appears with a question (?) or an exclamation (!) mark, or as an Unknown devices hardware type, click REMOVE to remove it while the scanner is still connected and turned on. Then reinstall EPSON TWAIN. See "Recovering from Scanner Software Installation Problems on Windows" on page 5-21.

Note:

If the EPSON Scanners Driver Disk is requested during the EPSON TWAIN reinstallation, insert the Scanner Software CD in the CD-ROM drive. Be sure to specify the correct drive letter, the EPSON folder, the folder of your preferred language, and the Win98 or Win2000 folder as the location.

Scanning Problems

Image is dark, with little or no detail.

Calibrate the screen as described in “Calibrating Your Screen” on page 4-2.

You cannot scan an image or you only get a few dots for the scanned image.

- Make sure a document is placed on the document table of the scanner.
- Change the Threshold setting in the Image Control dialog box. See “Image Controls” on page 3-9.

Moiré (cross-hatch) patterns appear in the scanned image

- Make sure Image Type is set to Color Document or Black & White Document in the Manual mode window.
- Place a transparent sheet such as an overhead projector sheet between the document and the document table.
- Reposition the document slightly.
- Make the image size slightly smaller.

Colors differ from the original.

- Calibrate the screen. See “Calibrating Your Screen” on page 4-2.

- ❑ Change the Image Type setting. See “Image Types” on page 3-6 to make sure your settings are correct.
- ❑ Printed colors do not exactly match the colors on your monitor, since printers and monitors use different color systems: monitors use RGB (red, green, and blue), while printers typically use CMYK (cyan, magenta, yellow, and black).

Pressing the button on the scanner does not start scanning.

- ❑ Make sure EPSON SMART PANEL for Scanner is installed and the EPSON SMART PANEL’s Launch Application path is set correctly.
- ❑ **For Windows users:**
Click the Events tab in your scanner’s Properties dialog box and make sure the Disable device events check box is clear. Also, make sure the desired button is selected as the Scanner events, and at least one scanner event recognizable application in the Send to this application list is selected.

Scanned image by using the button is missing.

Make sure desired application is assigned to the button.

Upgrading from Windows 98 to Windows 2000

If EPSON TWAIN is already installed, you need to uninstall it, upgrade the system to Windows 2000, and then reinstall it, as follows:

1. Uninstall EPSON TWAIN. See “Uninstalling EPSON TWAIN” on page 5-19.

2. After uninstalling EPSON TWAIN, turn off the PC and unplug the scanner, and then disconnect the scanner from the PC.
3. Turn on the PC and install Windows 2000.
4. Connect the scanner and install EPSON TWAIN following the instructions in your *Startup Guide*.

Uninstalling EPSON TWAIN

1. Connect the scanner to the PC. Plug in the scanner then turn on the PC.
2. Click Start and point to Settings, then select Control Panel.
3. Double-click the Scanners and Cameras icon.
4. Select your scanner from the installed devices list, then click Remove.
5. Click OK to close the dialog box.

During Windows 2000 installation

If a dialog box similar to the one shown below appears and asks for the updated files for your scanner while you are installing Windows 2000, click **Next** and continue installation. Do not click **Provide Files...**



Note:

If you insert the Scanner Software CD and click Provide Files..., an error message may appear. Replace the scanner software CD with the Windows 2000 CD-ROM and continue installing Windows 2000. After finishing the Windows 2000 installation, you need to uninstall your scanner from the Device Manager and reinstall EPSON TWAIN. Follow the instructions "Recovering from Scanner Software Installation Problems on Windows" on page 5-21 to uninstall EPSON TWAIN.

Recovering from Scanner Software Installation Problems on Windows

If you cancelled the plug-and play driver installation before the procedure was completed, or if you do not follow the installation instructions for EPSON TWAIN for Windows 2000, EPSON TWAIN will not be properly installed on your PC. To correct this problem, first uninstall your scanner in the Device Manager menu following the instructions below, and then reinstall EPSON TWAIN following the instructions in your *Startup Guide*.

Follow the steps below to check the installation.

1. Plug the interface cable into your scanner and the PC. Plug in your scanner and then turn on the PC.
2. Right-click the My Computer icon on your desktop, then click Properties.

For Windows 98 users:


Click the Device Manager tab.

For Windows 2000 users:


In the System Properties dialog box, select the Hardware tab and then click Device Manager.

3. If your EPSON TWAIN is correctly installed, EPSON Perfection640 should appear under Imaging Device when you click the plus (+) sign next to Imaging Device.

If EPSON Perfection640 appears under Other devices with a question (?) mark or under Imaging Device with an exclamation (!) mark, the EPSON TWAIN file is not installed correctly.

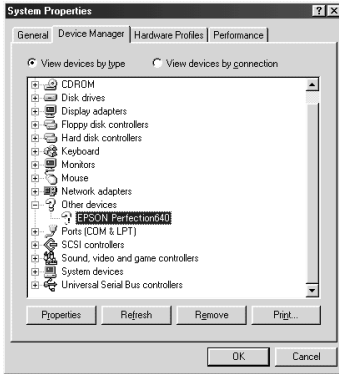

EPSON Perfection640 appearing under Other devices with a question (?) mark

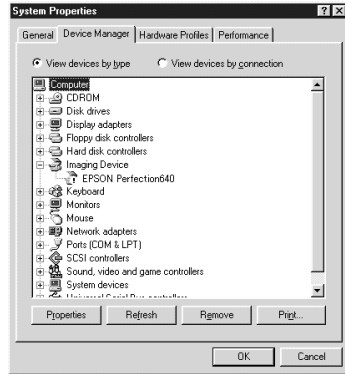

EPSON Perfection640 appearing under Imaging Device with an exclamation (!) mark

Note:

Screen shots of Windows 98 are used here for illustration.

For Windows 98 users

If EPSON Perfection640 appears under Other devices with a question (?) mark, see “If EPSON Perfection640 appears under Other devices with a question (?) mark” on page 5-23. If EPSON Perfection640 appears under Imaging Device with an exclamation (!) mark, see “If EPSON Perfection640 appears under Imaging Device with an exclamation (!) mark” on page 5-24.

If EPSON Perfection640 appears under Other devices with a question (?) mark

Note:

Make sure your scanner is plugged in and connected to your PC. If your scanner is unplugged or not connected to your PC, you cannot reinstall the driver properly.

1. Click ? EPSON Perfection640, then click Remove and OK.



2. Click Close to close the System Properties window.
3. Shut down your PC and unplug your scanner. Then turn on your PC and plug back your scanner.
4. The following dialog box appears. To install the driver again, follow the instructions in your *Startup Guide*.



If EPSON Perfection640 appears under Imaging Device with an exclamation (!) mark

Note:


Make sure your scanner is plugged in and connected to your PC. If your scanner is unplugged or not connected to your PC, you cannot reinstall the driver properly.

1. Click ! EPSON Perfection640, then click Remove and OK.



2. Click Close to close the System Properties window.
3. Shut down your PC and unplug your scanner. Then turn on your PC and plug back your scanner.
4. When a message appears to prompt you to insert the scanner software CD, insert the CD in the CD-ROM drive, and then click OK.

If the following dialog appears, click ▼, then browse and select or type in the CD-ROM drive letter, the EPSON folder, the folder of your preferred language, and the Win98 folder as the location as shown below. Finally, click OK.

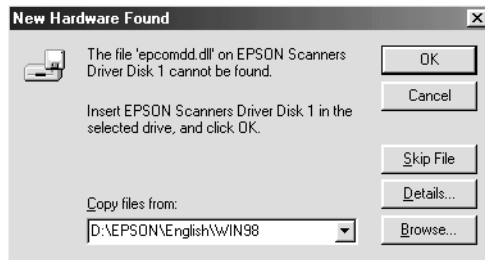


5. The Screen Calibration window appears. Follow the instructions described in your *Startup Guide*.

For Windows 2000 users


Note:

Make sure your scanner is plugged in and connected to your PC. If your scanner is unplugged or not connected to your PC, you cannot reinstall the driver properly.

1. If EPSON Perfection640 appears under Other devices with a question (?) mark or under Imaging devices with an exclamation (!) mark, right-click ? EPSON Perfection640 or ! EPSON Perfection640 and select Uninstall....

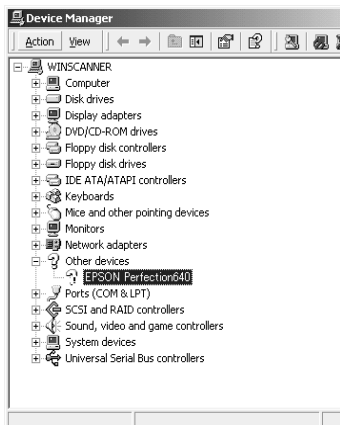

EPSON Perfection640 appearing under Other devices with a question (?) mark

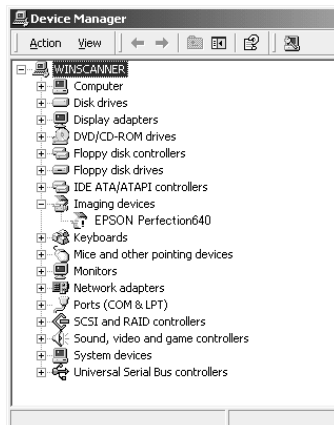

EPSON Perfection640 appearing under Imaging devices with an exclamation (!) mark

2. Follow the instructions on the screen.
3. Shut down your PC and unplug your scanner. Then turn on your PC and plug back your scanner.
4. Install EPSON TWAIN following the instructions in your *Startup Guide*.

Sizing up Your System

Your scanner is sufficient for most scanning needs, but if you are not satisfied with the quality of the images on your monitor or with the speed of image processing, read this section. While it does not contain specific recommendations, it describes various possibilities for improving your scanning system. For further information, seek advice from your dealer or an experienced scanner user.

RAM and hard disk size

Scanned images use much more memory than text files, so you may need more RAM (Random Access Memory) in your computer and a larger hard disk than you have used previously.

Accelerator boards

In addition to memory, processing speed is important because large files take longer to process than small ones. Therefore, you may want to add an accelerator board to your computer.

Video cards

A video card that is sufficient for text may not be good enough for displaying graphic images, especially in color. If all your scanned images look coarse on your monitor, you may want to upgrade your video card. You will need 24-bit color, also called true color or millions of colors, to make the highest quality image reproductions.

Monitors

The resolution of your monitor affects the quality of the image you see. Consider a high resolution monitor if you do precise color work, but also be sure you have a high quality video card.

File compression software

Many different programs are available to make image files smaller for storage or transmission. For example, some compression software can store a 3MB image file on a 1.44MB floppy disk, and compress images and restore them with no loss of data or quality; others compress images more, but the restored file is not exactly the same as the original. The difference between the original and restored files is, however, almost unnoticeable.

Appendix A

Technical Specifications

System Requirements	A-2
For PCs	A-2
For Macintosh computers	A-3
Scanning	A-4
Electrical	A-5
AC Adapter	A-5
Environmental	A-6
Safety Approvals	A-7
Scanner	A-7
AC adapter	A-7
CE marking	A-8
Scanner	A-8
AC adapter	A-8
USB Interface	A-9
Initialization Methods	A-10

System Requirements

Before installing the scanner software, make sure that your system meets the following requirements.

For PCs

System: Microsoft® Windows® 98 pre installed, Windows® 2000 pre installed or upgraded from Windows 98 (pre installed) model

Interface: The computer's USB port (TYPE A receptacle)

Display: VGA or higher resolution monitor 640 × 480 screen resolution (800 × 600 or higher recommended), and 256 color (65,000 color or higher recommended)

Note:

Color and tone reproduction are subject to the display capability of your computer system, including the video card, display monitor, and software. See the product documentation for details.

For Macintosh computers

- System: A USB-equipped Macintosh with Mac OS[®] 8.1 or later
- Interface: Macintosh USB
- Display: Color Monitor, 640 × 480 screen resolution (or higher recommended), and 256 color (32,000 color or higher recommended)

Note:

Color and tone reproduction are subject to the display capability of your computer system, including the video card, display monitor, and software. See the product documentation for details.

Scanning

Scanner type:	Flatbed, color
Photoelectric device:	Color CCD line sensor
Effective pixels:	5100 × 7020 pixels at 600 dpi, 100%
Document size:	216 × 297 mm (8.5 × 11.7 inches A4 or US letter size. The reading area can be specified from your software.)
Scanning resolution:	600 dpi (main scan) 2400 dpi with Micro Step (sub scan)
Output resolution:	72, 96, 150, 300, 600, 1200, 2400, and 9600 dpi
Color separation:	RGB color filters on CCD
Image data:	12 bits per pixel per color internal 8 bits per pixel per color external
Gamma correction:	1 type for user-defined
Interface:	USB (Type B Receptacle Connector)
Light source:	White cold cathode fluorescent lamp
Reliability:	30,000 cycles of carriage movements (main unit MCBF)
Dimensions:	Width: 269 mm (10.6 inches) Depth: 435 mm (17.1 inches) Height: 93 mm (3.7 inches)
Weight:	Approx. 2.8 kg (6.2 lb)

Electrical

Input voltage	DC 24 V
Rated current	0.8 A
Power consumption	Approx. 17 W

Note:

Check the label on the back of the scanner for voltage information.

AC Adapter

Model A110B:

Manufacturer	SEIKO EPSON CORPORATION
Input	AC 100 - 120 V, 50-60 Hz
Output	DC 24 V, 0.8 A
Temperature	5 to 35°C (41 to 95°F)
Dimensions	58 × 108 × 34 mm
Weight	Approx. 250 g (without AC plug)

Model A110E:

Manufacturer	SEIKO EPSON CORPORATION
Input	AC 220 - 240 V, 50-60 Hz
Output	DC 24 V, 0.8 A
Temperature	5 to 35°C (41 to 95°F)
Dimensions	58 × 108 × 34 mm
Weight	Approx. 250 g (without AC plug)

Environmental

Temperature:

Operation	5 to 35°C (41 to 95° F)
Storage	-25 to 60° C (-13 to 140° F)

Humidity:

Operation	10 to 80%, without condensation
Storage	10 to 85%, without condensation

Operating conditions: Ordinary office or home conditions.
Extreme dust should be avoided.
Operation under direct sunlight or near a strong light source should be avoided.

Note:

Specifications are subject to change without notice.

Safety Approvals

Scanner

120V model:

EMC	FCC part 15 Subpart B Class B CSA C108.8 Class B
-----	---

230V model:

EMC	EN 55022 (CISPR Pub 22) Class B AS/NZS 3548 Class B
-----	--

AC adapter

120V model:

Safety standards	UL 1950 CSA C22.2 No. 950
------------------	------------------------------

EMC	FCC part 15 Subpart B Class B CSA C108.8 Class B
-----	---

230V model:

Safety standards	EN 60950
------------------	----------

EMC	EN 55022 (CISPR Pub 22) Class B AS/NZS 3548 Class B
-----	--

CE marking

Scanner

230 V model:

EMC Directive 89/336/EEC

EN 55022 Class B

EN 50082-1

IEC 60801-2

IEC 60801-3

IEC 60801-4

AC adapter

230 V model:

Low Voltage Directive 73/23/ECC

EN 60950

EMC Directive 89/336/EEC

EN 55022 Class B

EN 61000-3-2

EN 61000-3-3

EN 50082-1

IEC 60801-2

IEC 60801-3

IEC 60801-4

USB Interface

Interface type: Universal Serial Bus Specification Revision 1.1

Configuration:

Element	Description
Device	Full Speed mode (12 Mbit/s) Class : Vendor-specific Vendor ID : 0x04B8 (Seiko Epson Corp.) Product ID : 0x010C
Configuration	Characteristics : Self-powered Remote wake up feature: Not supported Maximum power consumption from VBUS : 2mA (5V)
Interface	No alternate setting Number of endpoints used by this interface (excluding endpoint 0) : 2 Class : Vendor specific
Endpoint 1	Bulk IN transfer Maximum data transfer size : 64 byte
Endpoint 2	Bulk OUT transfer Maximum data transfer size: 64 byte
String Descriptor	Language ID : US English 1 : Manufacturer: "EPSON" 2 : Product: "Perfection640U"

Electrical standard: Full Speed mode(12Mbit/s) of Universal Serial Bus Specification Revision 1.1.

Connector type: One receptacle (Type B)

Initialization Methods

The scanner can be initialized (returned to a fixed set of conditions) in the following ways:

Hardware initialization	The scanner is plugged in. The USB cable is unplugged from the USB port on the scanner.
Software initialization	Software sends the ESC @ (initialize the scanner) command. The scanner receives a Bus Reset from the USB interface.

Appendix B

Contacting Customer Support

OverviewB-2

Overview

If your EPSON product is not operating properly and you cannot solve the problem using the troubleshooting information in your product documentation, contact customer support services for assistance.

Customer support will be able to help you much more quickly if you give them the following information.

- Product serial number
(The serial number label is usually on the back of the product.)
- Product model
- Product software version
(Click About, Version Info, or similar button in the product software.)
- Brand and model of your computer
- Your computer operating system name and version
- Names and versions of the software applications you normally use with your product

Glossary

additive primary colors

The colors of red, green and blue (RGB) - which give the perception of white when combined equally. These are the colors of the color system used by monitors and scanners.

bi-level data

Image data that is composed of 1 bit per pixel. A pixel is represented by a single bit of digital data that can be expressed as only 1 (light) or 0 (dark).

bit

Short for binary digit. The smallest unit of data in computer processing. A bit can represent one of two values: on, represented by a 1, or off, represented by a 0.

bit/pixel

The unit that indicates the number of bits allocated for a pixel. The larger the bit value, the more detail of a pixel will be reproduced.

brightness

A scanner function to lighten or darken the output image data.

byte

A unit of information consisting of eight bits. A byte can represent a control code or character.

carriage

A component of the scanner that contains the optical sensor and light source for scanning.

color correction

A method of adjusting the color image data for a particular type of device so that the reproduction results are as close as possible to the original colors.

color separation

A process of converting full-color images into a limited number of primary colors. Additive primary colors (red, green, and blue) are used by the scanner, and the subtractive primary colors (cyan, magenta, and yellow) plus black are used for printing press separation.

ColorSync

Color management system for Macintosh that is designed to help you get WYSIWYG (what you see is what you get) color output. This software displays colors on your screen as they are on the scanned documents, or prints colors as you see them on your screen.

default

A set of values used when no other selections have been made. These are sometimes called factory defaults if the original values have not been changed since the scanner left the factory.

document

The item, such as a sheet of paper or a book, that is placed on the document table for the scanner to read.

dpi

Short for dots per inch. A unit of measurement for resolution. The higher the value, the higher the resolution.

dropout color

A color the scanner does not recognize and ignores. You can select and deselect dropout colors in the scanner software.

ESC/I

Abbreviation for EPSON Standard Code for Image scanners. A system of commands that allows you to control image scanners from your software.

ESC/P

Abbreviation for EPSON Standard Code for Printers. A system of commands that allows you to control printers from your software.

exposure

A scanner function that lightens or darkens the scanned image data.

gamma

Gamma is a value that expresses the relationship between the input and output of a device. By adjusting the gamma, the brightness of the mid-tones of an image can be changed without affecting the shadows and highlights.

grayscale

Images represented with various shades of gray in addition to black and white.

halftoning

A method of reproducing images with patterns of dots to improve the quality of the output.

home position

The position at the rear (nearest the cover hinge position) of the scanner where the carriage rests before a scanning operation.

ICM

Image Color Matching. Windows color management system designed to help you get WYSIWYG (what you see is what you get) color output. This software displays colors on your screen as they exist on the scanned documents, or prints colors as you see them on your screen.

imagesetter

A device that uses computer files to produce high-resolution text and graphics output on film or paper. These are usually found in service bureaus and printing companies.

impact dot printer

A printer that transfers ink onto the paper by striking an ink ribbon with a number of small pins.

ink jet printer

A printer that transfers ink onto the paper by spraying the ink through a number of small nozzles.

interface

A piece of hardware, a method, or a standard used for connection between or among computer devices.

line sequence

A type of color scanning that separates primary colors line by line. The carriage makes only one pass.

marquee

A moveable and adjustable frame that marks the area of an image that will be previewed or scanned.

moiré

A moiré is a cross-hatch pattern that appears on scanned images when scanning printed material. It is a result of interference that occurs due to the difference between the pitches of the scanning and the halftone screens.

monochrome

Black and white images, or images represented only by the intensity of luminosity.

OCR***Optical Character Recognition.***

The technology that allows computers to "read" text from physical objects. OCR requires a graphical representation of text to interpret, which usually comes from a scanned image.

page sequence

The type of color scanning in which the entire image is scanned once for each separate color.

pixel

Short for picture element. Each image is composed of a number of pixels. Pixels are also counted in units of dots.

plain bi-level

Bi-level image data without the halftoning process.

port

An interface channel through which data is transmitted between devices.

primary colors

Basic colors. See *additive primary colors* and *subtractive primary colors*.

resolution

Indication of how finely an image is resolved into pixels. Can be measured in dots per inch (dpi), pixels per inch (ppi), or samples per inch (spi).

scan

An operation performed by the sensor and the carriage. The image is divided into pixels by scanning.

scanning area

The physical size of the image that can be scanned by the scanner.

sRGB

A standard color space used as the default color space within the Windows 98 color management system (ICM 2.0).

subtractive primary colors

The colors of cyan, magenta, and yellow (CMY) which produce black when mixed in certain amounts. In printing, black is often added to give more definition as mixing of actual inks cannot produce pure black.

threshold

A reference point that is used to determine whether data will be processed as "on" or "off". In the case of color image data, "on" means that a certain color will appear in a pixel or dot, and "off" means that color will not appear there.

tone correction

A method of adjusting the tone curve so that the reproduction results on different types of output devices have gradations similar to the original image.

tone curve

The graph that shows the contrast ratio between the input (original image) and output (image data) in image processing.

unsharp mask

Originally a photographic process in which a sharply focussed and a slightly out-of-focus image are combined to produce a sharper image. This process is simulated by software to produce the same effect.

USB

A Universal Serial Bus. A hardware interface for connecting low-speed peripherals such as a keyboard, mouse, scanner, or printer to the computer.

USB hub

A device that normally provides four TYPE A sockets to increase the number of USB ports on a PC.